






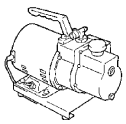
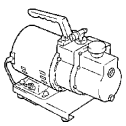
HEATER & AIR CONDITIONER

PREPARATION



022ER–01



SST

	07110–58060	Air Conditioner Service Tool Set	REFRIGERANT CONTROL UNIT ASSY HEATER BLOWER ASSY FRONT HEATER RADIATOR ASSY COOLER COMPRESSOR ASSY(15B–FTE) COOLER COMPRESSOR ASSY(S05C–B, S05C–TA, S05C–TB) COOLER COMPRESSOR ASSY(W04D–J)
	(07117–58060)	Refrigerant Drain Service Valve	REFRIGERANT CONTROL UNIT ASSY HEATER BLOWER ASSY FRONT HEATER RADIATOR ASSY COOLER COMPRESSOR ASSY(15B–FTE) COOLER COMPRESSOR ASSY(S05C–B, S05C–TA, S05C–TB) COOLER COMPRESSOR ASSY(W04D–J)
	(07117–58070)	T–Joint	REFRIGERANT CONTROL UNIT ASSY HEATER BLOWER ASSY FRONT HEATER RADIATOR ASSY COOLER COMPRESSOR ASSY(15B–FTE) COOLER COMPRESSOR ASSY(S05C–B, S05C–TA, S05C–TB) COOLER COMPRESSOR ASSY(W04D–J)
	(07117–58080)	Quick Disconnect Adapter	REFRIGERANT CONTROL UNIT ASSY HEATER BLOWER ASSY FRONT HEATER RADIATOR ASSY COOLER COMPRESSOR ASSY(15B–FTE) COOLER COMPRESSOR ASSY(S05C–B, S05C–TA, S05C–TB) COOLER COMPRESSOR ASSY(W04D–J)
	(07117–58090)	Quick Disconnect Adapter	REFRIGERANT CONTROL UNIT ASSY HEATER BLOWER ASSY FRONT HEATER RADIATOR ASSY COOLER COMPRESSOR ASSY(15B–FTE) COOLER COMPRESSOR ASSY(S05C–B, S05C–TA, S05C–TB) COOLER COMPRESSOR ASSY(W04D–J)

	(07117–78050)	Refrigerant Charging Gauge	REFRIGERANT CONTROL UNIT ASSY HEATER BLOWER ASSY FRONT HEATER RADIATOR ASSY COOLER COMPRESSOR ASSY(15B–FTE) COOLER COMPRESSOR ASSY(S05C–B, S05C–TA, S05C–TB) COOLER COMPRESSOR ASSY(W04D–J)
	(07117–88060)	Refrigerant Charging Hose	REFRIGERANT CONTROL UNIT ASSY HEATER BLOWER ASSY FRONT HEATER RADIATOR ASSY COOLER COMPRESSOR ASSY(15B–FTE) COOLER COMPRESSOR ASSY(S05C–B, S05C–TA, S05C–TB) COOLER COMPRESSOR ASSY(W04D–J)
	(07117–88070)	Refrigerant Charging Hose	REFRIGERANT CONTROL UNIT ASSY HEATER BLOWER ASSY FRONT HEATER RADIATOR ASSY COOLER COMPRESSOR ASSY(15B–FTE) COOLER COMPRESSOR ASSY(S05C–B, S05C–TA, S05C–TB) COOLER COMPRESSOR ASSY(W04D–J)
	(07117–88080)	Refrigerant Charging Hose	REFRIGERANT CONTROL UNIT ASSY HEATER BLOWER ASSY FRONT HEATER RADIATOR ASSY COOLER COMPRESSOR ASSY(15B–FTE) COOLER COMPRESSOR ASSY(S05C–B, S05C–TA, S05C–TB) COOLER COMPRESSOR ASSY(W04D–J)
	07117–48130	Vacuum Pump (220 V)	CONTROL UNIT ASSY HEATER BLOWER ASSY FRONT
	07117–48140	Vacuum Pump (240 V)	CONTROL UNIT ASSY HEATER BLOWER ASSY FRONT

Recomended Tools

	(09043–20050)	Socket Hexagon Wrench 5	CONTROL UNIT ASSY
	09082–00040	TOYOTA Electrical Tester	AIR CONDITIONING SYSTEM

	(09083–00150)	Test Lead Set	AIR CONDITIONING SYSTEM
	(09083–00150)	Test Lead Set	AIR CONDITIONING SYSTEM
	95416–00140	Gas Leak Detector (Halogen Leak Detector) (DENSO Part No.)	REFRIGERANT HEATER RADIATOR ASSY COOLER COMPRESSOR ASSY(15B–FTE) COOLER COMPRESSOR ASSY(S05C–B, S05C–TA, S05C–TB) COOLER COMPRESSOR ASSY(W04D–J)

Equipment

Belt tension gauge	
Dial indicator	
Ohmmeter	
Torque wrench	

Lubricant

Item	Capacity	Classification
Compressor oil	–	ND–OIL 8 or equivalent