
050X3–10

TERMINALS OF ECU

1. CHECK AIRBAG ECU ASSY

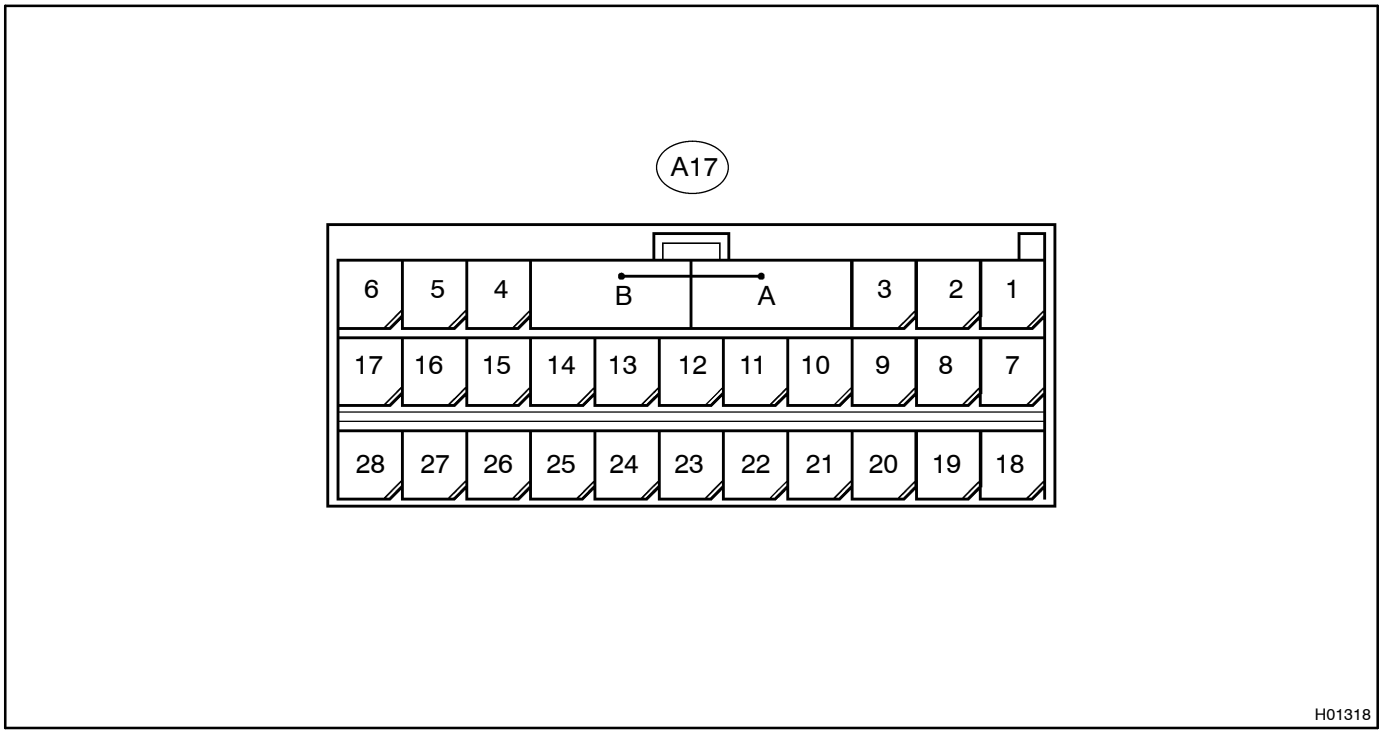

Terminal No.	Symbols	Terminal Name
A	–	Electrical Connector Check Mechanism
B	–	Electrical Connector Check Mechanism
A17–1	ACC	(AIRBAG Fuse)
A17–3	IG2	Power Source (ECU–IG2 Fuse)
A17–10	PR+	Squib (Seat Belt Pretensioner RH)
A17–11	PR–	Squib (Seat Belt Pretensioner RH)
A17–12	SIL	Diagnosis
A17–13	D–	Squib (Driver)
A17–14	D+	Squib (Driver)
A17–18	LA	SRS Warning Light
A17–20	TC	Diagnosis
A17–23	VFR	Airbag Sensor Assy No. 2
A17–25	EFR	Airbag Sensor Assy No. 2
A17–26	E2	Ground
A17–27	E1	Ground

If the result is not as specified, the ECU may have a malfunction.