
054EL–02

TERMINALS OF ECU

1. CHECK RADIO RECEIVER ASSY

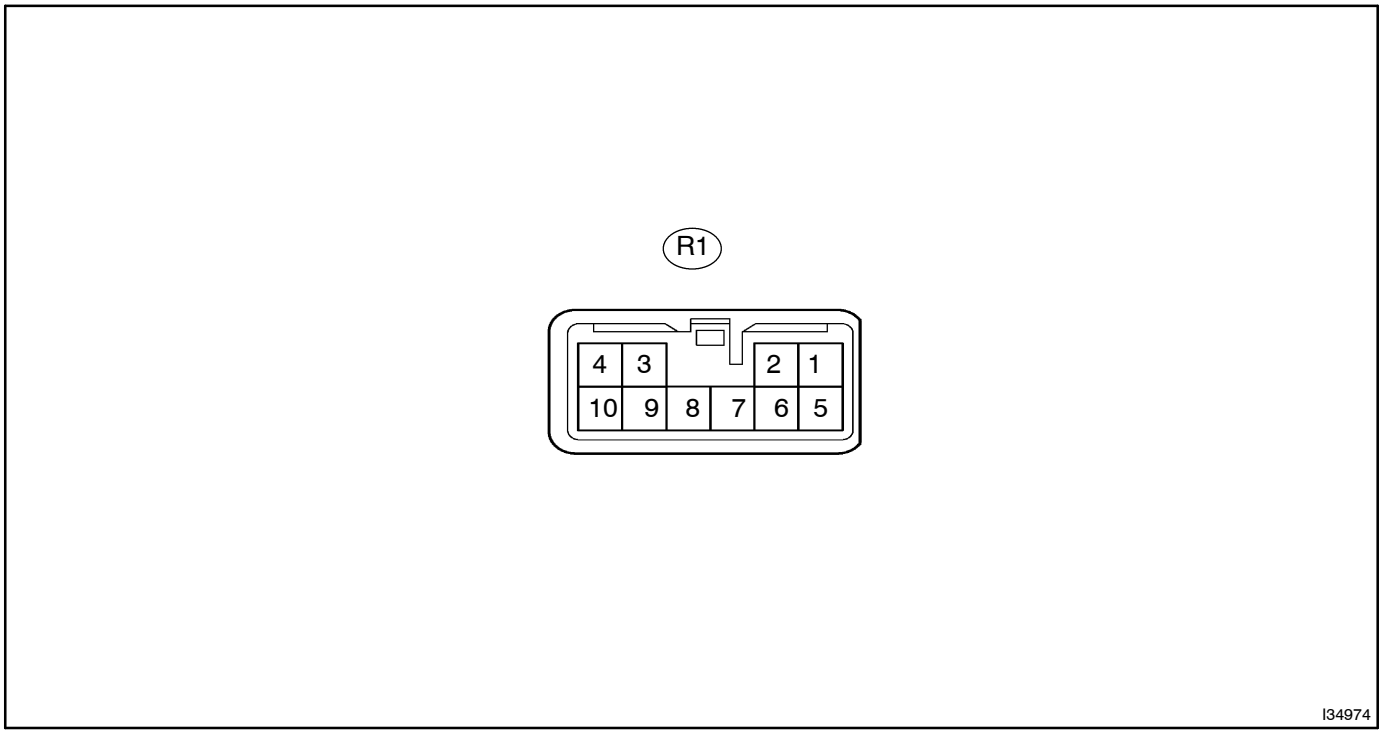

Symbols (Terminal No.)	Wiring Color	Condition	Specified Condition
FR+ (R1–1) ⇔ GND (R1–7)	LG ⇔ W–B	Radio switch is ON	A waveform synchronized with sounds is output
FL+ (R1–2) ⇔ GND (R1–7)	P ⇔ W–B	Radio switch is ON	A waveform synchronized with sounds is output
ACC (R1–3) ⇔ GND (R1–7)	GR ⇔ W–B	Ignition switch ACC or ON	20 – 28 V
+B (R1–4) ⇔ GND (R1–7)	L–Y ⇔ W–B	Constant	20 – 28 V
FR– (R1–5) ⇔ GND (R1–7)	L ⇔ W–B	Radio switch is ON	A waveform synchronized with sounds is output
FL– (R1–6) ⇔ GND (R1–7)	V ⇔ W–B	Radio switch is ON	A waveform synchronized with sounds is output
GND (R1–7) ⇔ Body ground	W–B ⇔ –	Constant	Continuity