

PRESSING POWER SWITCH DOES NOT START SYSTEM

WIRING DIAGRAM

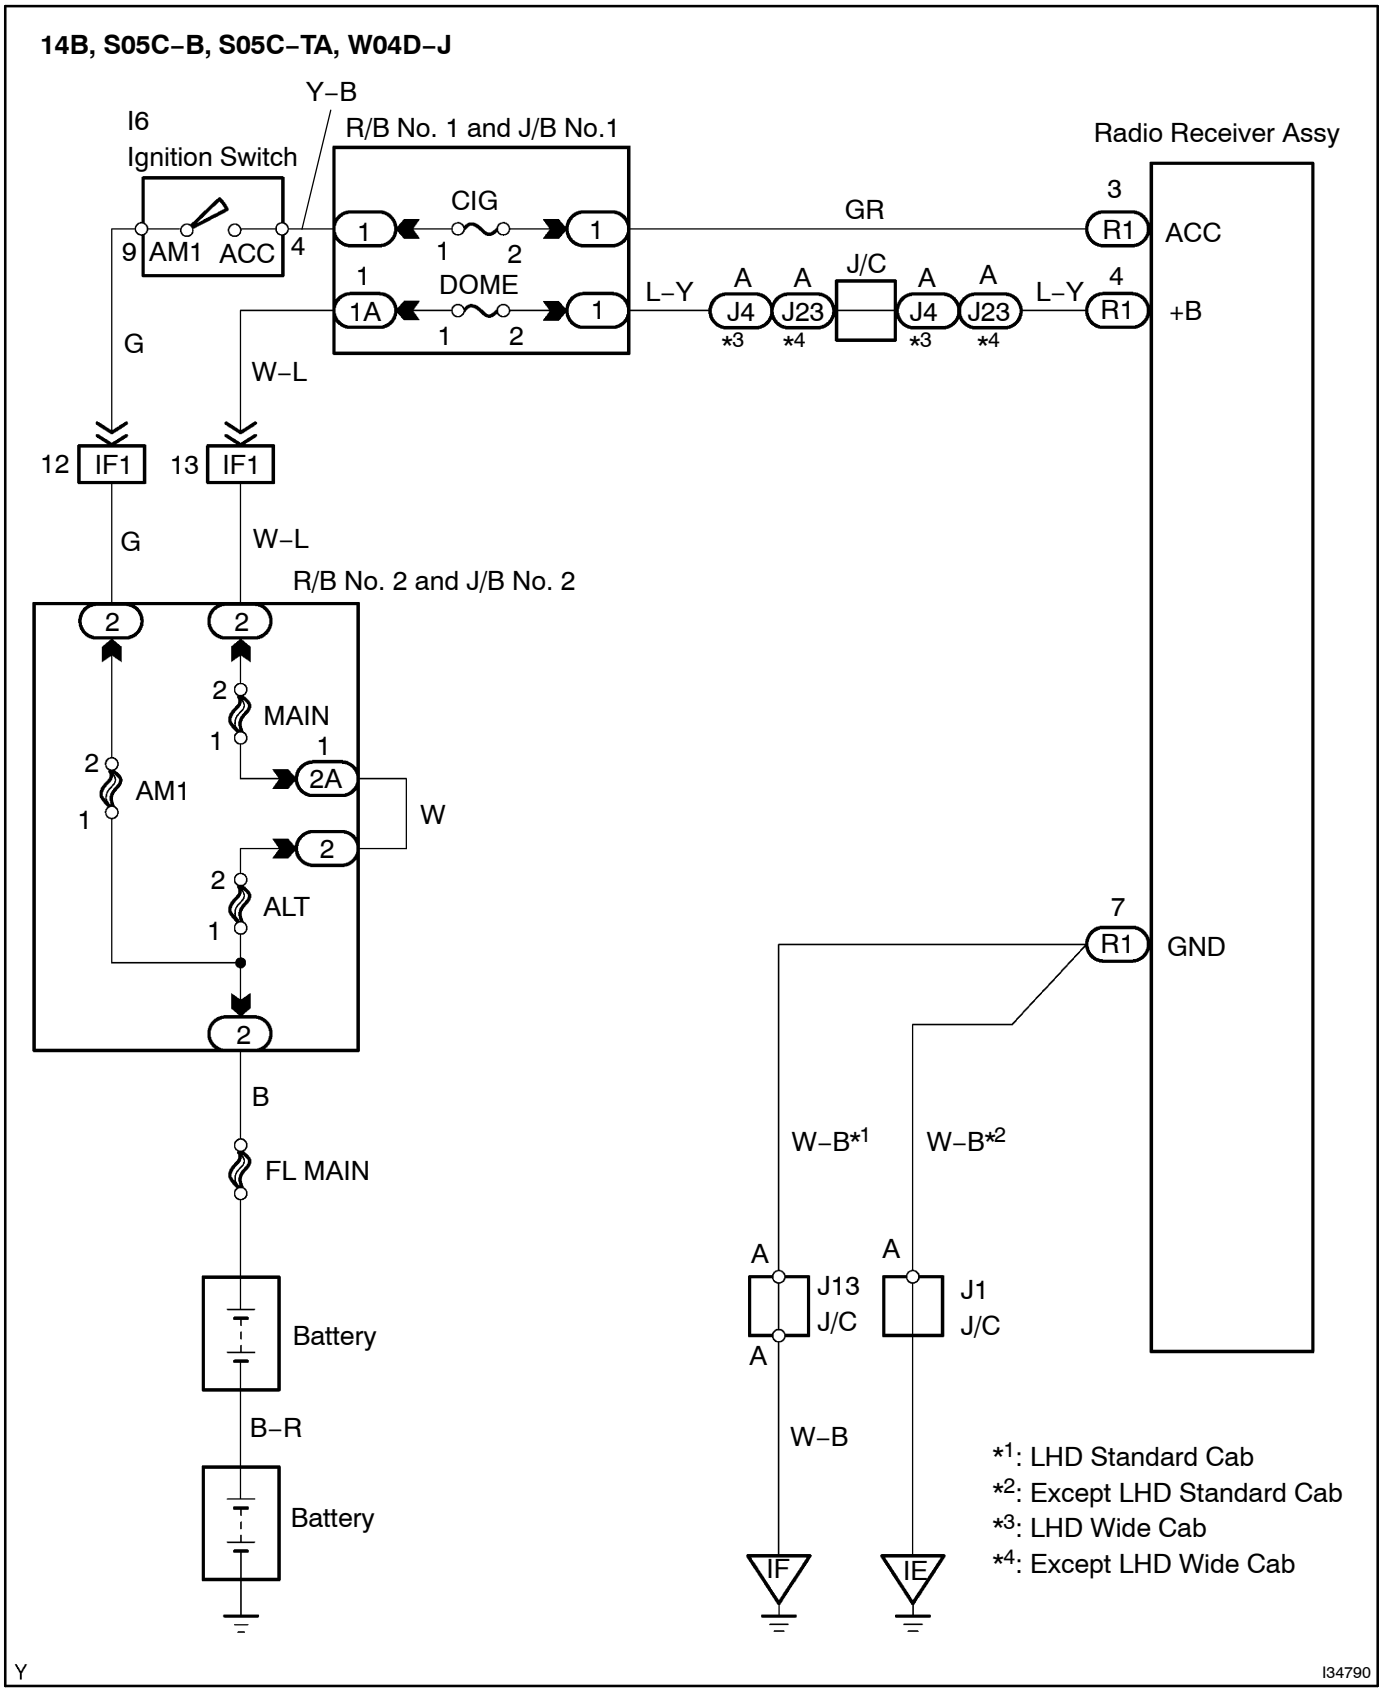


15B–FTE, S05C–TB

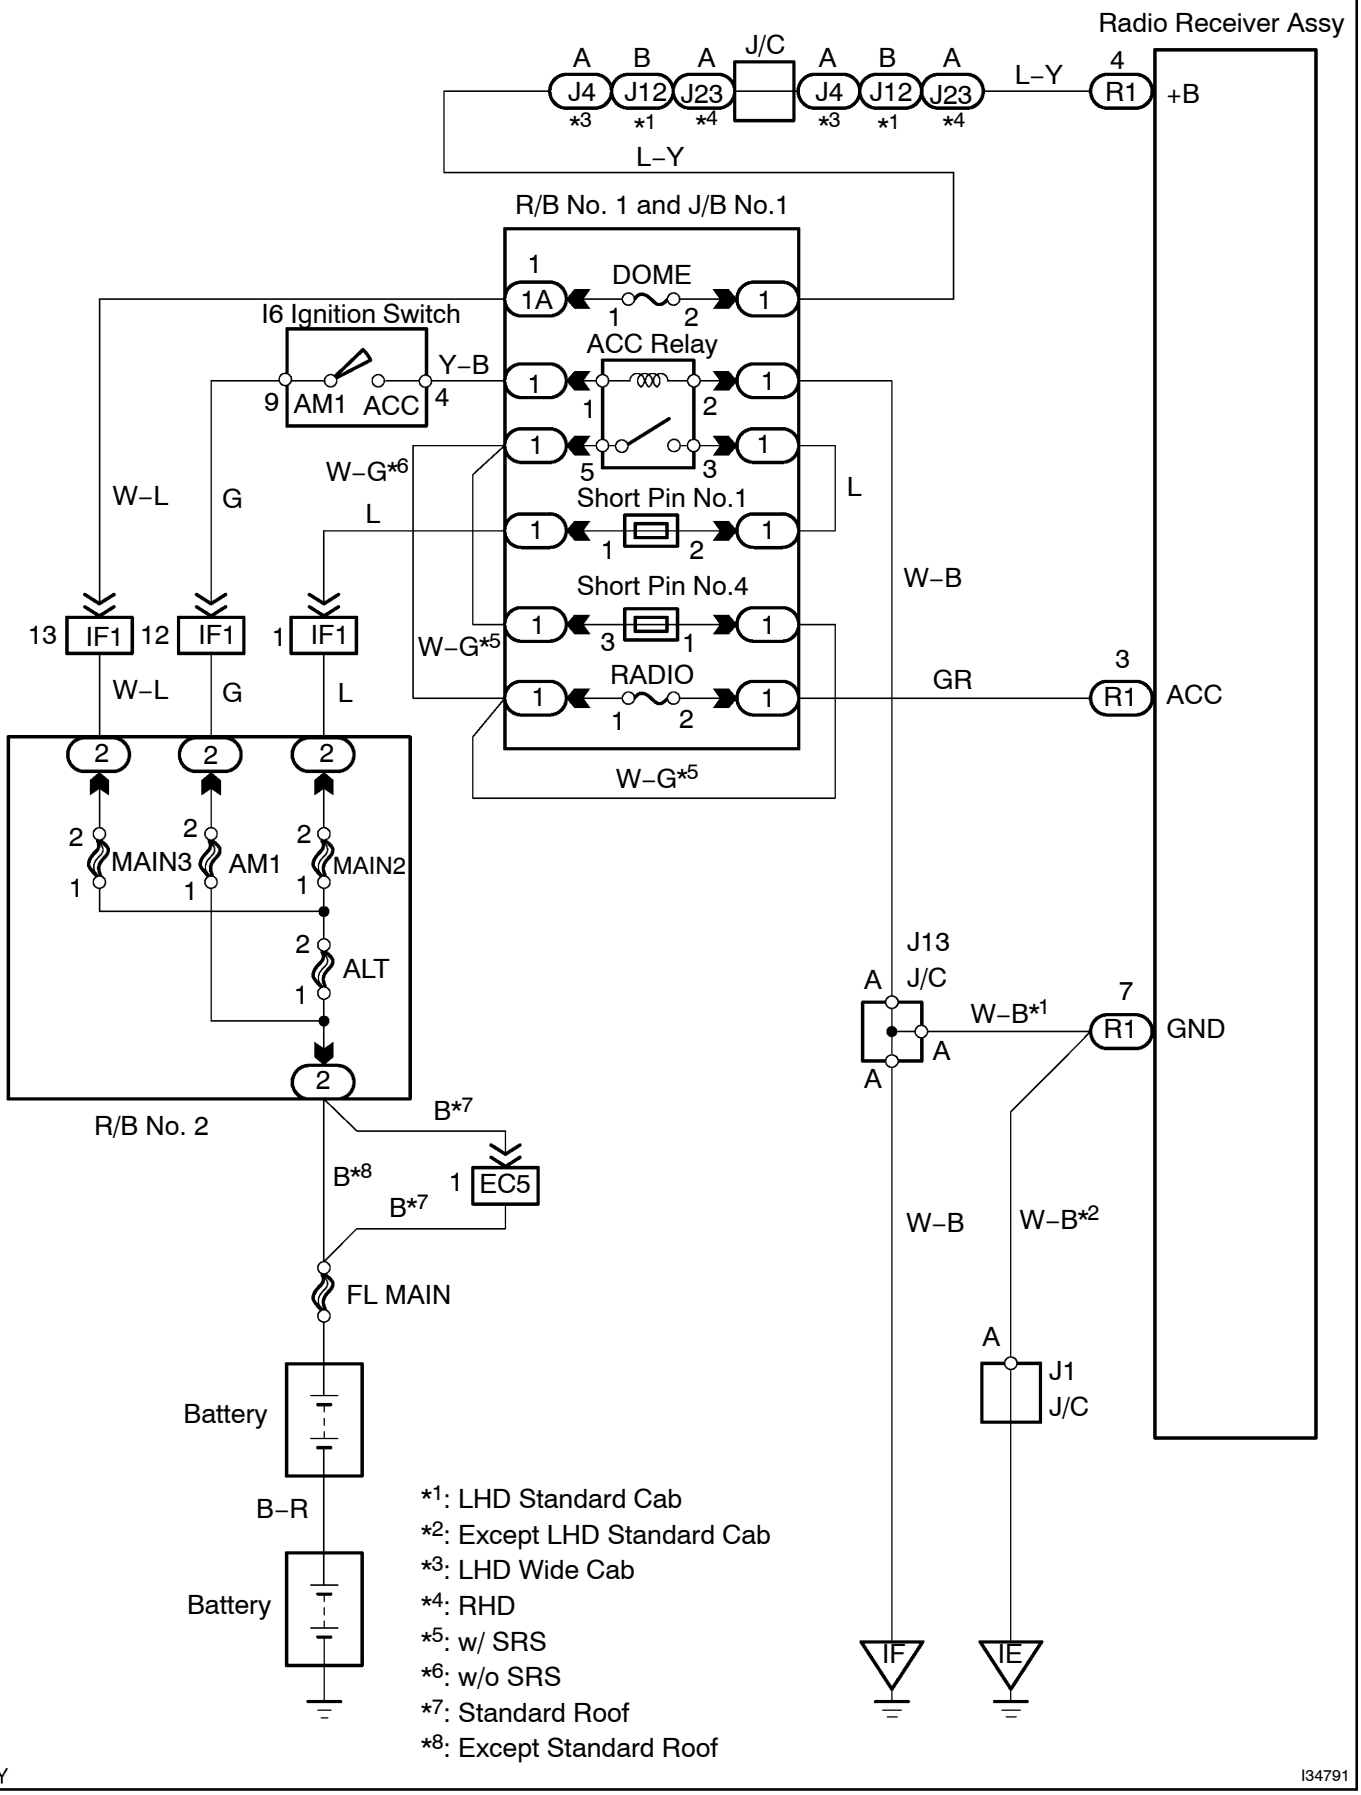

INSPECTION PROCEDURE

1	CHECK RADIO RECEIVER ASSY (+B, ACC, GND)

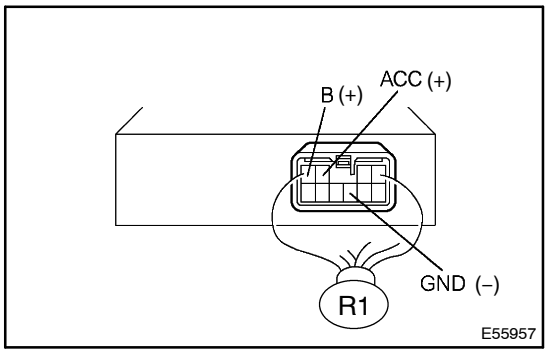

(a) Remove the radio receiver with the connectors still connected.

(b) Check the voltage between the terminals of the R1 connector.

Standard:

Symbols (Terminal No.)	Condition	Specified Condition
+B (R1–4) ⇔ GND (R1–7)	Constant	20 – 28 V
ACC (R1–3) ⇔ GND (R1–7)	Ignition switch ACC or ON	20 – 28 V

(c) Check the continuity between the terminal of the R1 connector and body ground.

Standard:

Symbols (Terminal No.)	Condition	Specified Condition
GND (R1–7) ⇔ Body ground	Constant	Continuity

NG → **REPAIR OR REPLACE HARNESS AND CONNECTOR**

OK

REPAIR OR REPLACE RADIO RECEIVER ASSY