TAPE IS TANGLED DUE TO INCORRECT TAPE SPEED OR AUTO–REVERSE MALFUNCTION

INSPECTION PROCEDURE

1	CHECK FOR ANY FOREIGN OBJECT

(a) Check that no foreign object and defect are detected in the cassette tape player of the radio receiver.
Standard: No foreign object and defect are detected.

NG → **REMOVE FOREIGN OBJECT**

OK


2	REPLACE CASSETTE TAPE WITH ANOTHER AND RECHECK (90MIN. OR LESS)

(a) Replace the faulty cassette tape with the normal one (90 min. or less) to see if the same trouble occurs again.
Standard: Malfunction disappear.

OK → **CASSETTE TAPE FAULTY**

NG

3	CLEAN HEAD AND CHECK OPERATION

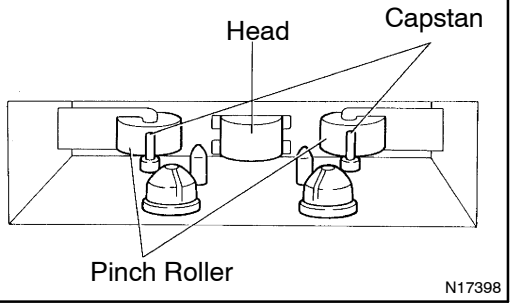

(a) Raise the cassette door with your finger. Next, using a pencil or similar object, push in the guide.
(b) Using a cleaning pen or cotton applicator soaked in cleaner, clean the head surface, pinch rollers and capstans.
(c) Check that the same trouble occurs again.
Standard: Malfunction disappears.

OK → **HEAD DIRTY**

NG

REPAIR OR REPLACE RADIO RECEIVER ASSY