
CD SOUND SKIPS

INSPECTION PROCEDURE

1	CD CLEANING

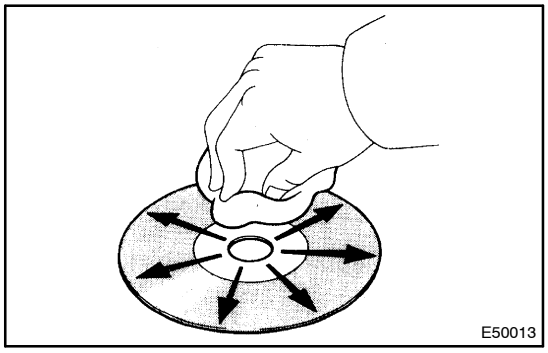

(a) Clean the CD by wiping the surface from the center to outside in the radial directions with a soft cloth.

NOTICE:

Do not use a conventional record cleaner or anti–static preservative.

Standard: Malfunction disappears.

OK → **CD DIRTY**

NG

2	REPLACE CD WITH ANOTHER AND RECHECK

(a) Replace the faulty CD with the normal one in order to see if the same trouble occurs again.
Standard: Malfunction disappears.

OK → **CD FAULTY**

NG

3	CHECK WHEN THIS HAPPENS

(a) Check that in what condition the sound skipping occurs.
Standard: Driving on the bumpy road.

OK → **Go to step 5**

NG

4	COMPARE IT WITH ANOTHER CAR OF SAME MODEL

(a) Compare with the vehicle of the same type which does not have a trouble in order to see if there is any difference in the condition of trouble occurrence.
Standard: No difference is found.

OK → **SETTING**

NG

5	CHECK DISC PLAYER ASSY INSTALLING CONDITION

(a) Check the installation condition of the disc player.
Standard: Installed properly.

NG → **INSTALL DISC PLAYER ASSY PROPERLY**

OK

6	DID TEMPERATURE IN CABIN CHANGE RAPIDLY?

(a) Check whether or not the rapid temperature change has occurred in the cabin.
Standard: The rapid temperature change has occurred.

Reference:
The rapid temperature change creates condensation inside the disc player, which may disable CD from being played.

OK → **CONDENSATION DUE TO TEMPERATURE CHANGE (LEAVE IT AS IT IS FOR A WHILE BEFORE USING)**

NG

REPAIR OR REPLACE DISC PLAYER ASSY