

100E2–01

# ADJUSTMENT

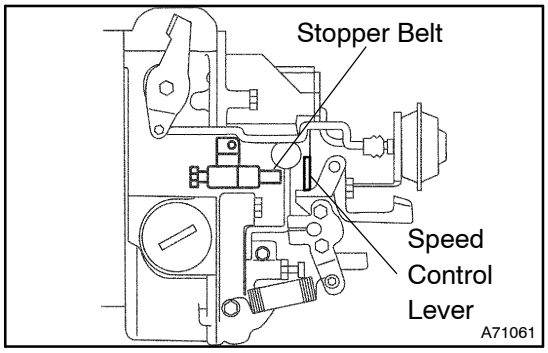


**1. ADJUST OUTLINE**

(a) When the accelerator pedal is depressed fully, the governor speed control lever shall come into contact with the stopper bolt.

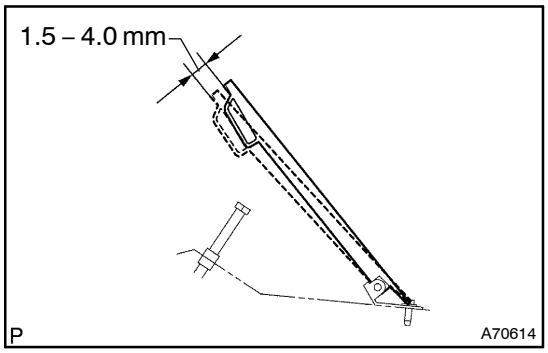



**2. ADJUST ACCELERATOR PEDAL PLAY**

(a) Adjust the pedal play.

**Pedal play: 1.5 – 4.0 mm (0.06 – 0.16 in.)**


**NOTICE:**

**When the pedal is returned the exhaust brake switch shall be pushed in.**

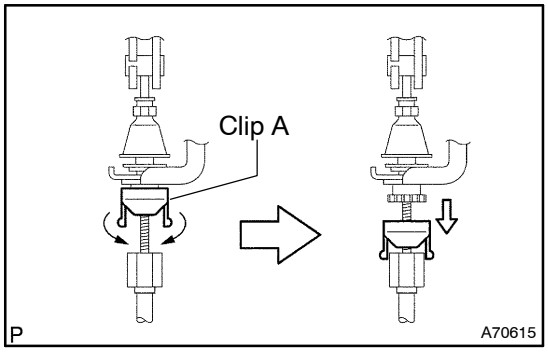


**3. ADJUST ACCELERATOR CONTROL CABLE**


(a) Grasp the lock of clip A of the accelerator cable on the side of the accelerator link assembly in direction (1) and lower clip A.

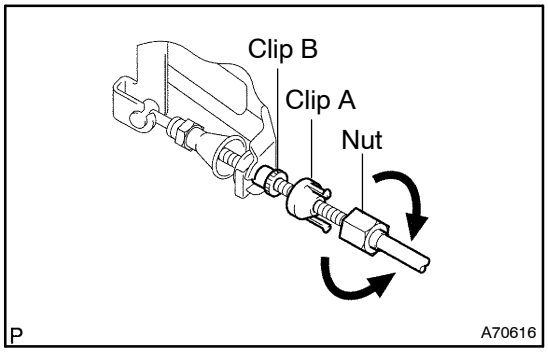


(b) Turn the nut of the cable and adjust the play of the accelerator pedal.

(1) Turn to right (the wire becomes loose) when there is no play.

(2) Turn to the left (the wire is tightened) when the play is large.

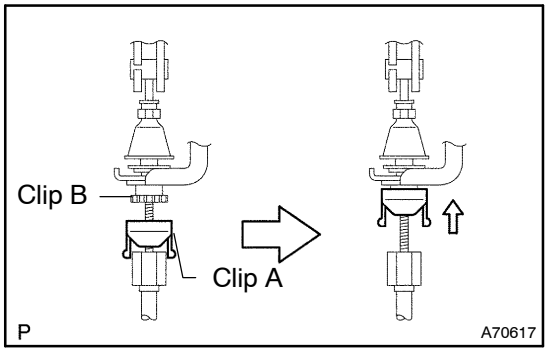


(c) After adjustment of the pedal play, fix clip A to clip B.