


INJECTION PUMP ASSY (14B)

COMPONENTS


110PT–01

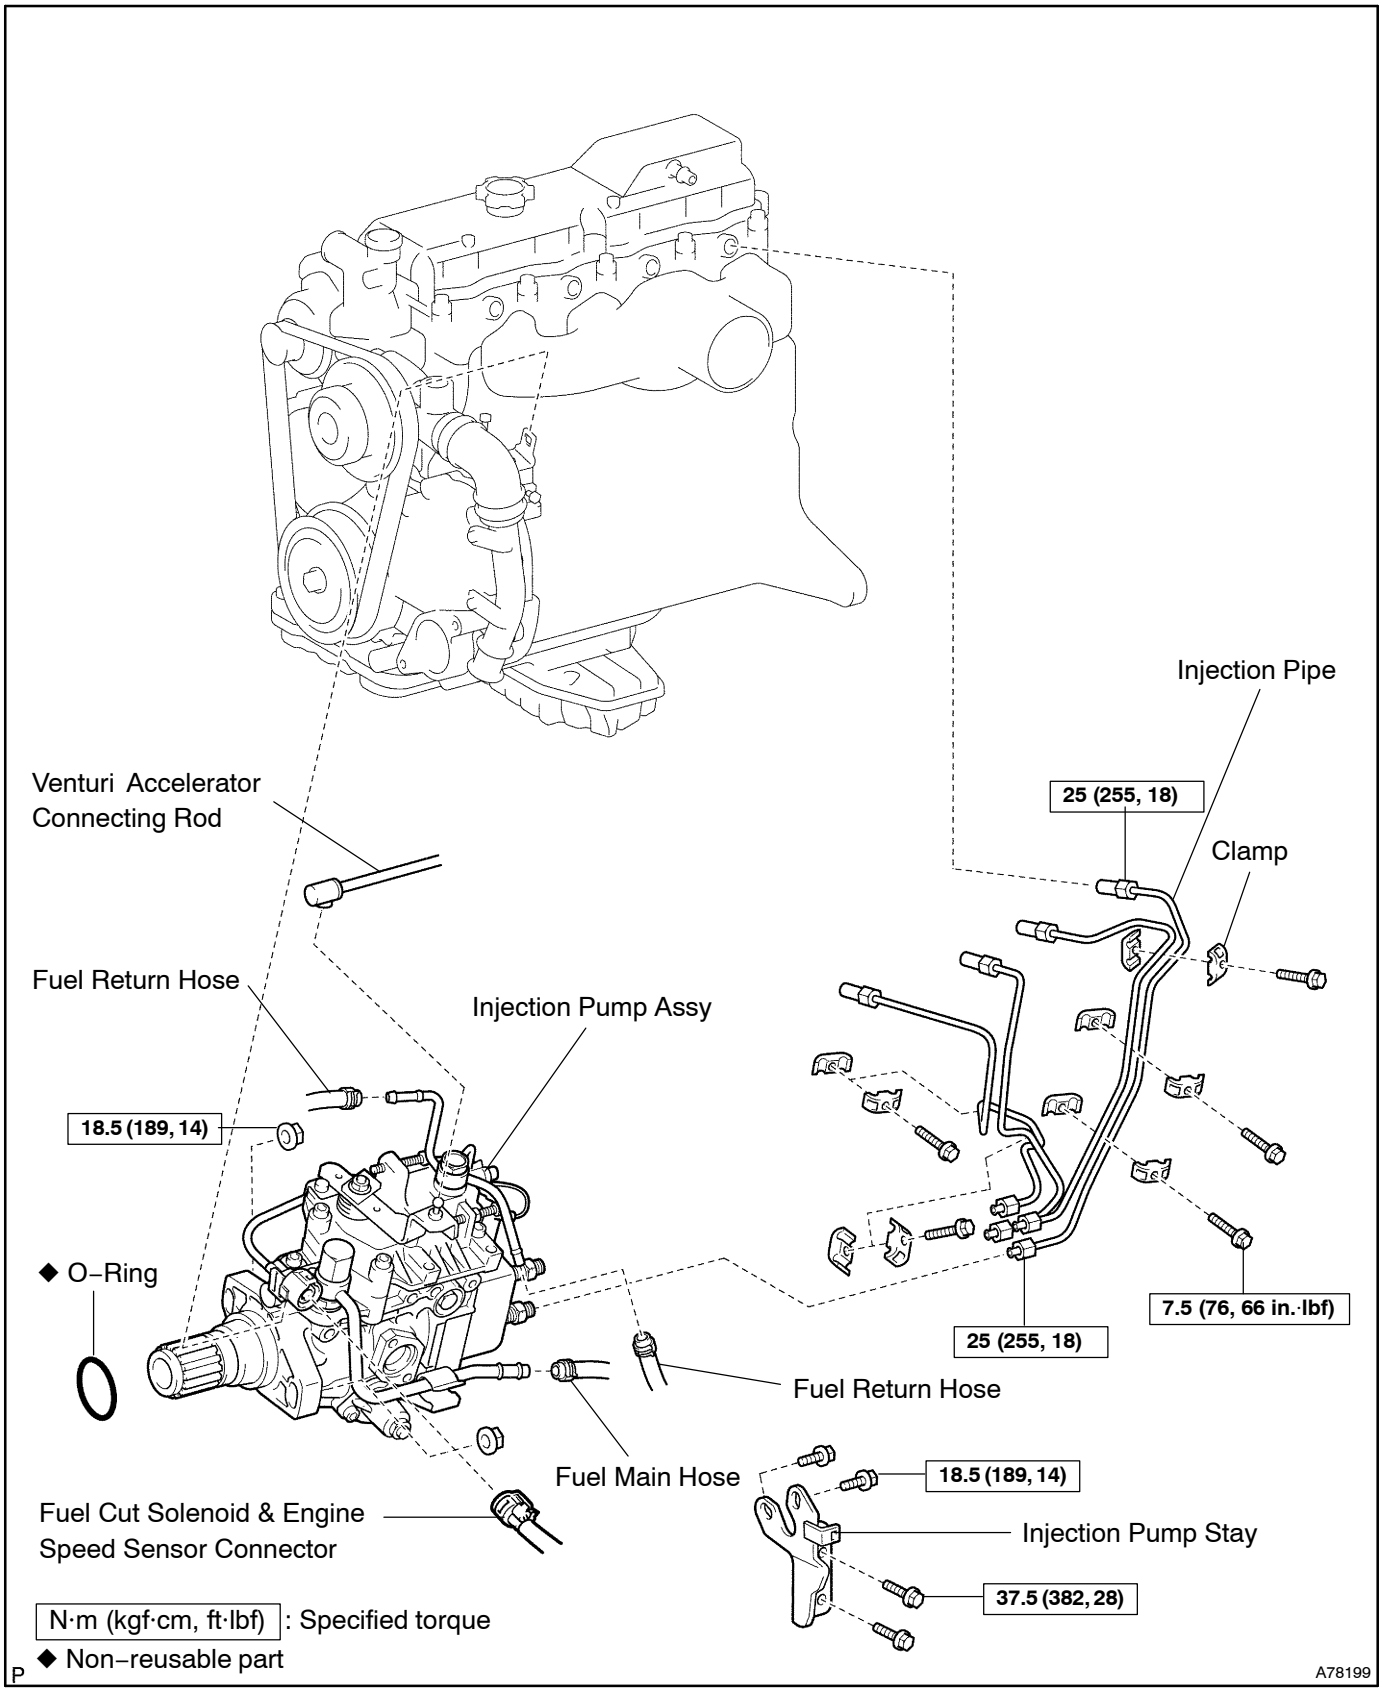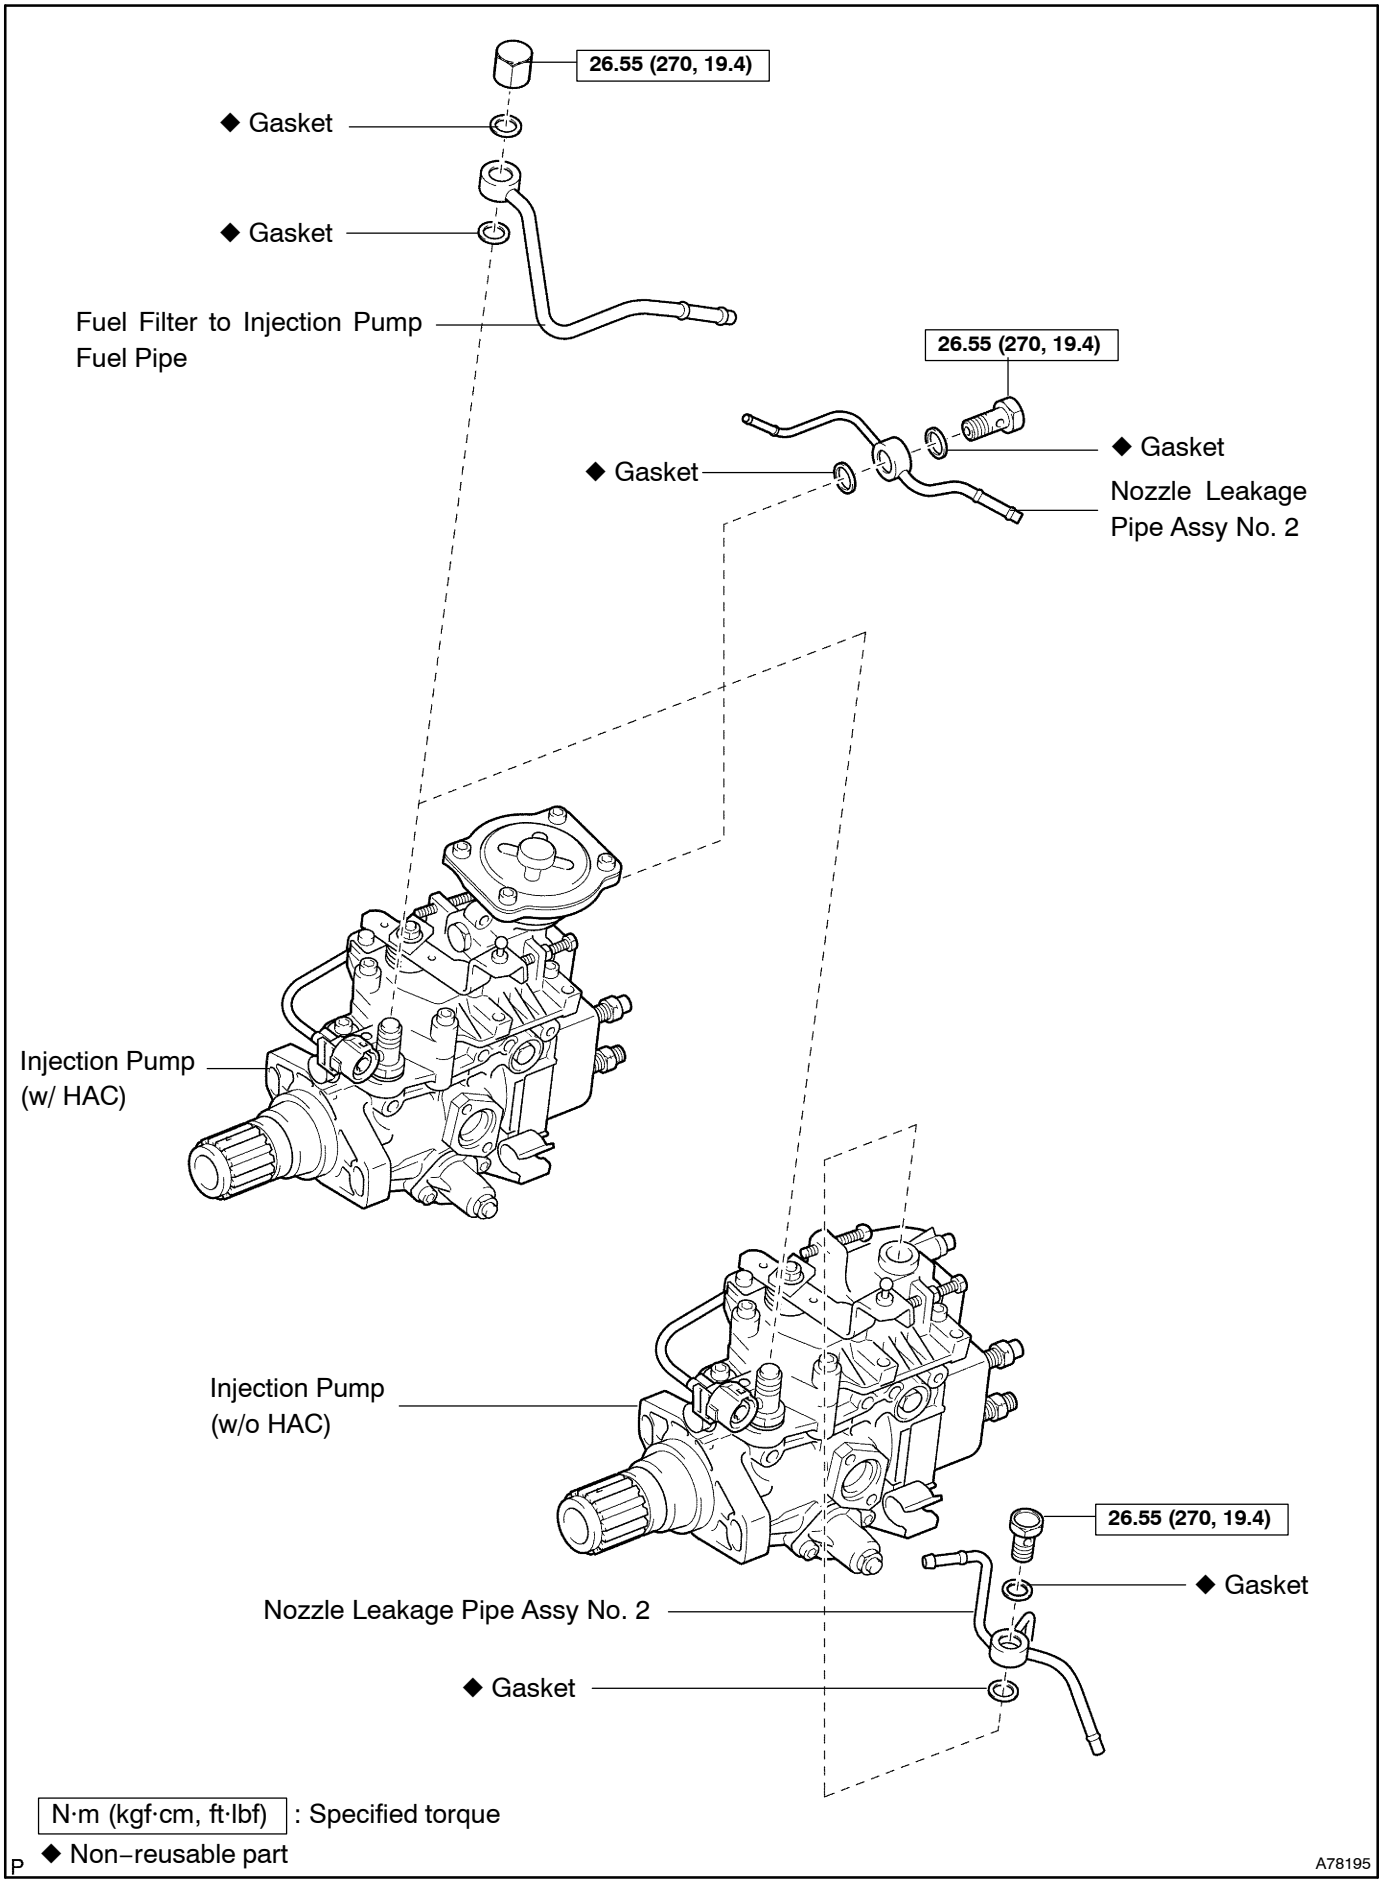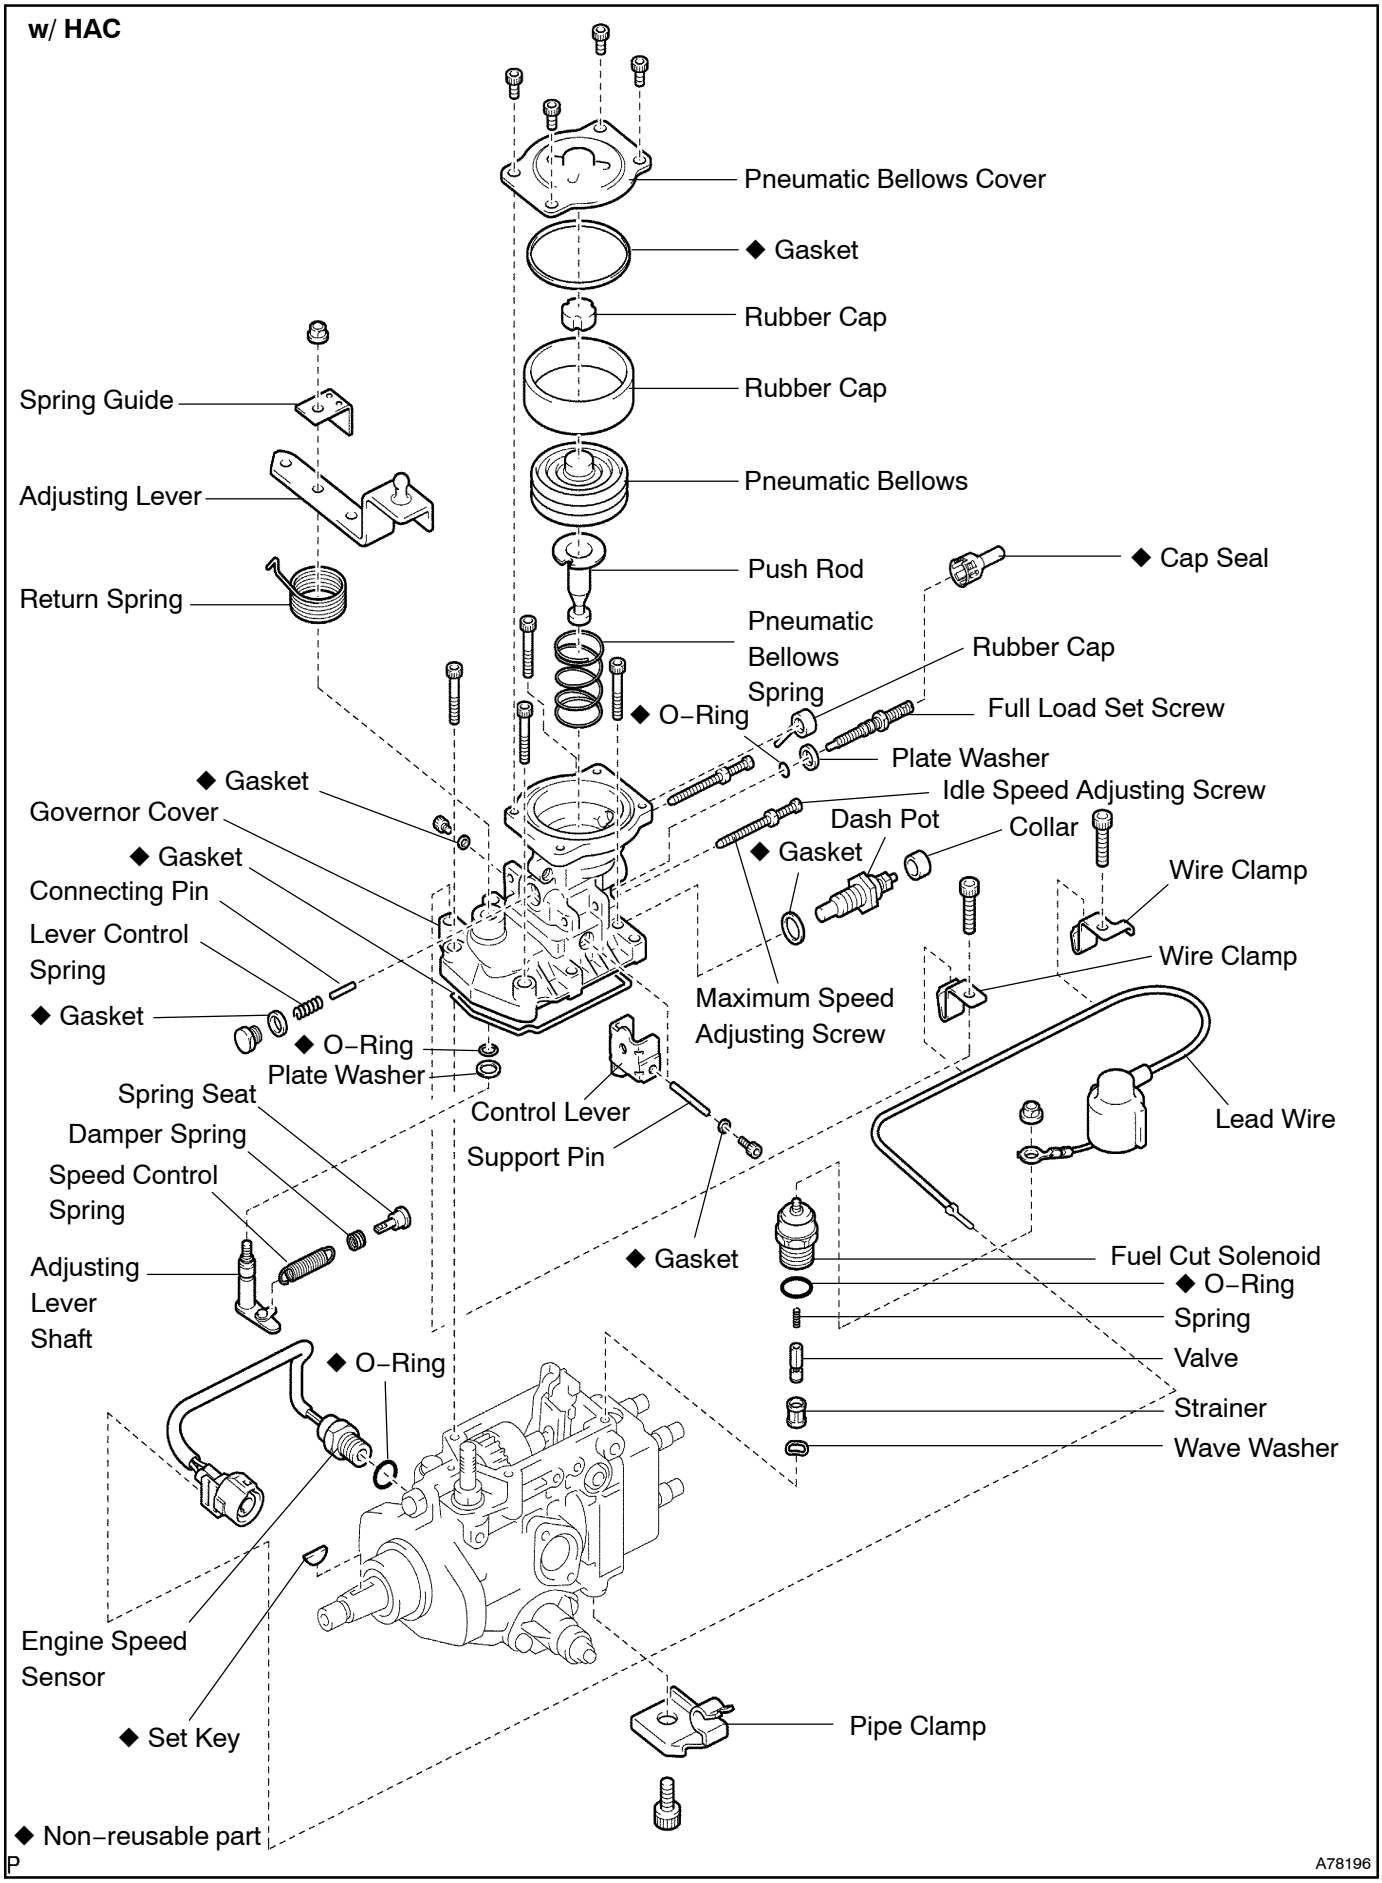


26.55 (270, 19.4)
◆ Gasket
◆ Gasket
Fuel Filter to Injection Pump Fuel Pipe
26.55 (270, 19.4)
◆ Gasket
◆ Gasket
Nozzle Leakage Pipe Assy No. 2
Injection Pump (w/ HAC)
Injection Pump (w/o HAC)
26.55 (270, 19.4)
◆ Gasket
Nozzle Leakage Pipe Assy No. 2
◆ Gasket
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
A78195


w/ HAC
Pneumatic Bellows Cover
◆ Gasket
Rubber Cap
Rubber Cap
Spring Guide
Adjusting Lever
Pneumatic Bellows
Return Spring
Push Rod
◆ Cap Seal
Pneumatic Bellows Spring
Rubber Cap
◆ O–Ring
Full Load Set Screw
Plate Washer
◆ Gasket
Idle Speed Adjusting Screw
Governor Cover
Dash Pot
Collar
◆ Gasket
◆ Gasket
Wire Clamp
Connecting Pin
Lever Control Spring
Wire Clamp
Maximum Speed Adjusting Screw
◆ Gasket
◆ O–Ring
Plate Washer
Spring Seat
Control Lever
Lead Wire
Damper Spring
Support Pin
Speed Control Spring
◆ Gasket
Fuel Cut Solenoid
Adjusting Lever Shaft
◆ O–Ring
Spring
Valve
◆ O–Ring
Strainer
Wave Washer
Engine Speed Sensor
◆ Set Key
Pipe Clamp
◆ Non–reusable part
P
A78196

w/o HAC

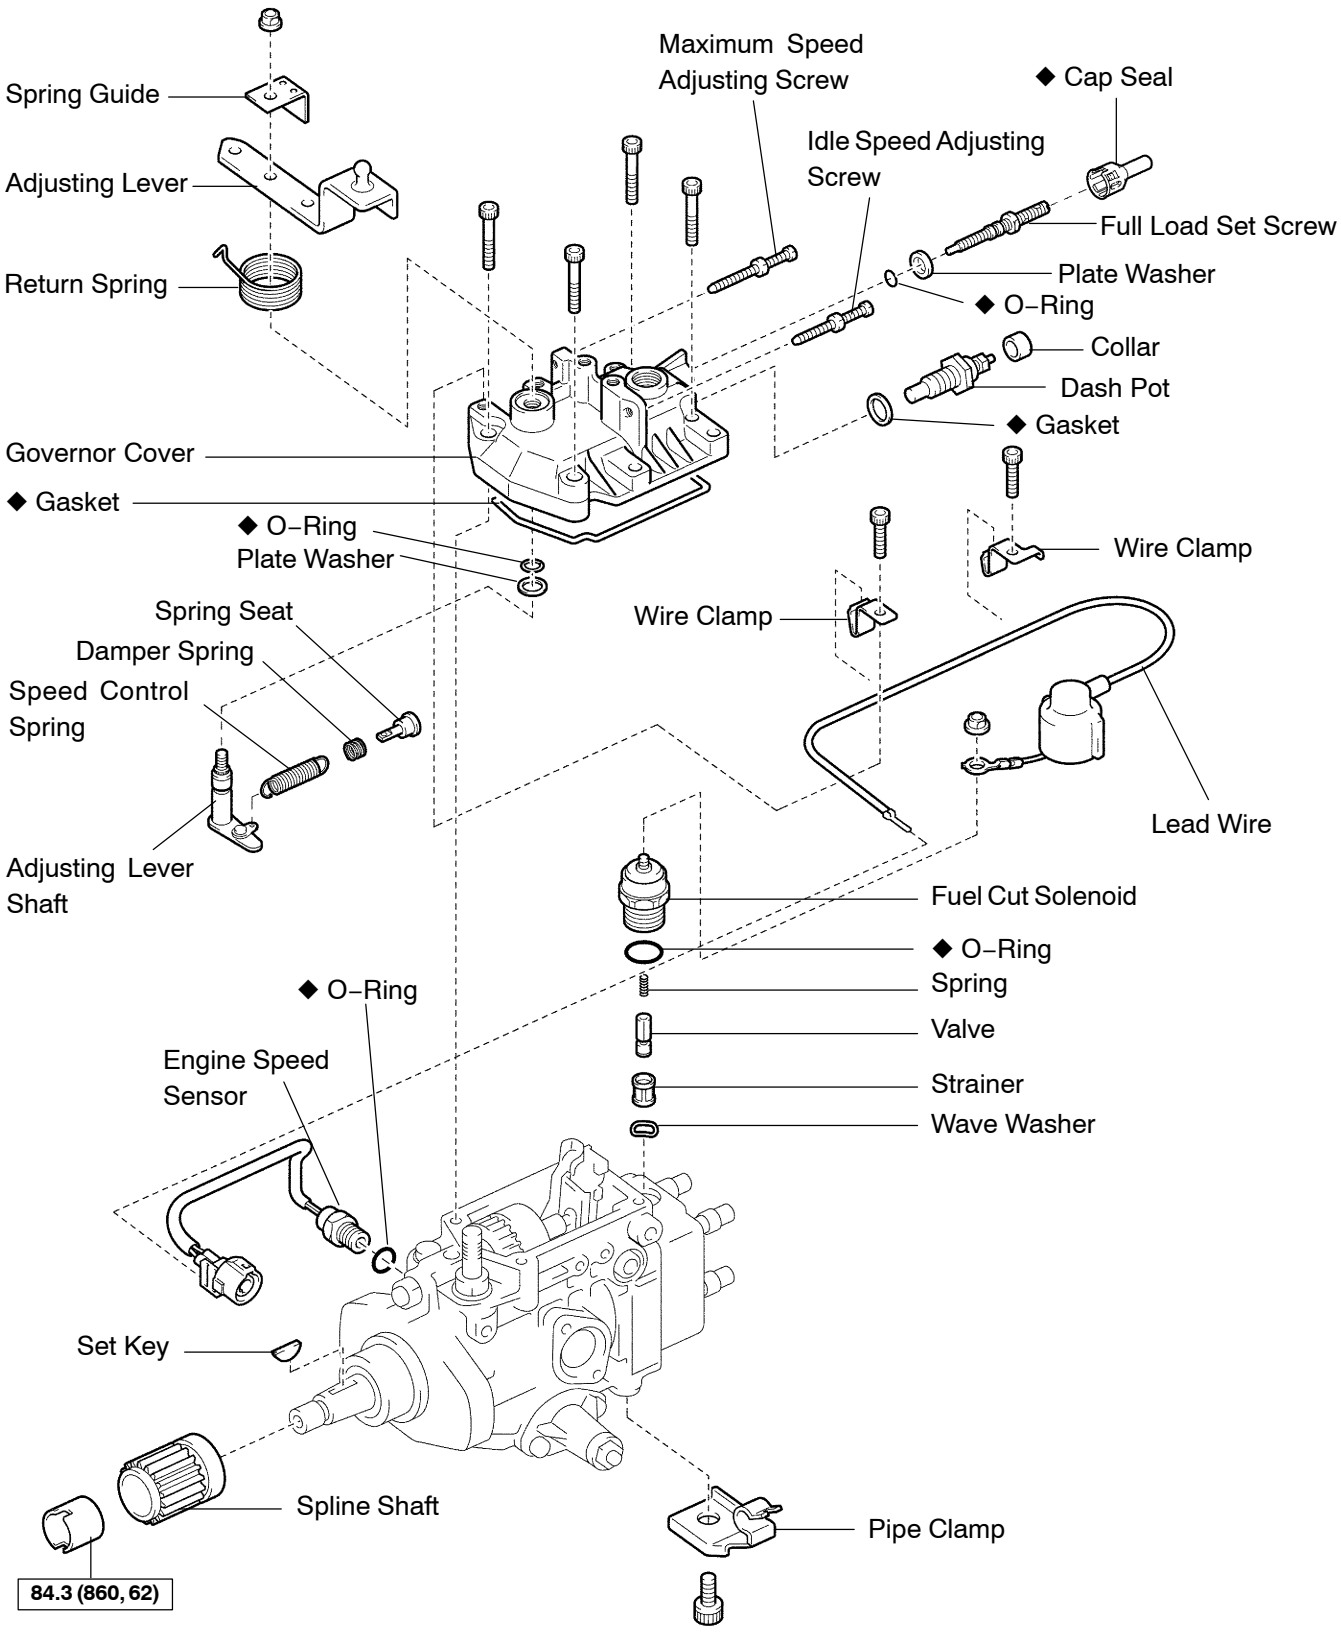


N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non–reusable part

P

A78197

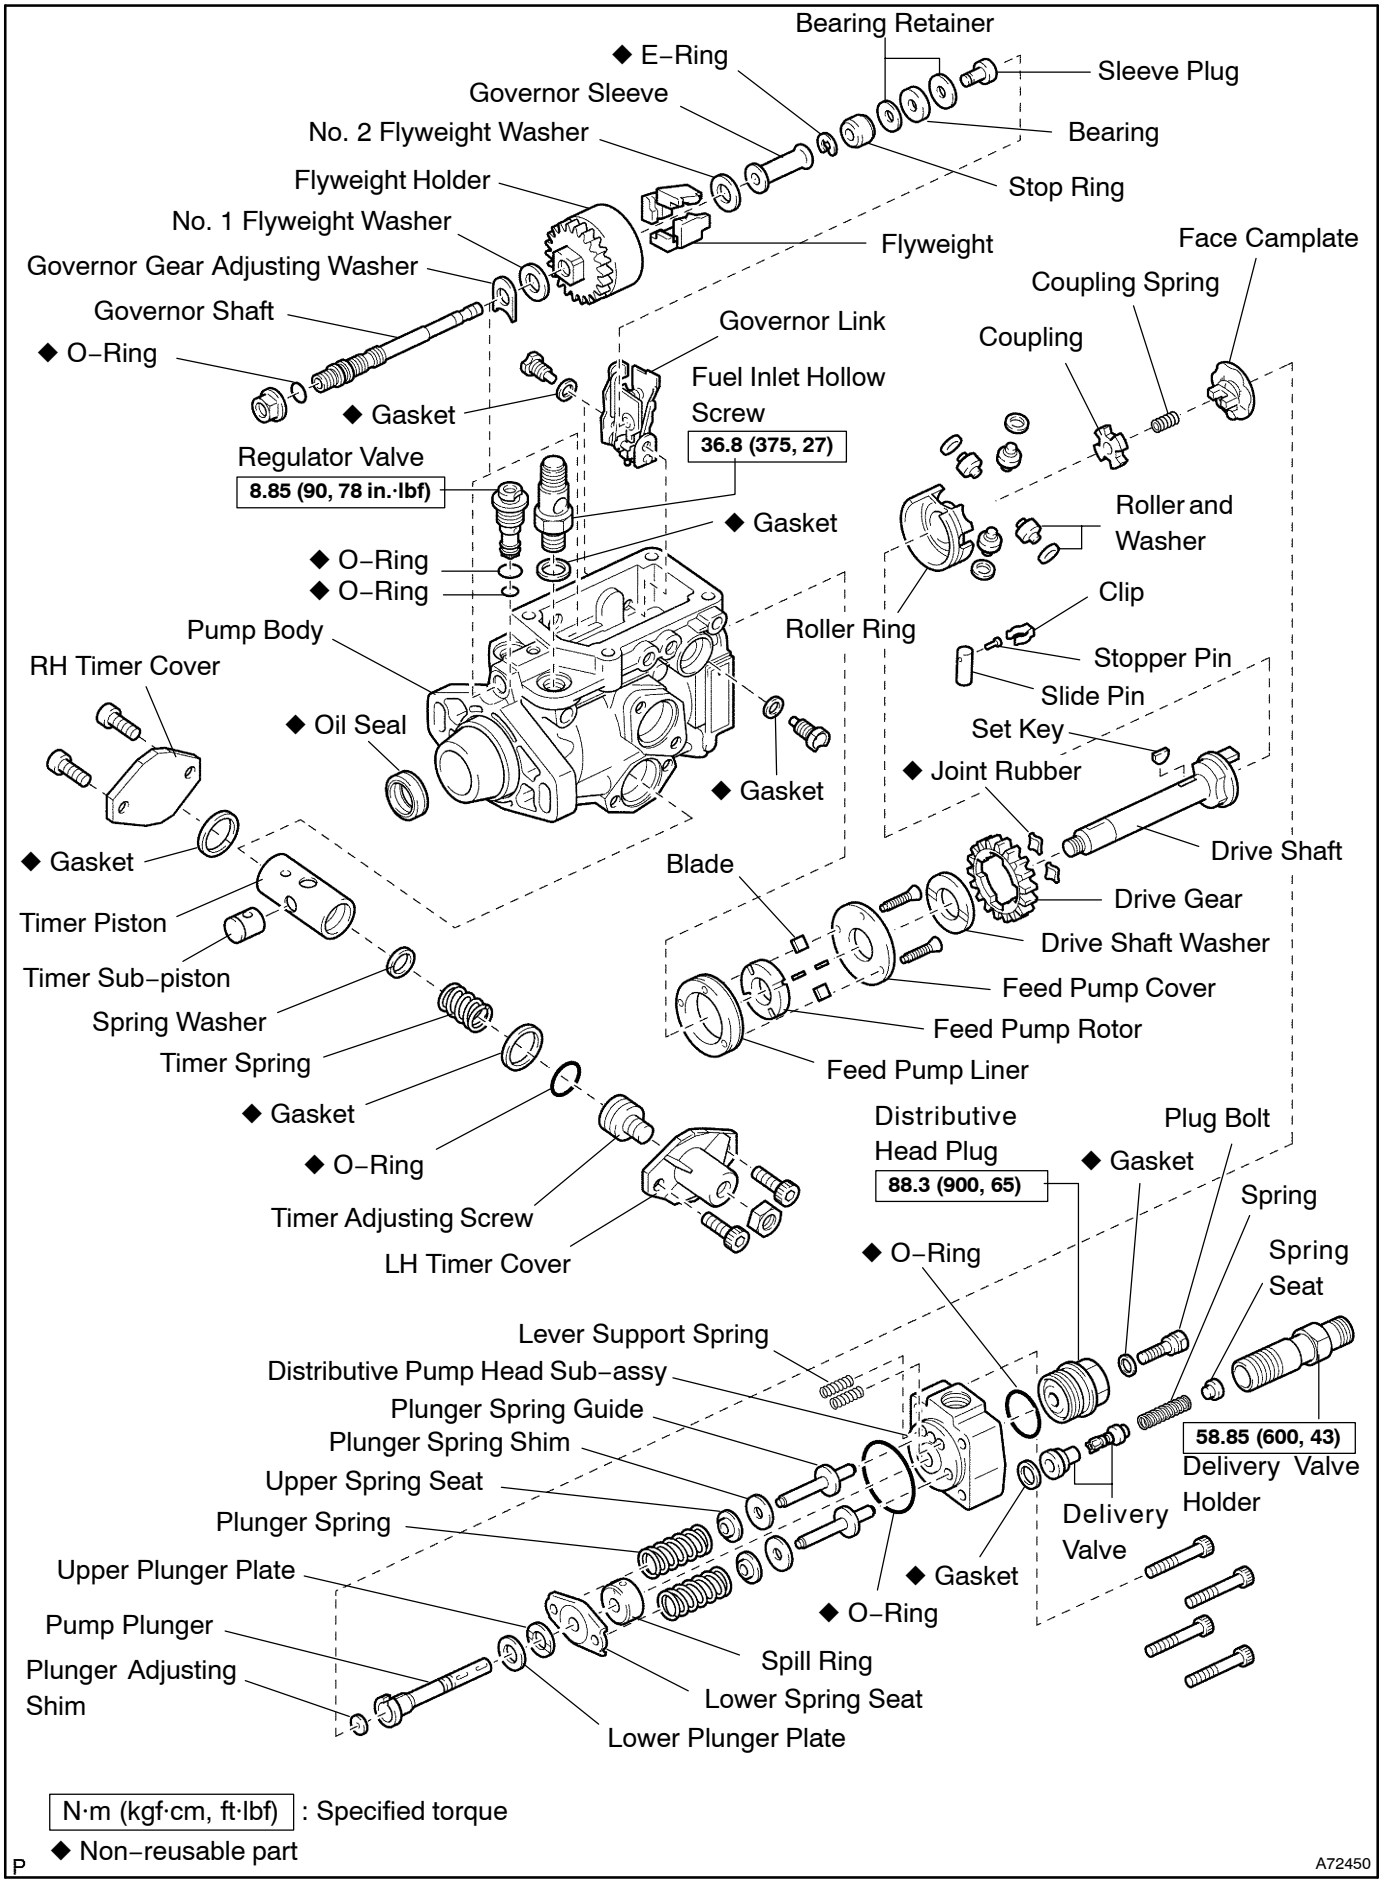

N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non–reusable part

P

A72450