
110PZ–01

INSPECTION

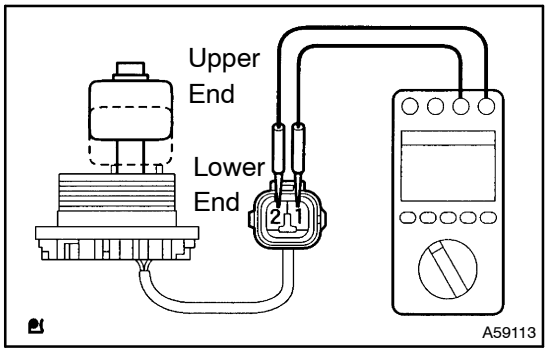

1. INSPECT LEVEL WARNING SWITCH

(a) Using the TOYOTA electrical tester, check the continuity.

(1) Check the continuity between the terminals.

Standard:

Float position	Specified Condition
Upper end of float	Continuity
Lower end of float	No continuity

If there no continuity, replace the warning switch.