110PX–01

OVERHAUL

1. REMOVE IDLE–UP BRACKET

(a) Remove the 4 screws and bracket.

2. REMOVE SWIVEL NIPPLE (INLET)

(a) Remove the union, 2 gaskets and nipple.

3. REMOVE SWIVEL NIPPLE (OUTLET)

(a) Remove the union, 2 gaskets and nipple.

4. REMOVE FUEL TEMPERATURE SENSOR


(a) Remove the sensor and O–ring.

5. INSTALL FUEL TEMPERATURE SENSOR

(a) Install a new O–ring to the sensor.

(b) Install the sensor.

Torque: 21.6 N·m (220 kgf·cm, 16 ft·lbf)

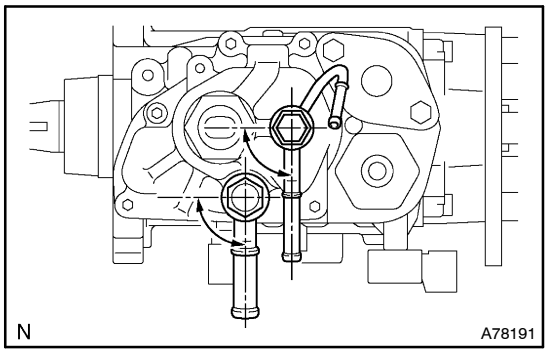

6. INSTALL SWIVEL NIPPLE (INLET)

(a) Install the nipple with 2 new gaskets and the union, as shown in the illustrtation.

Torque: 24.5 N·m (250 kgf·cm, 18 ft·lbf)

7. INSTALL SWIVEL NIPPLE (OUTLET)

(a) Install the nipple with 2 new gaskets and the union, as shown in the illustrtation.

Torque: 22.1 N·m (225 kgf·cm, 16 ft·lbf)

8. INSTALL IDLE–UP BRACKET

(a) Install the bracket with the 4 screws.

Torque: 13.3 N·m (136 kgf·cm, 10 ft·lbf)