

INJECTION PUMP ASSY (S05C–B)

COMPONENTS


110JK–02

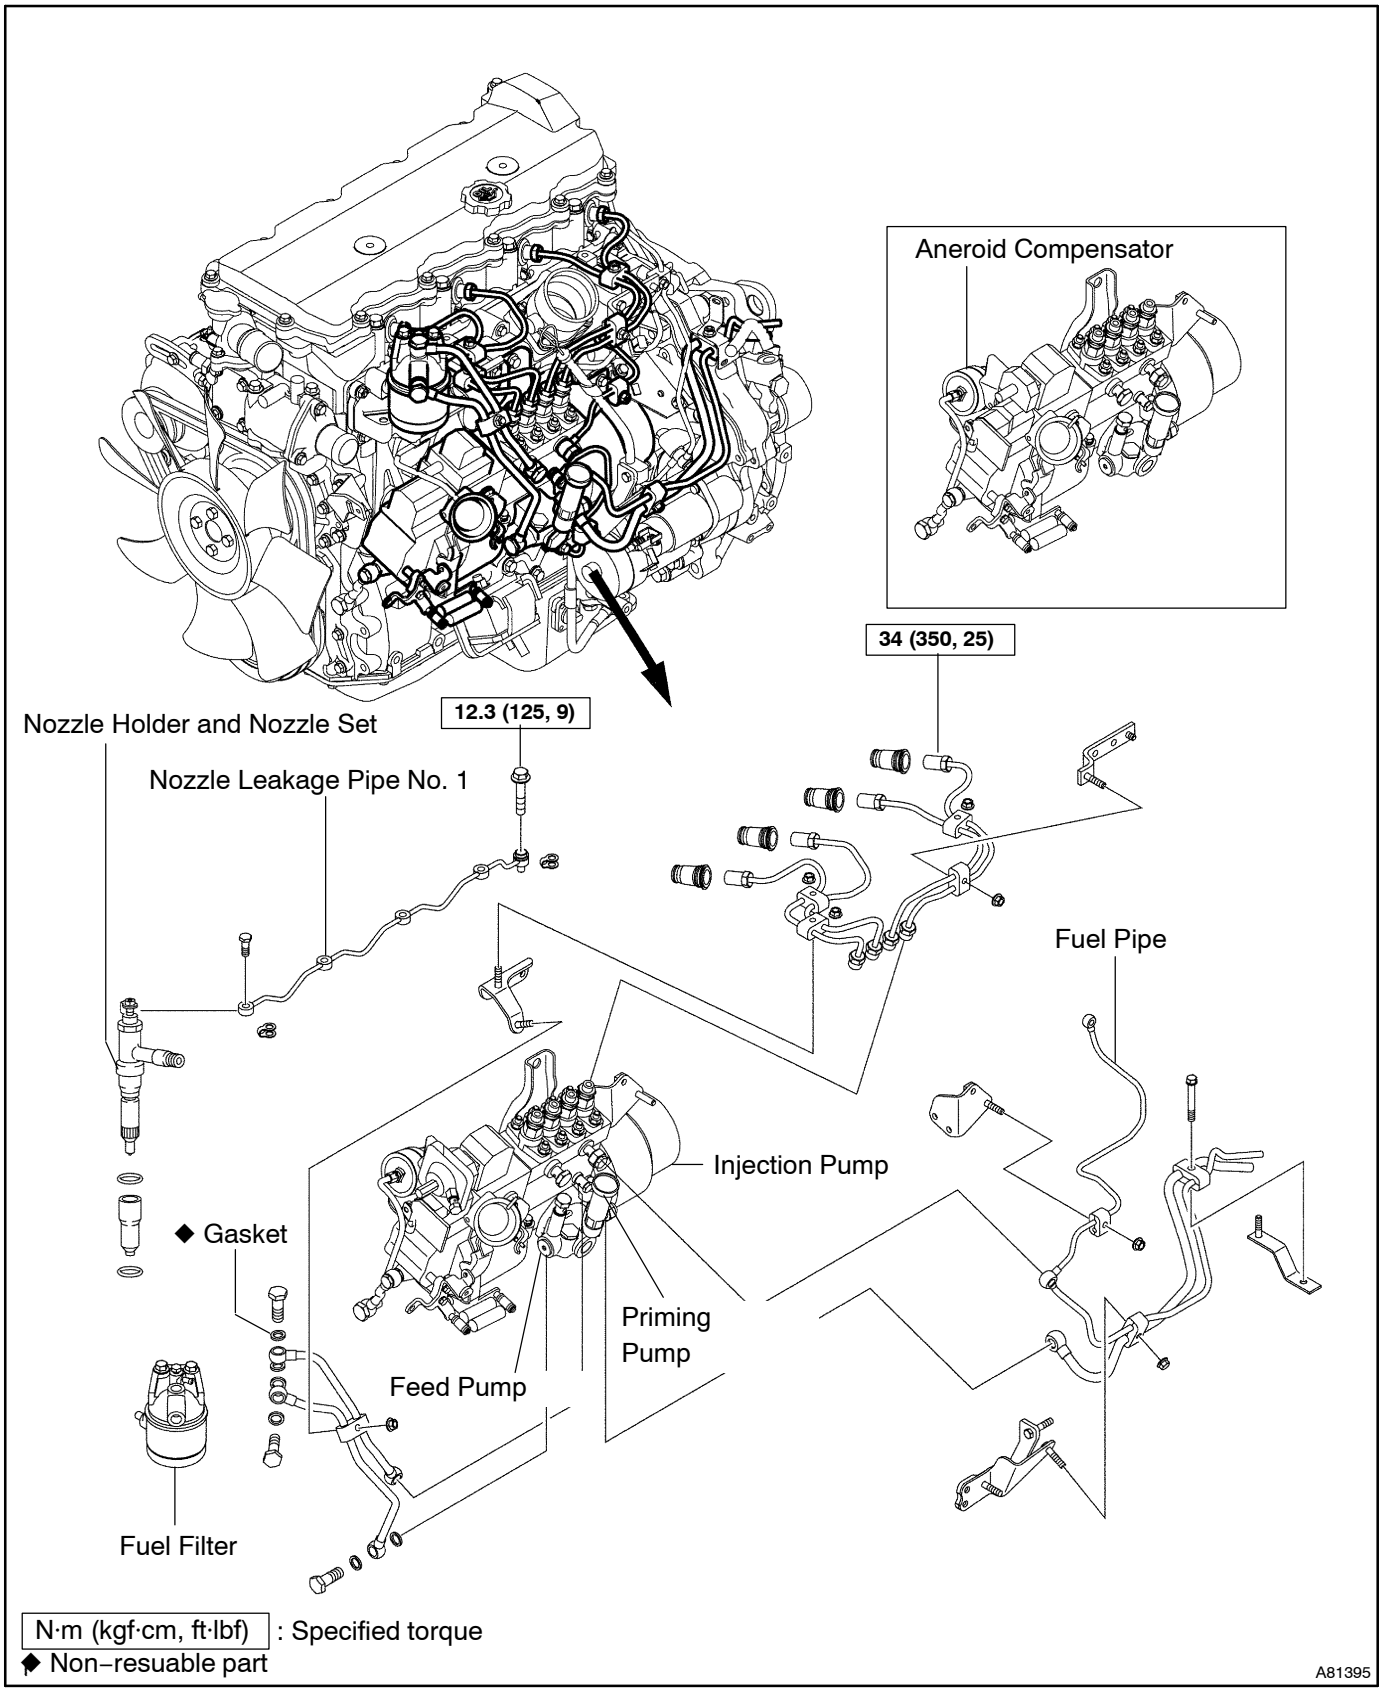


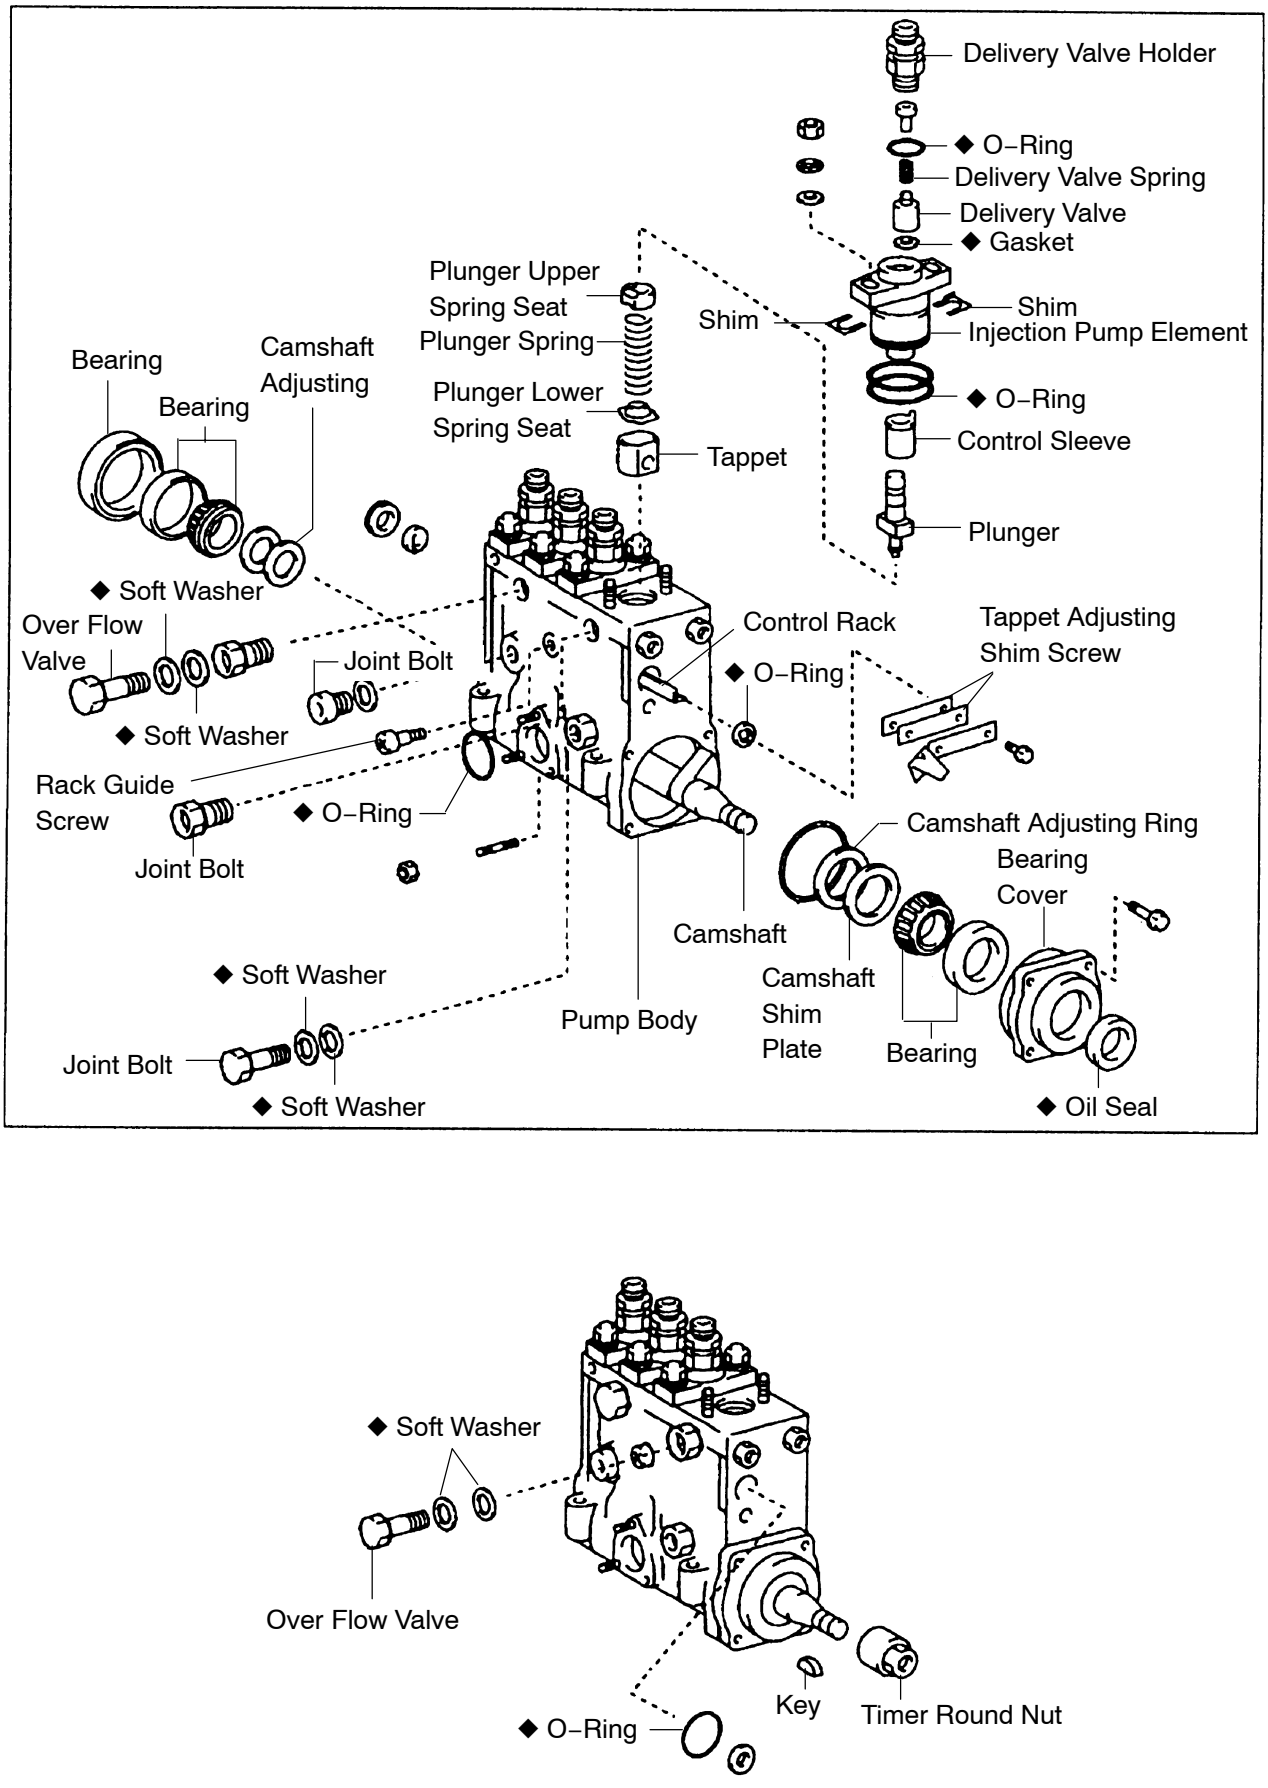

◆ Non–resuable part

A71111

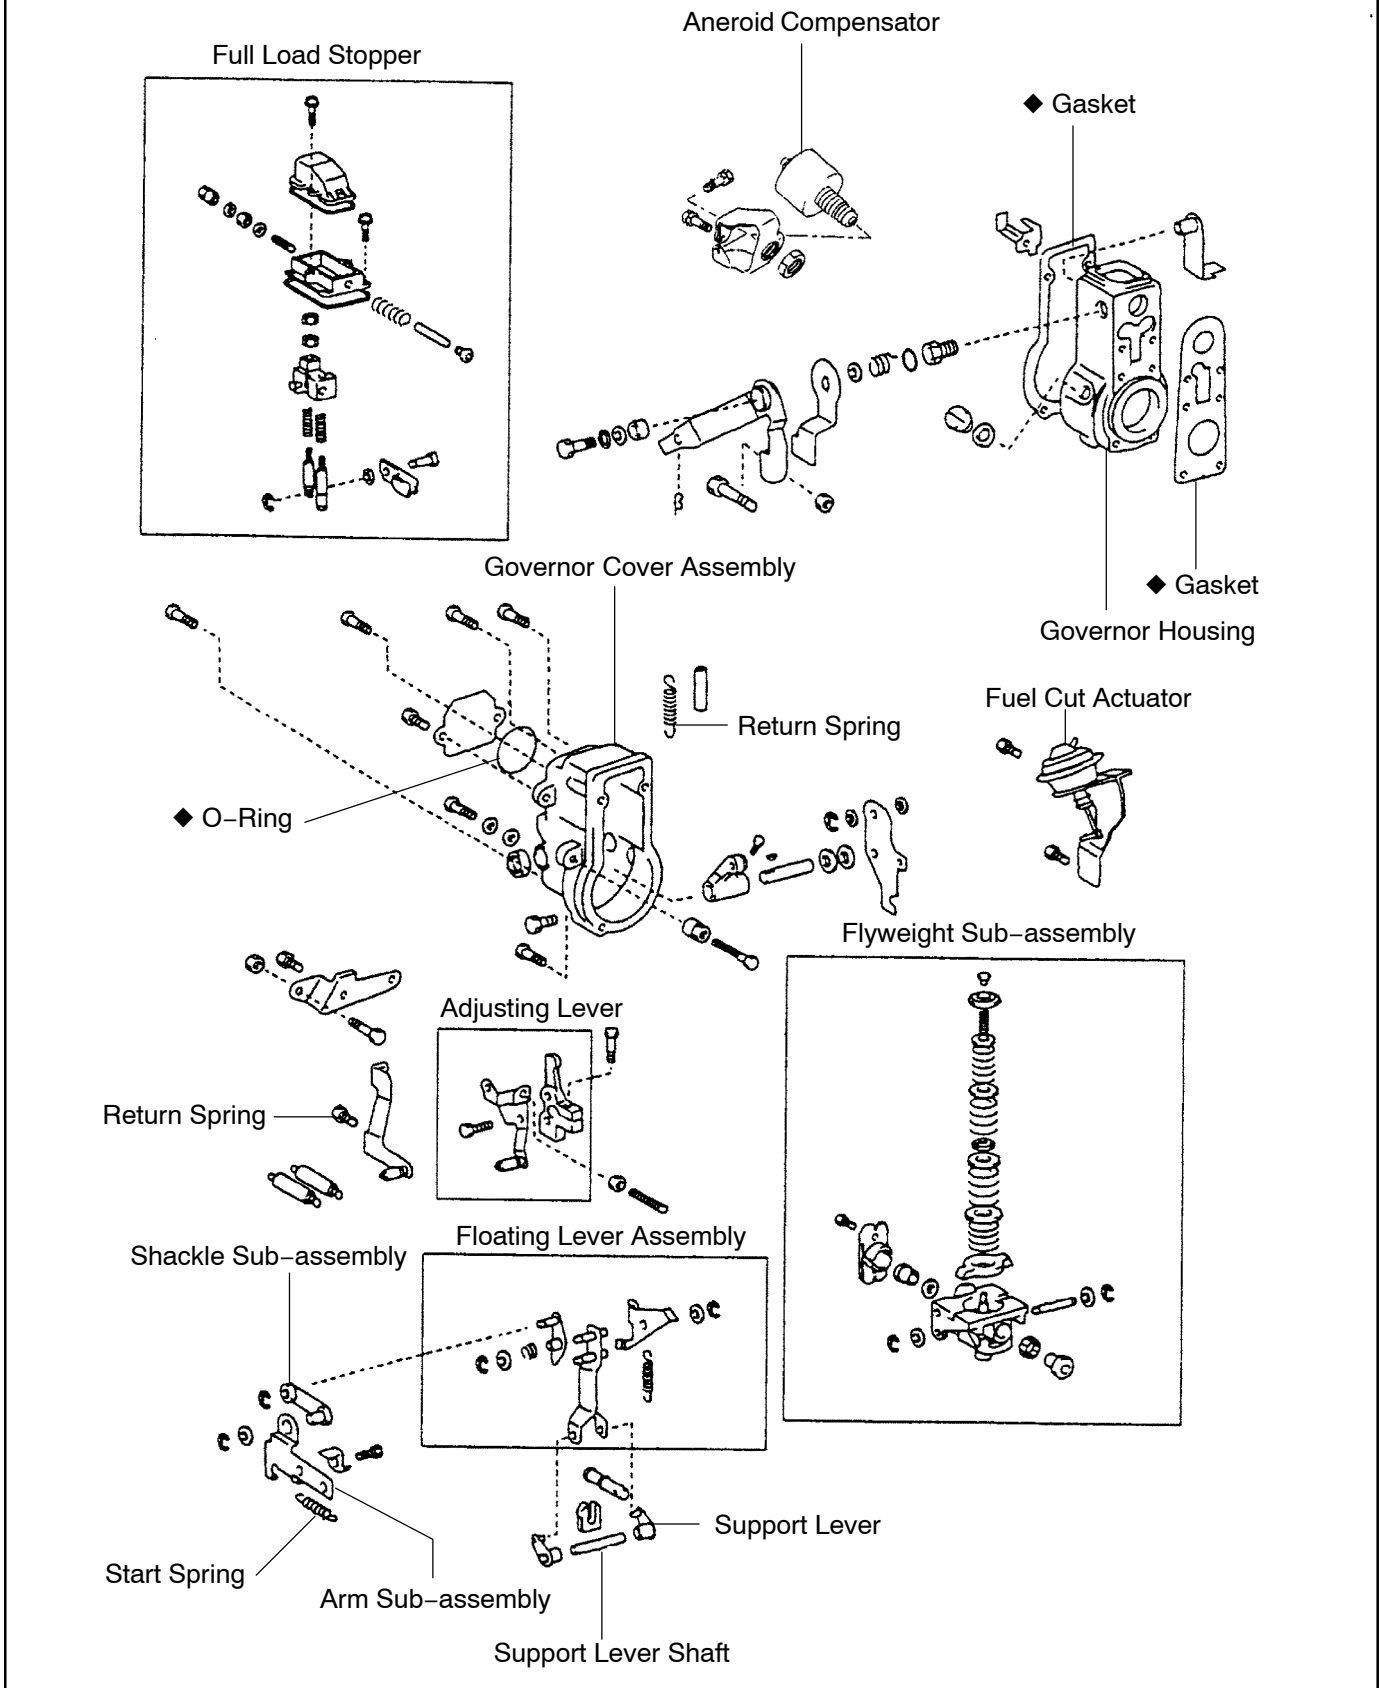

Full Load Stopper
Aneroid Compensator
◆ Gasket
◆ Gasket
Governor Housing
Governor Cover Assembly
Return Spring
Fuel Cut Actuator
◆ O–Ring
Flyweight Sub–assembly
Adjusting Lever
Return Spring
Floating Lever Assembly
Shackle Sub–assembly
Support Lever
Start Spring
Arm Sub–assembly
Support Lever Shaft
◆ Non–resuable part
A78032

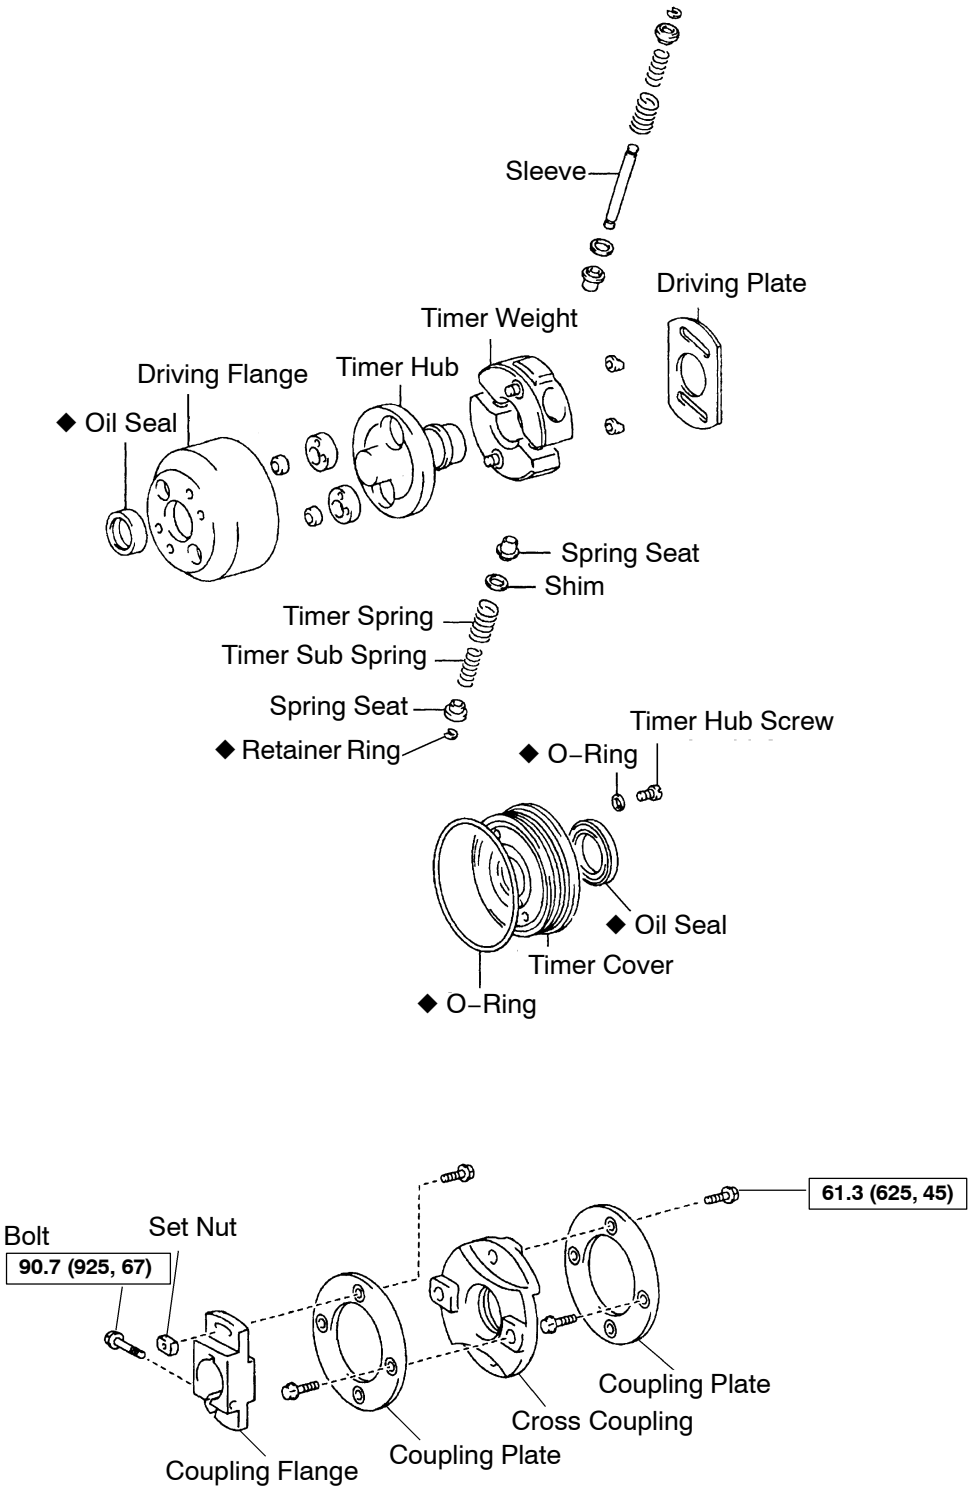


N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non–resuable part

A71960

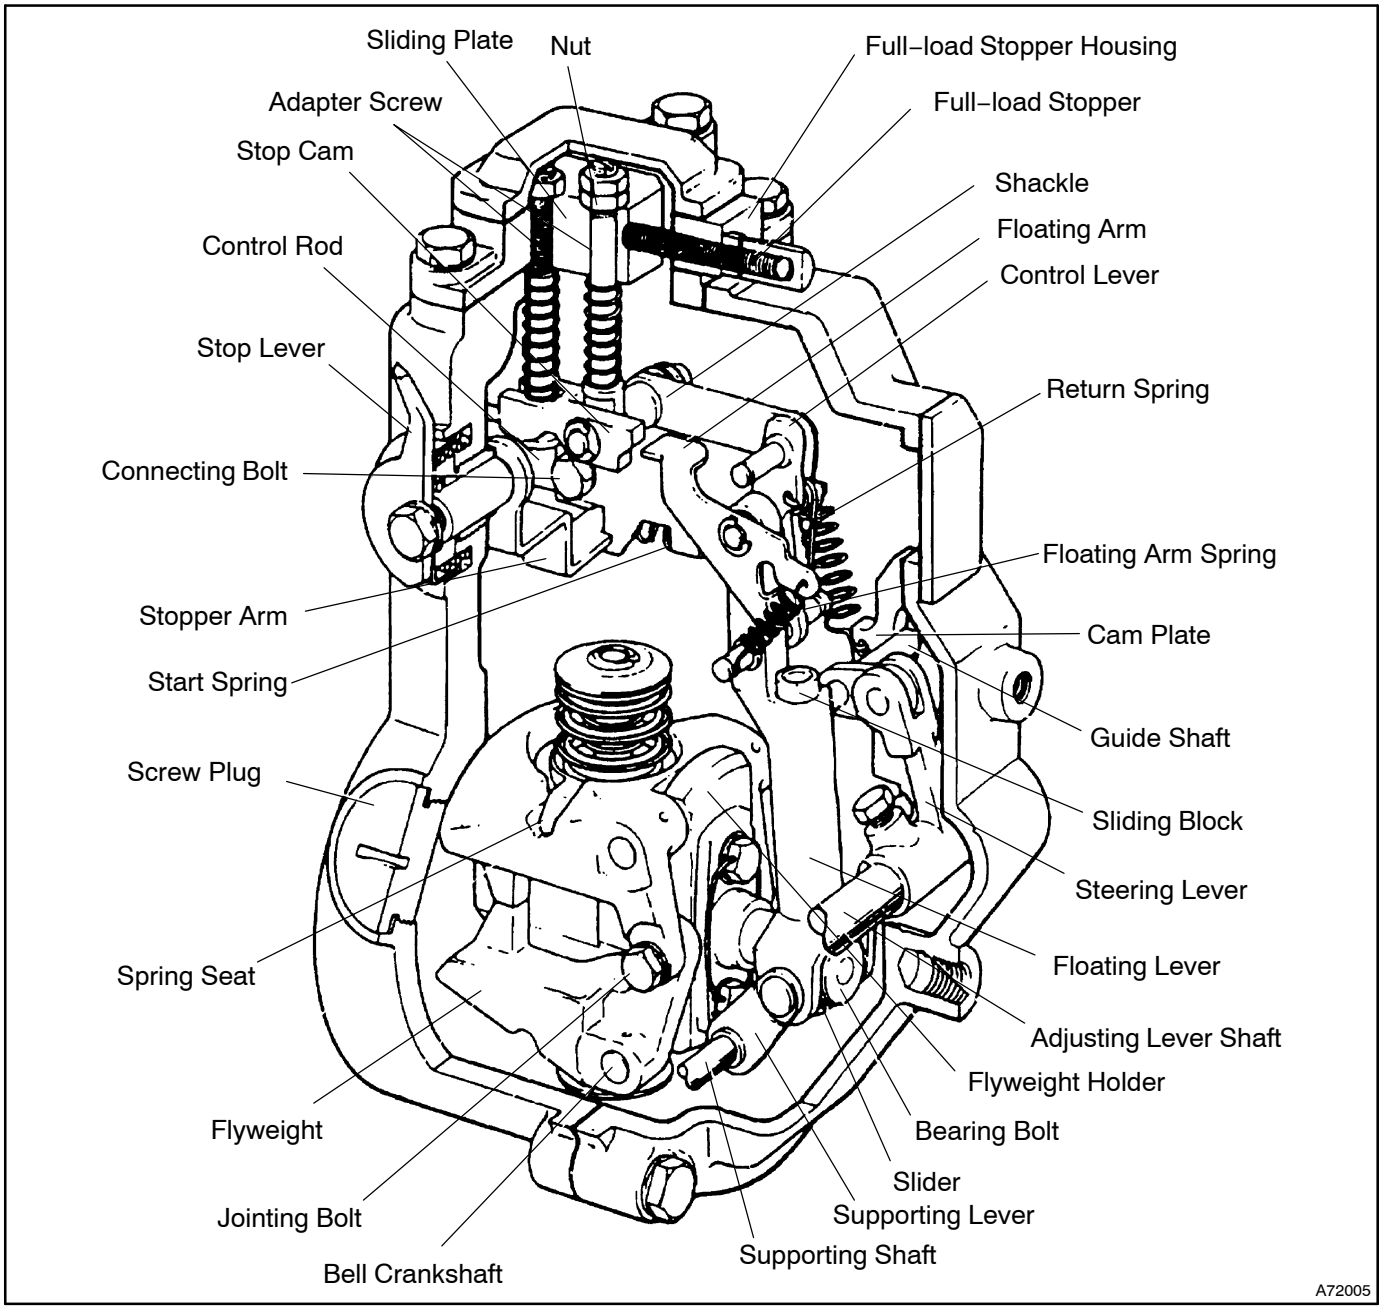
Sliding Plate
Nut
Full–load Stopper Housing
Adapter Screw
Full–load Stopper
Stop Cam
Shackle
Floating Arm
Control Rod
Control Lever
Stop Lever
Return Spring
Connecting Bolt
Floating Arm Spring
Stopper Arm
Cam Plate
Start Spring
Guide Shaft
Screw Plug
Sliding Block
Steering Lever
Spring Seat
Floating Lever
Adjusting Lever Shaft
Flyweight Holder
Flyweight
Bearing Bolt
Slider
Jointing Bolt
Supporting Lever
Supporting Shaft
Bell Crankshaft
A72005

Feed Pump (KE–Type)

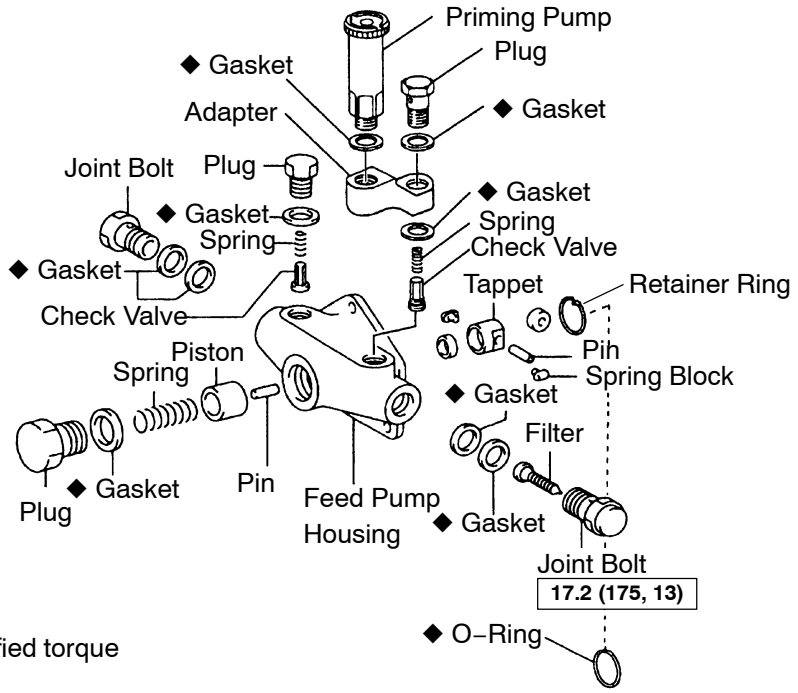

N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–resuable part

A72006