


INJECTION PUMP ASSY (S05C–TA)

COMPONENTS

110QI–01

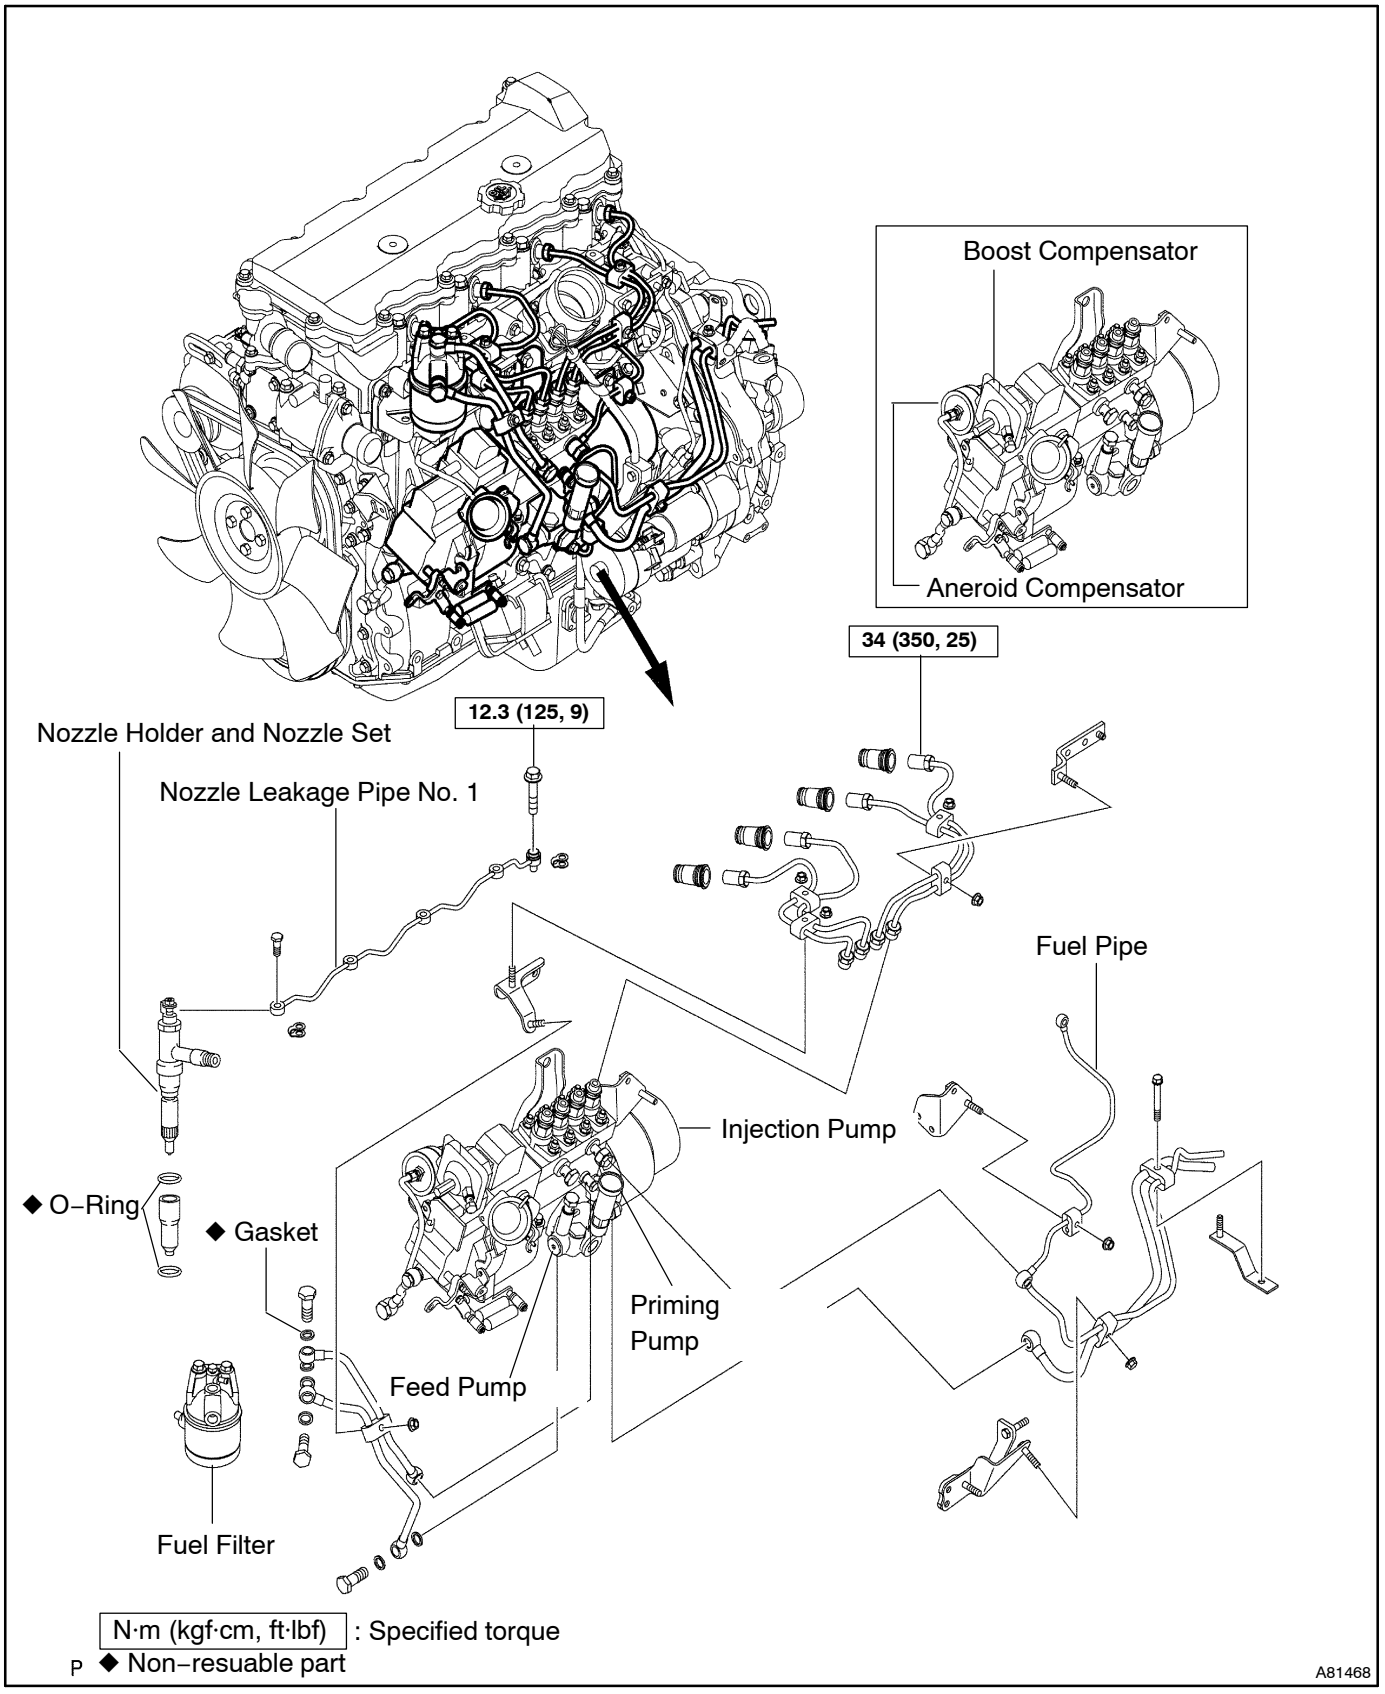


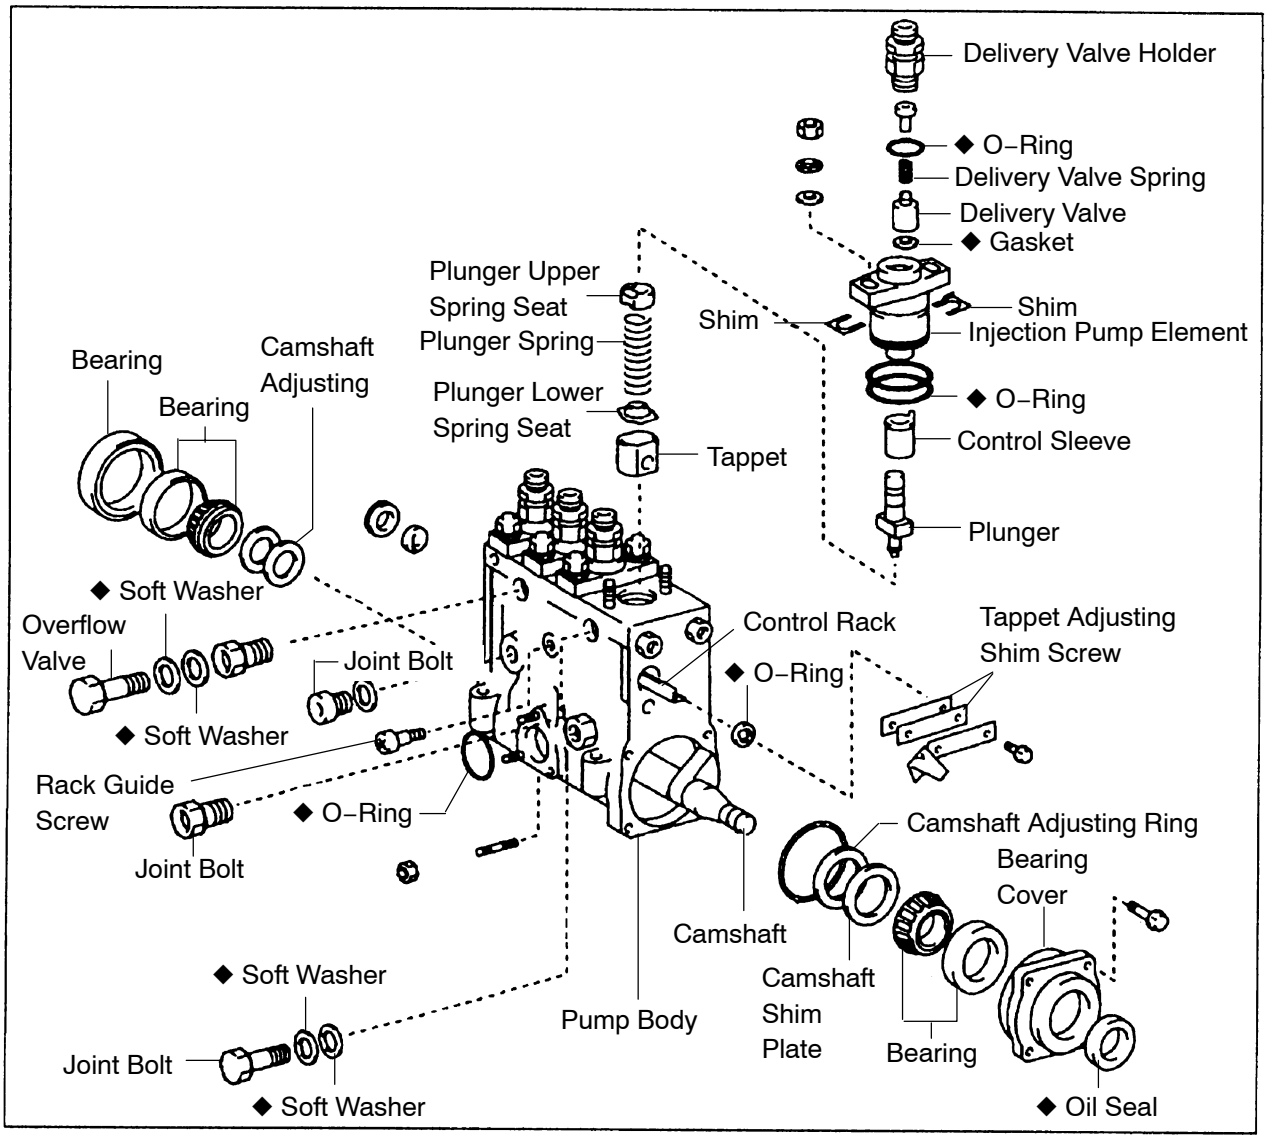

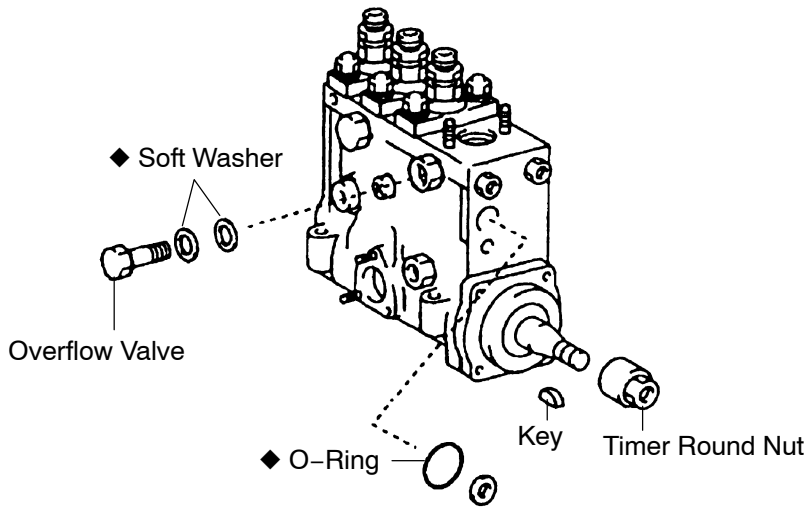


◆ Non–resuable part

A71111

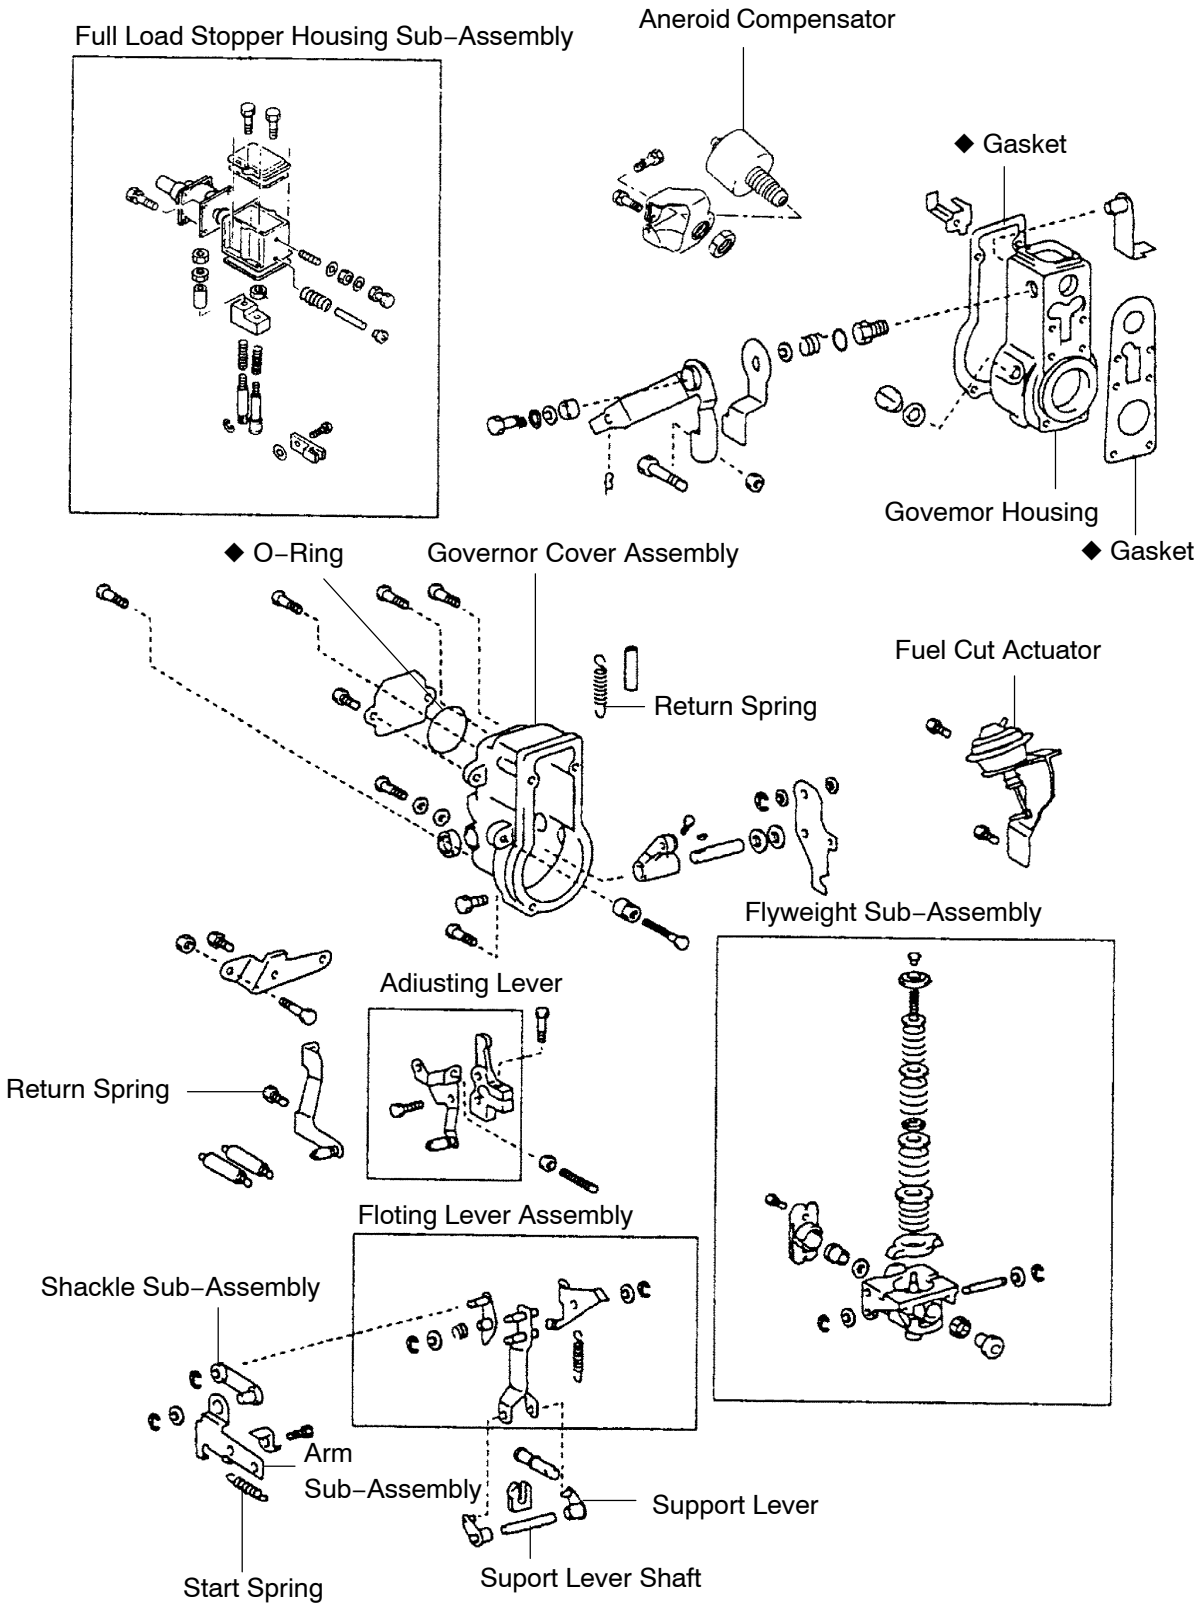

◆ Non–resuable part


A78033

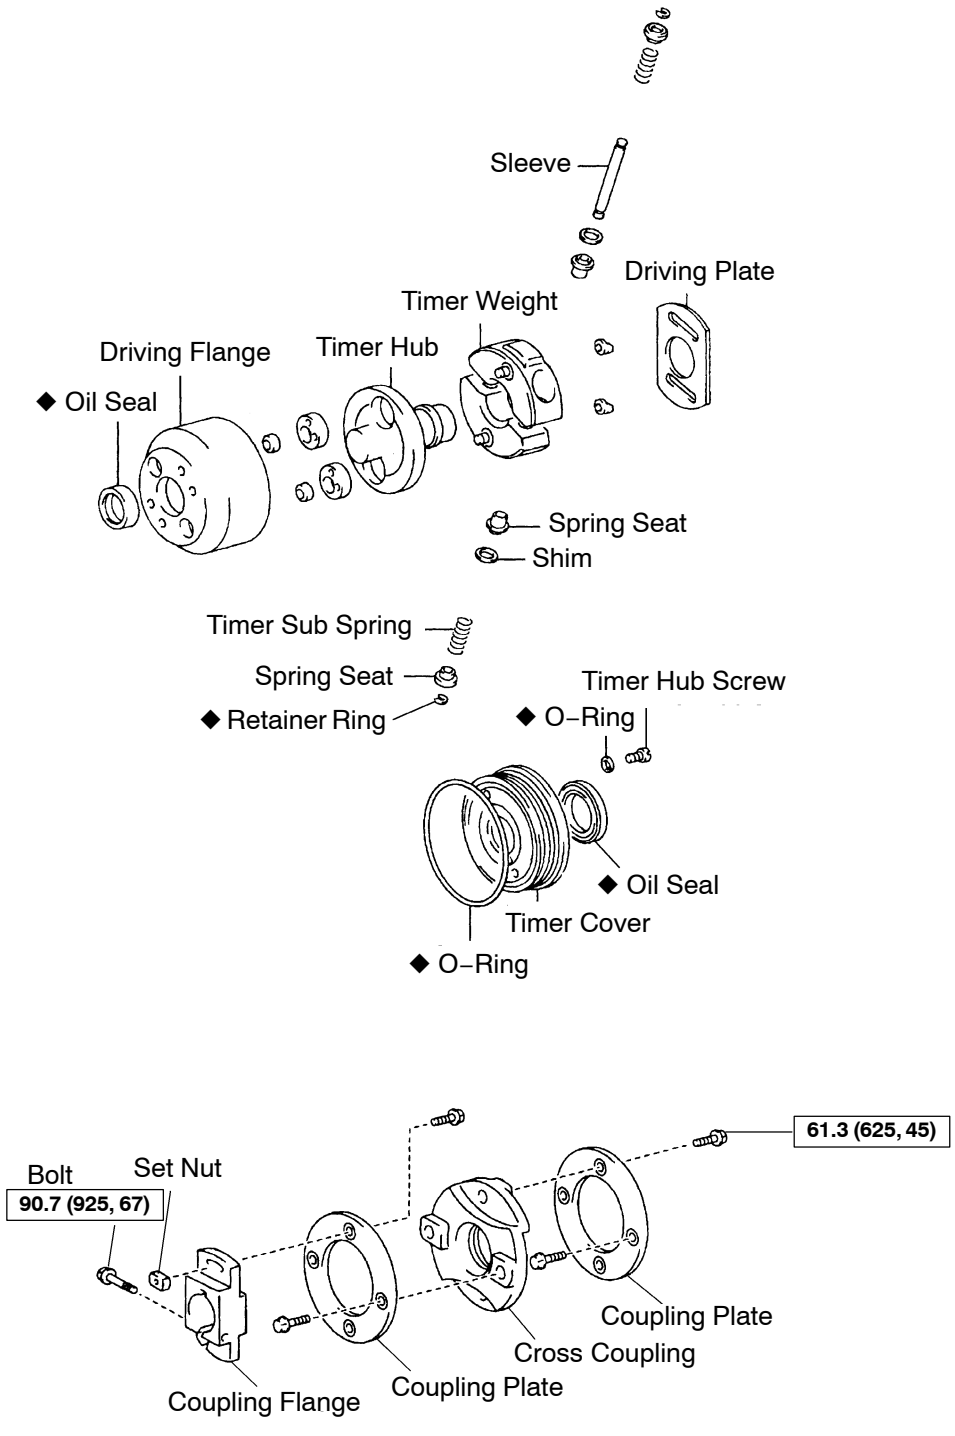


N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non–resuable part

A81026

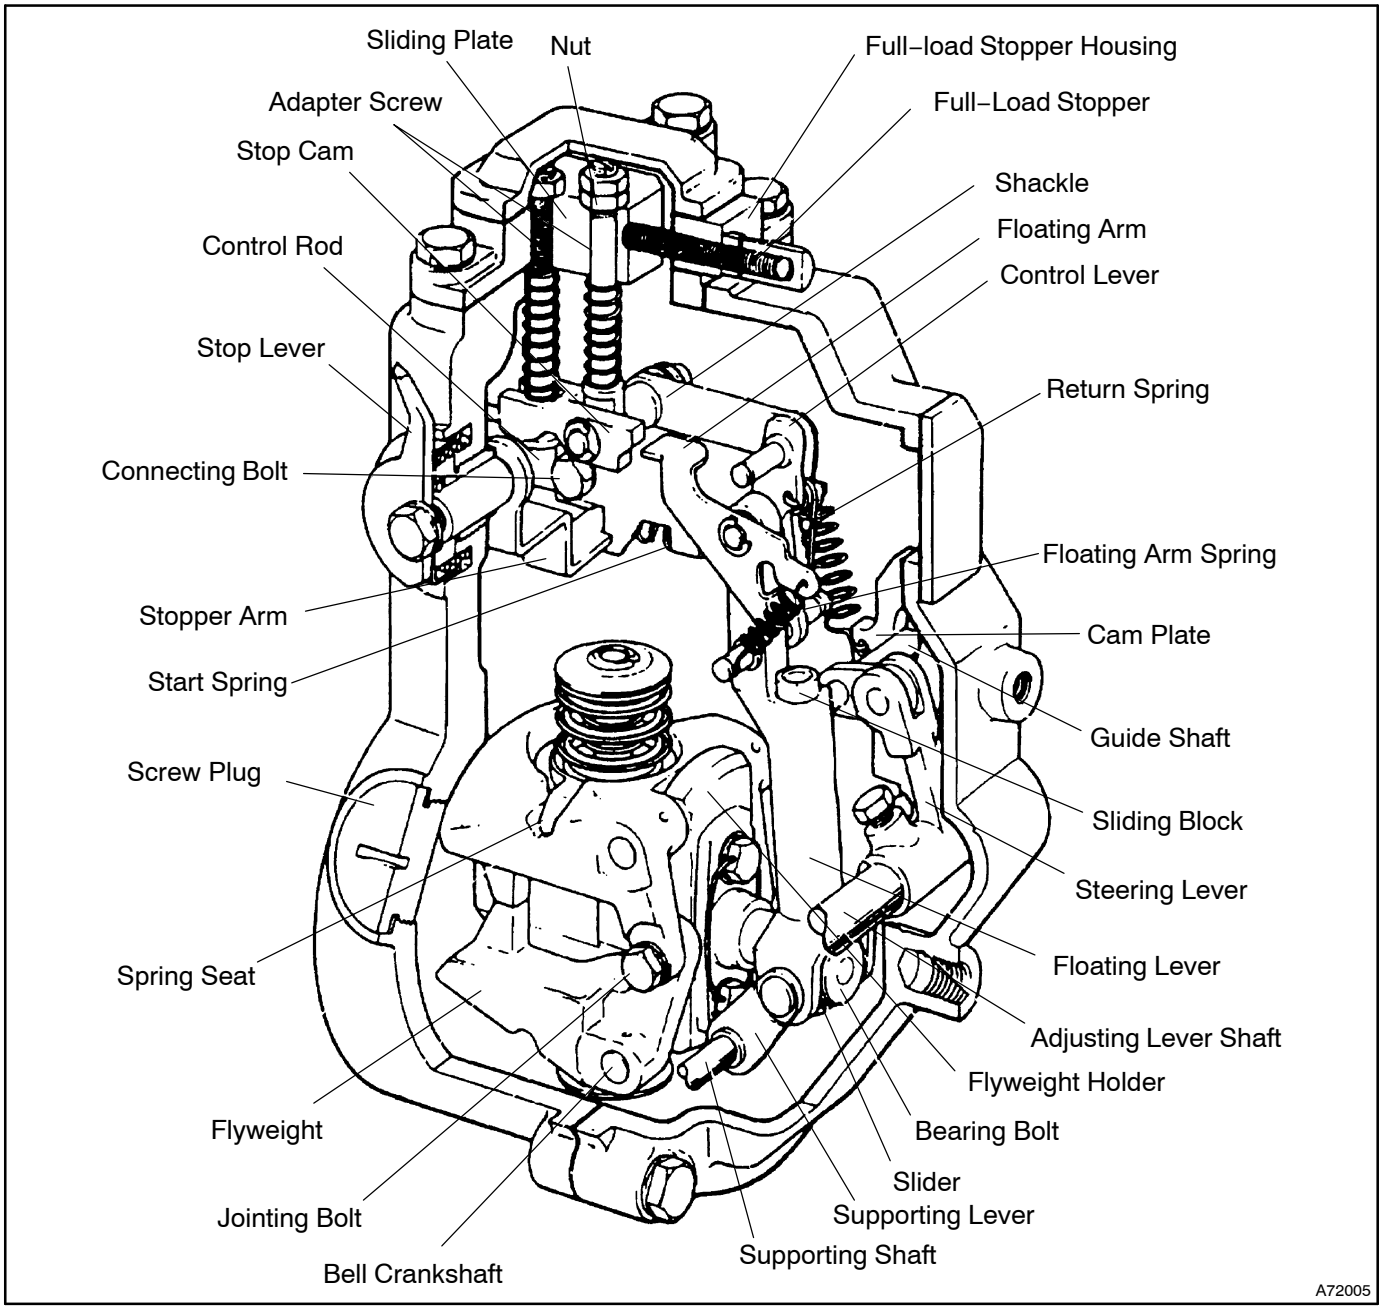
Sliding Plate
Nut
Full–load Stopper Housing
Adapter Screw
Full–Load Stopper
Stop Cam
Shackle
Floating Arm
Control Rod
Control Lever
Stop Lever
Return Spring
Connecting Bolt
Floating Arm Spring
Stopper Arm
Cam Plate
Start Spring
Guide Shaft
Screw Plug
Sliding Block
Steering Lever
Floating Lever
Spring Seat
Adjusting Lever Shaft
Flyweight Holder
Flyweight
Bearing Bolt
Slider
Supporting Lever
Jointing Bolt
Supporting Shaft
Bell Crankshaft
A72005


Feed Pump (KD–Type)

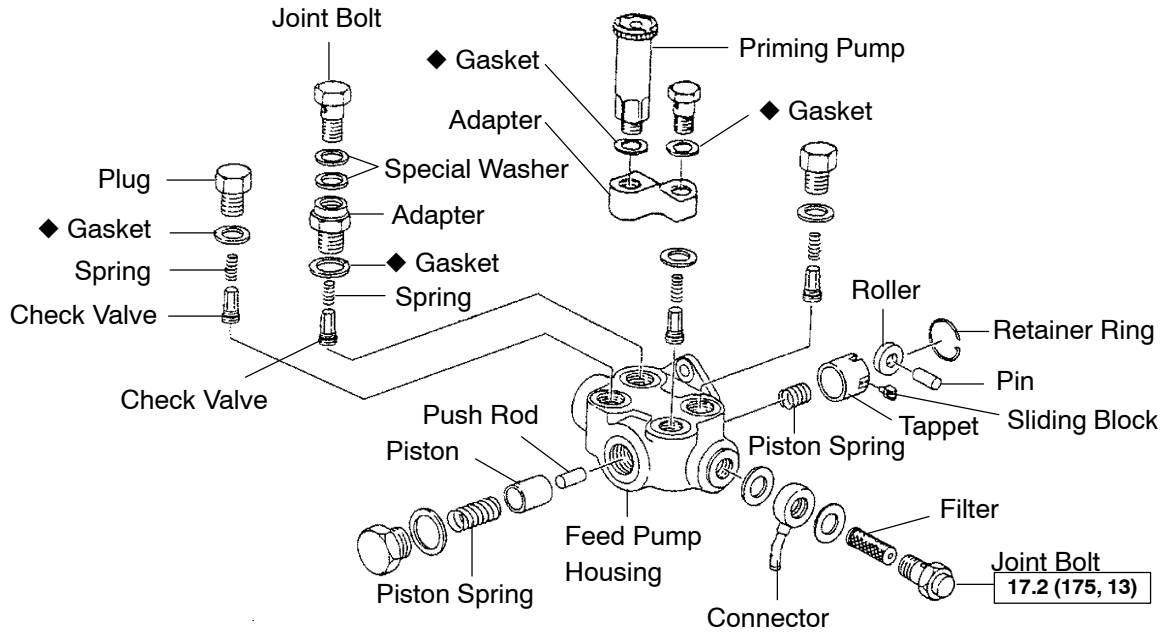

N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non–resuable part

A78034

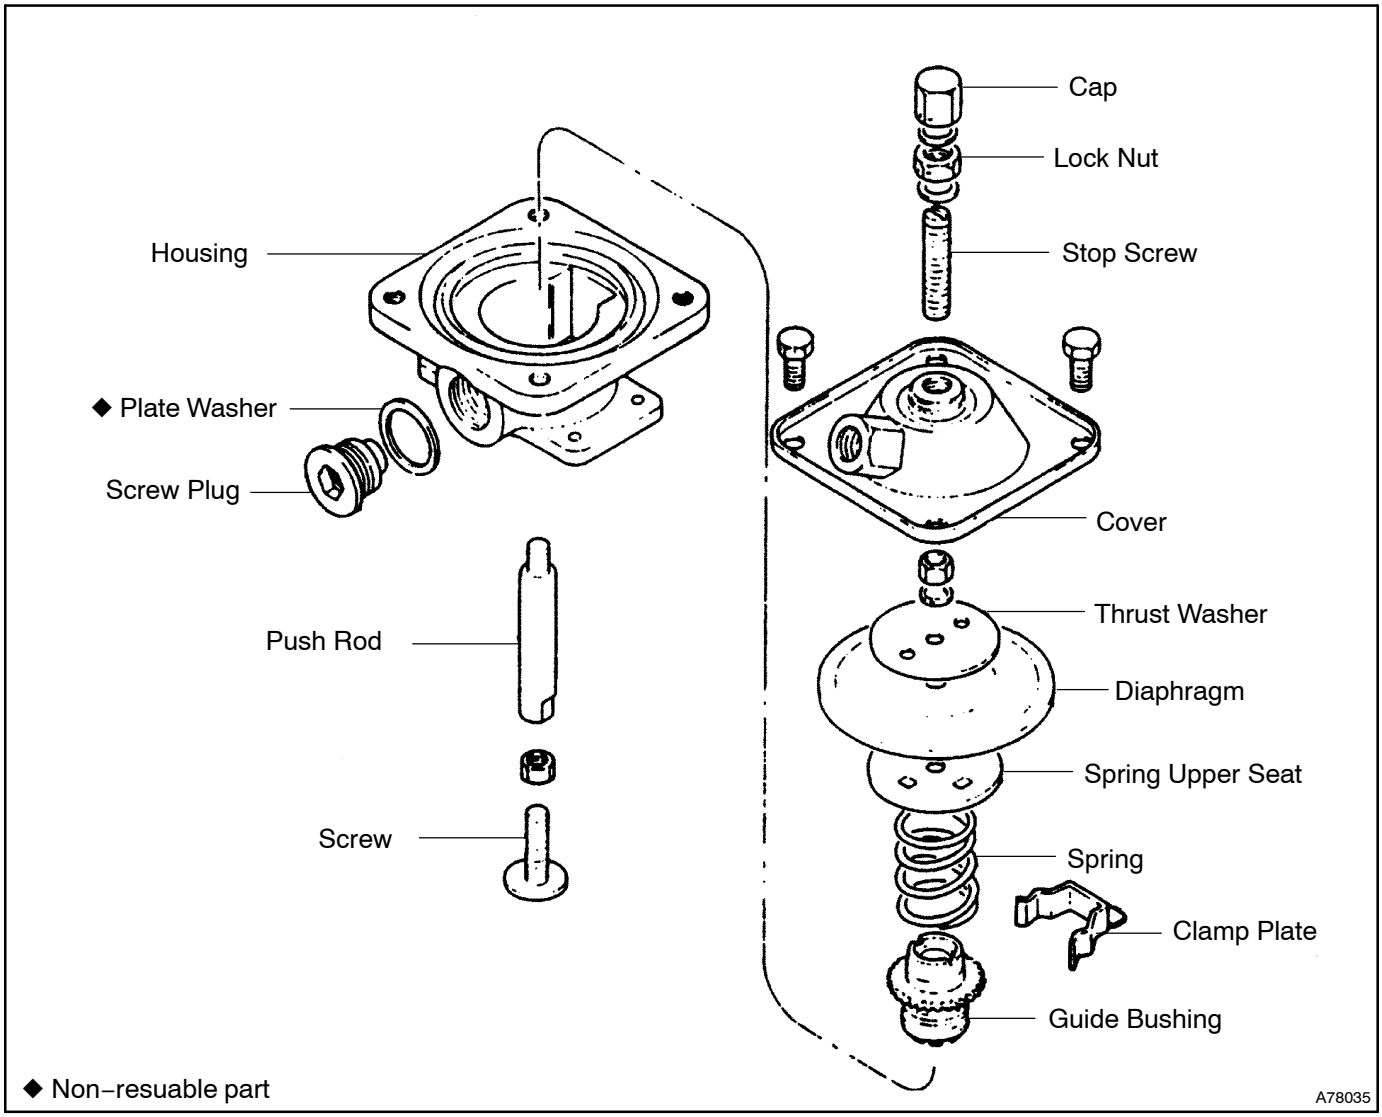
Cap
Lock Nut
Stop Screw
Housing
◆ Plate Washer
Screw Plug
Cover
Push Rod
Thrust Washer
Diaphragm
Spring Upper Seat
Screw
Spring
Clamp Plate
Guide Bushing
◆ Non–resuable part
A78035