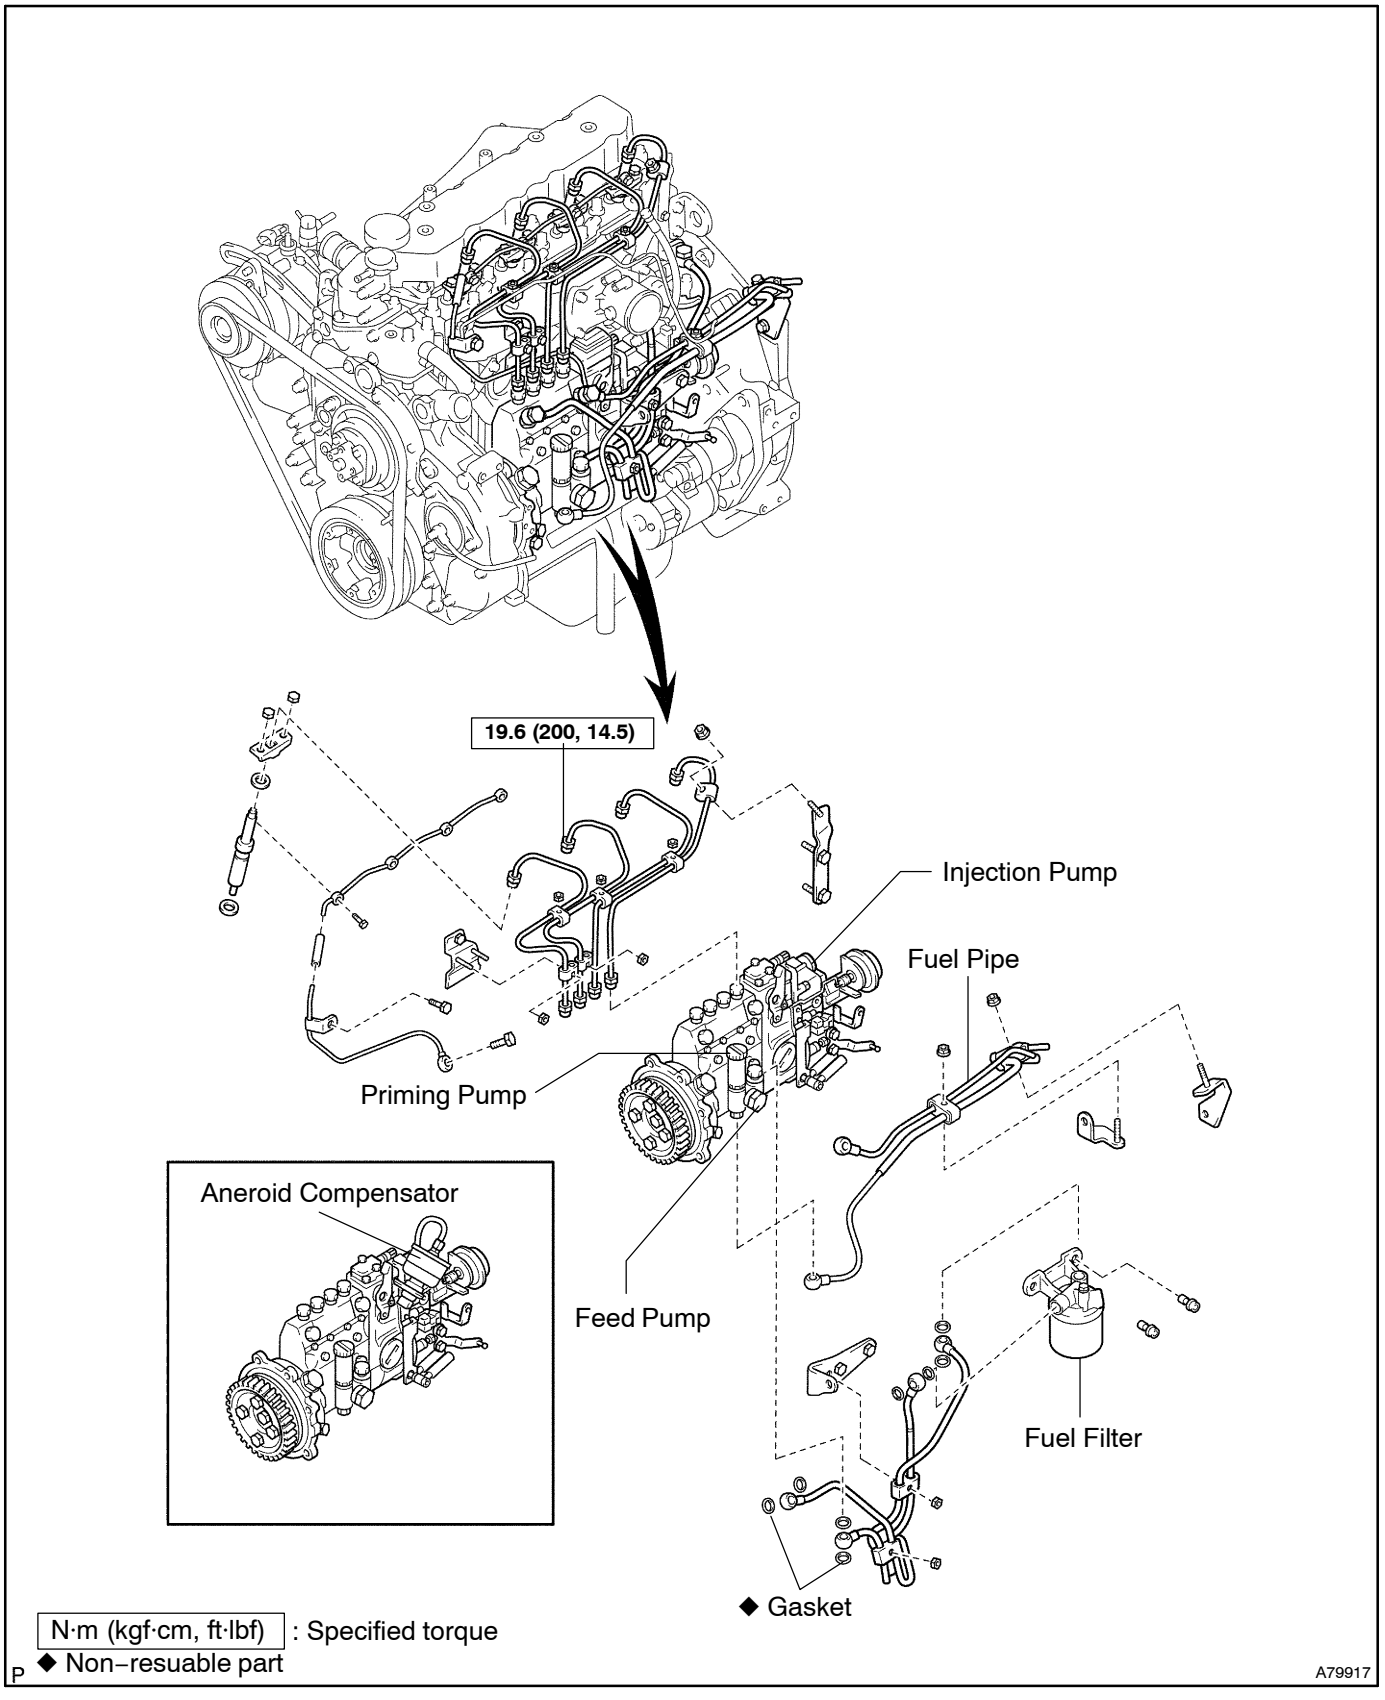
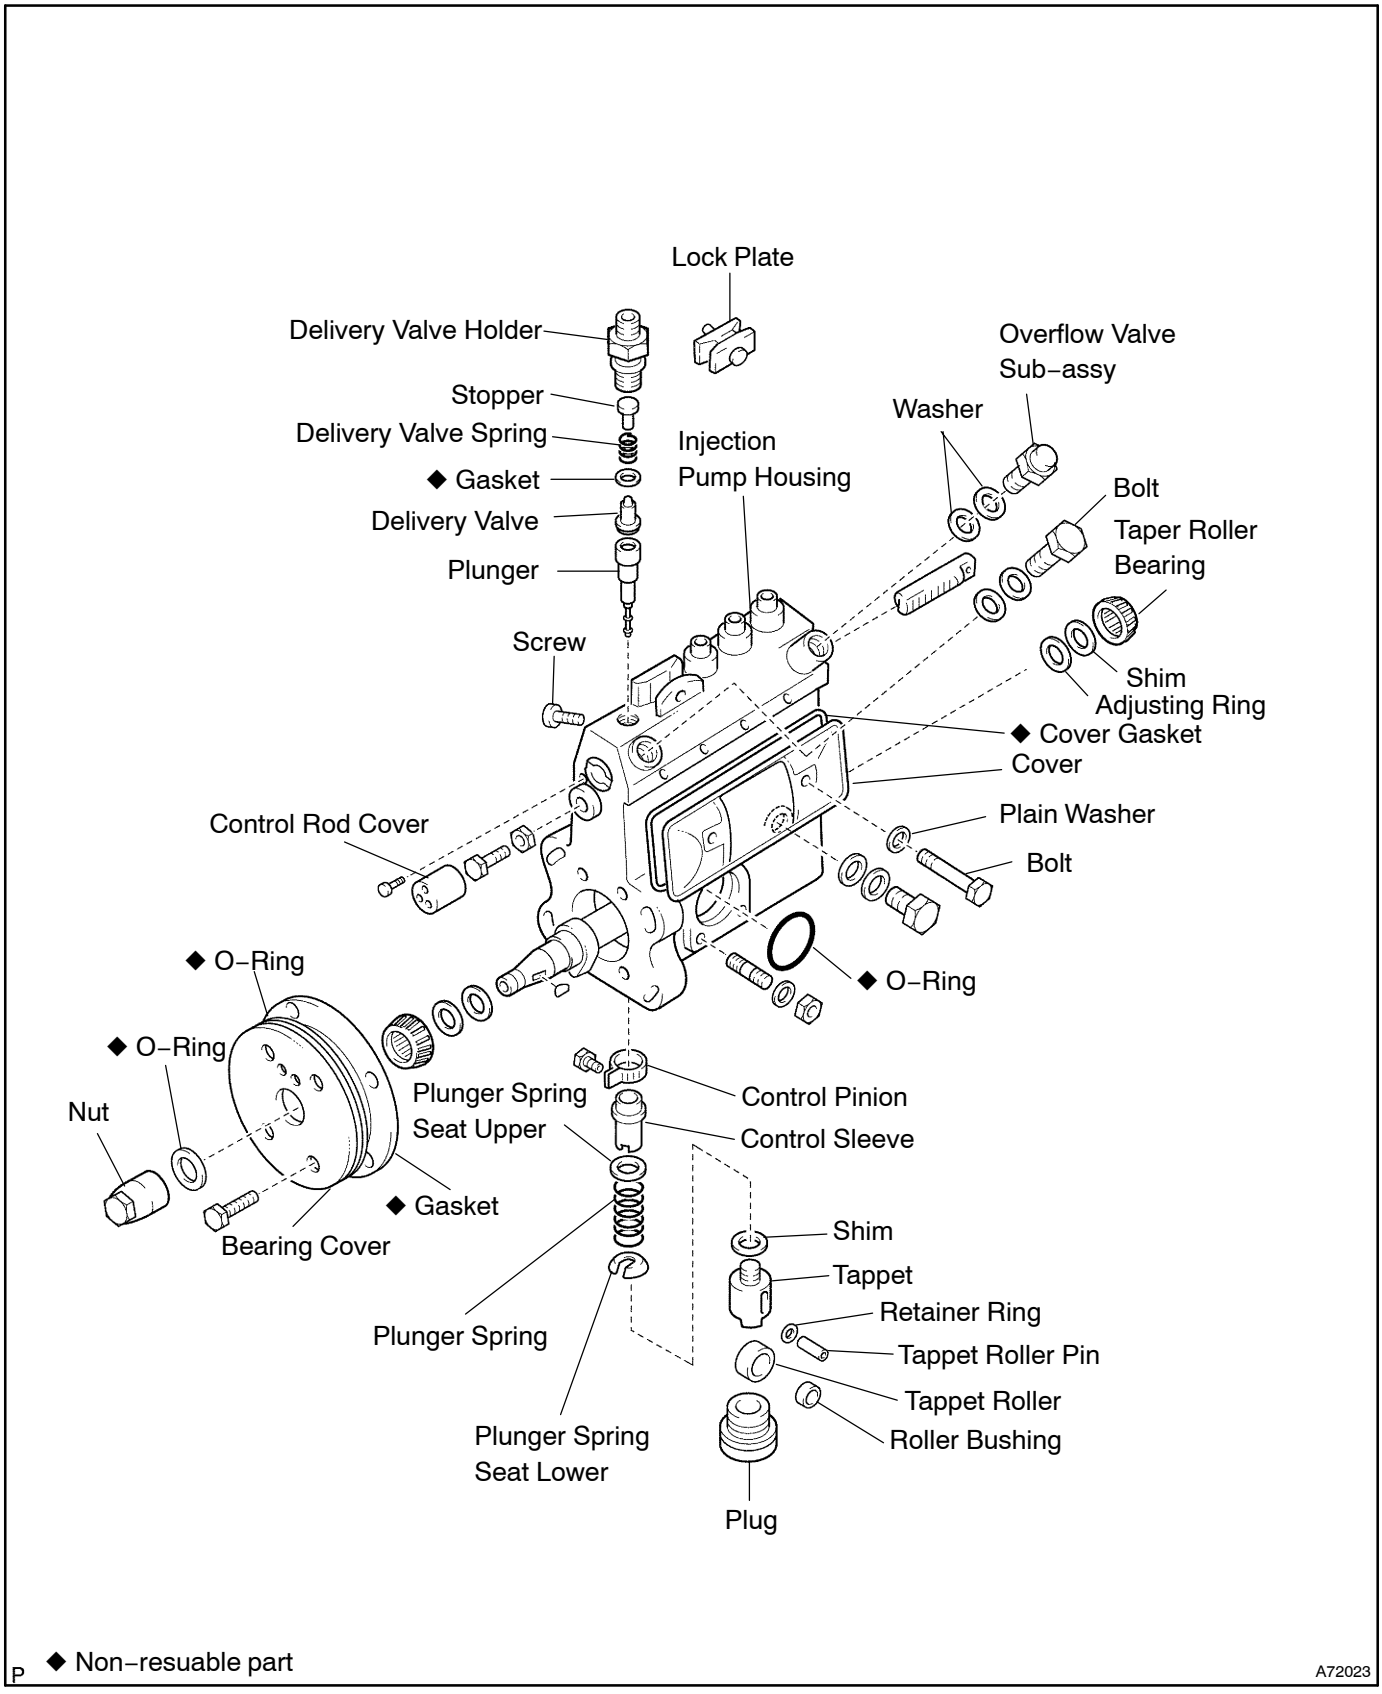
INJECTION PUMP ASSY (W04D–J)

COMPONENTS

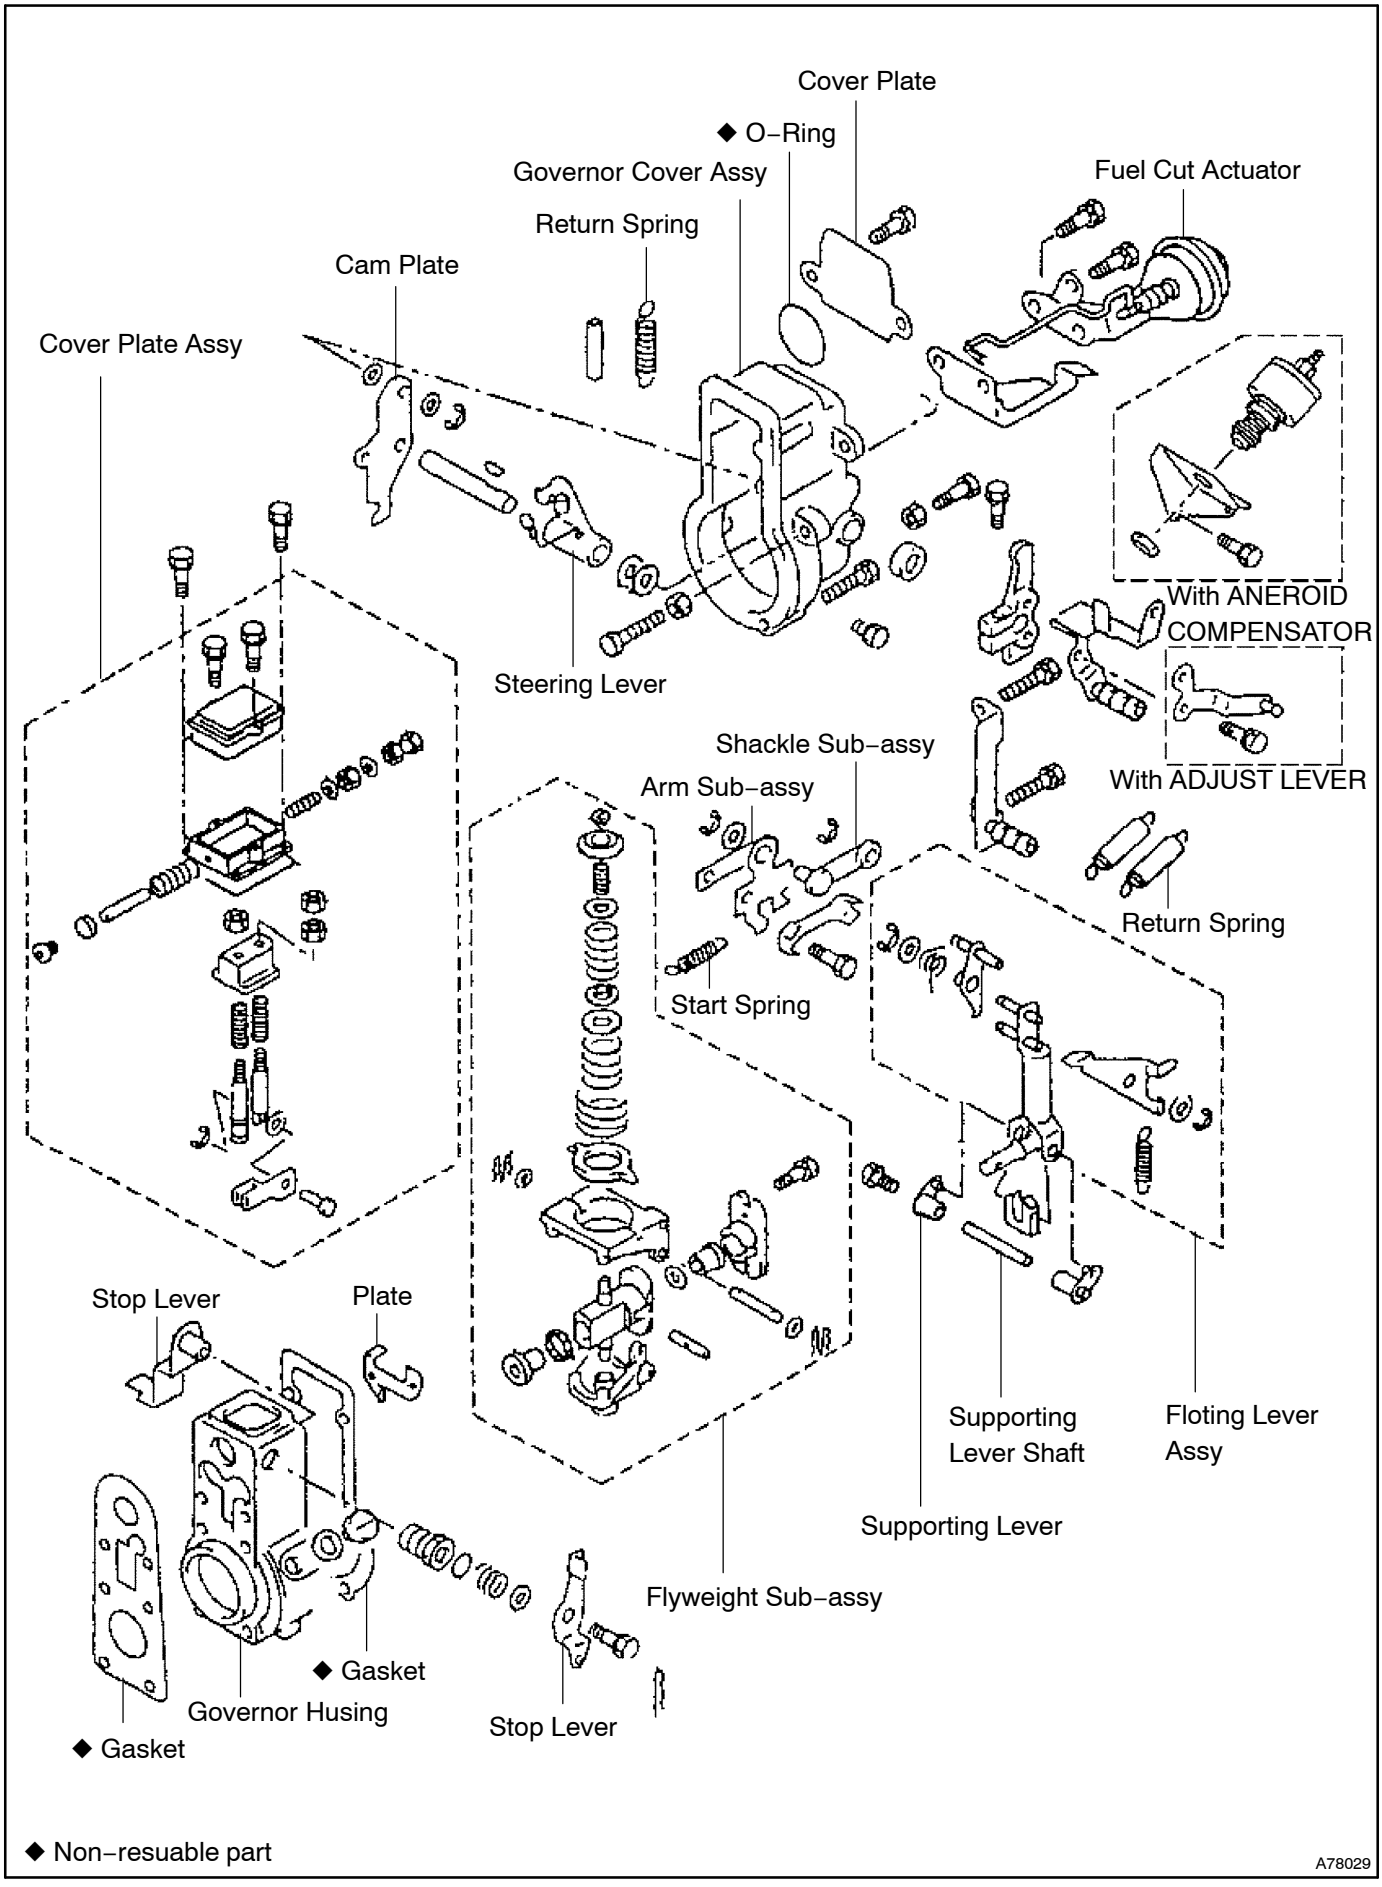
110QT–01

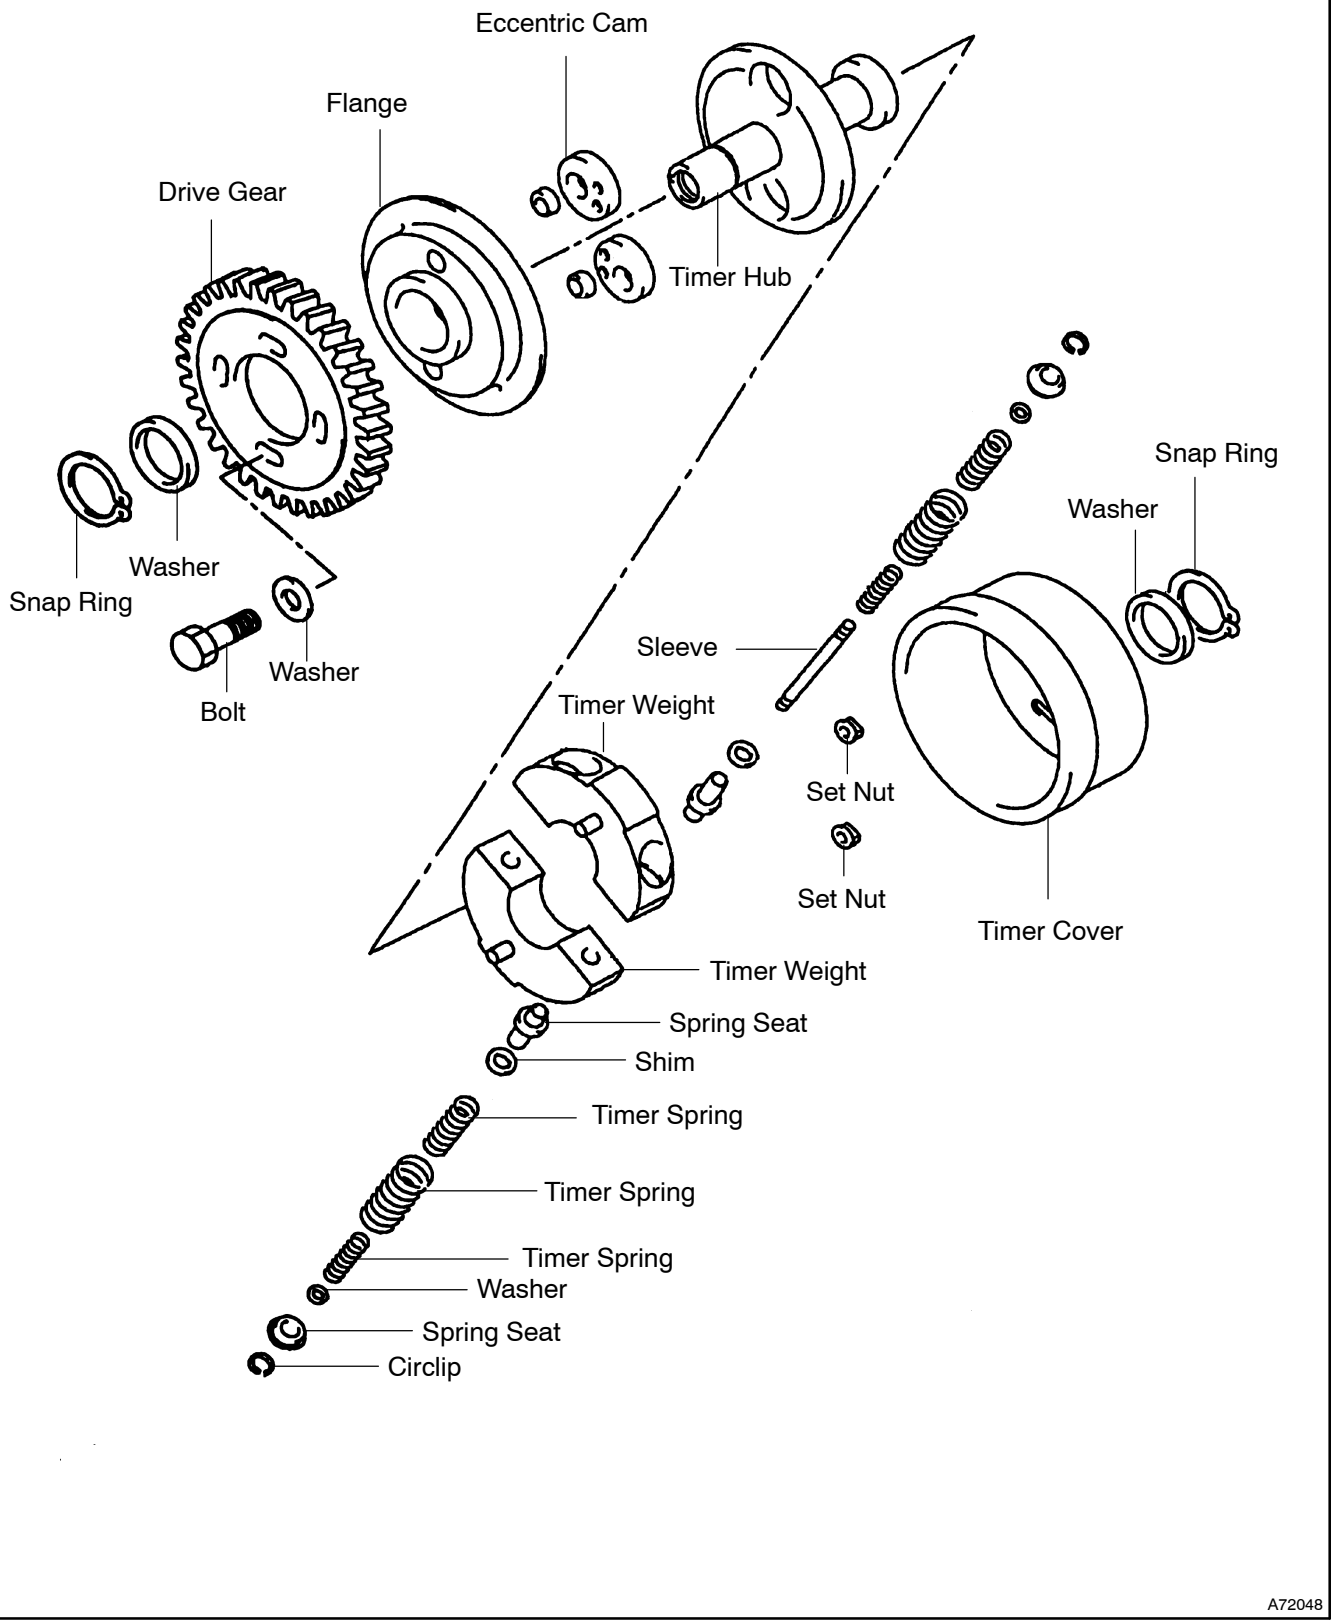


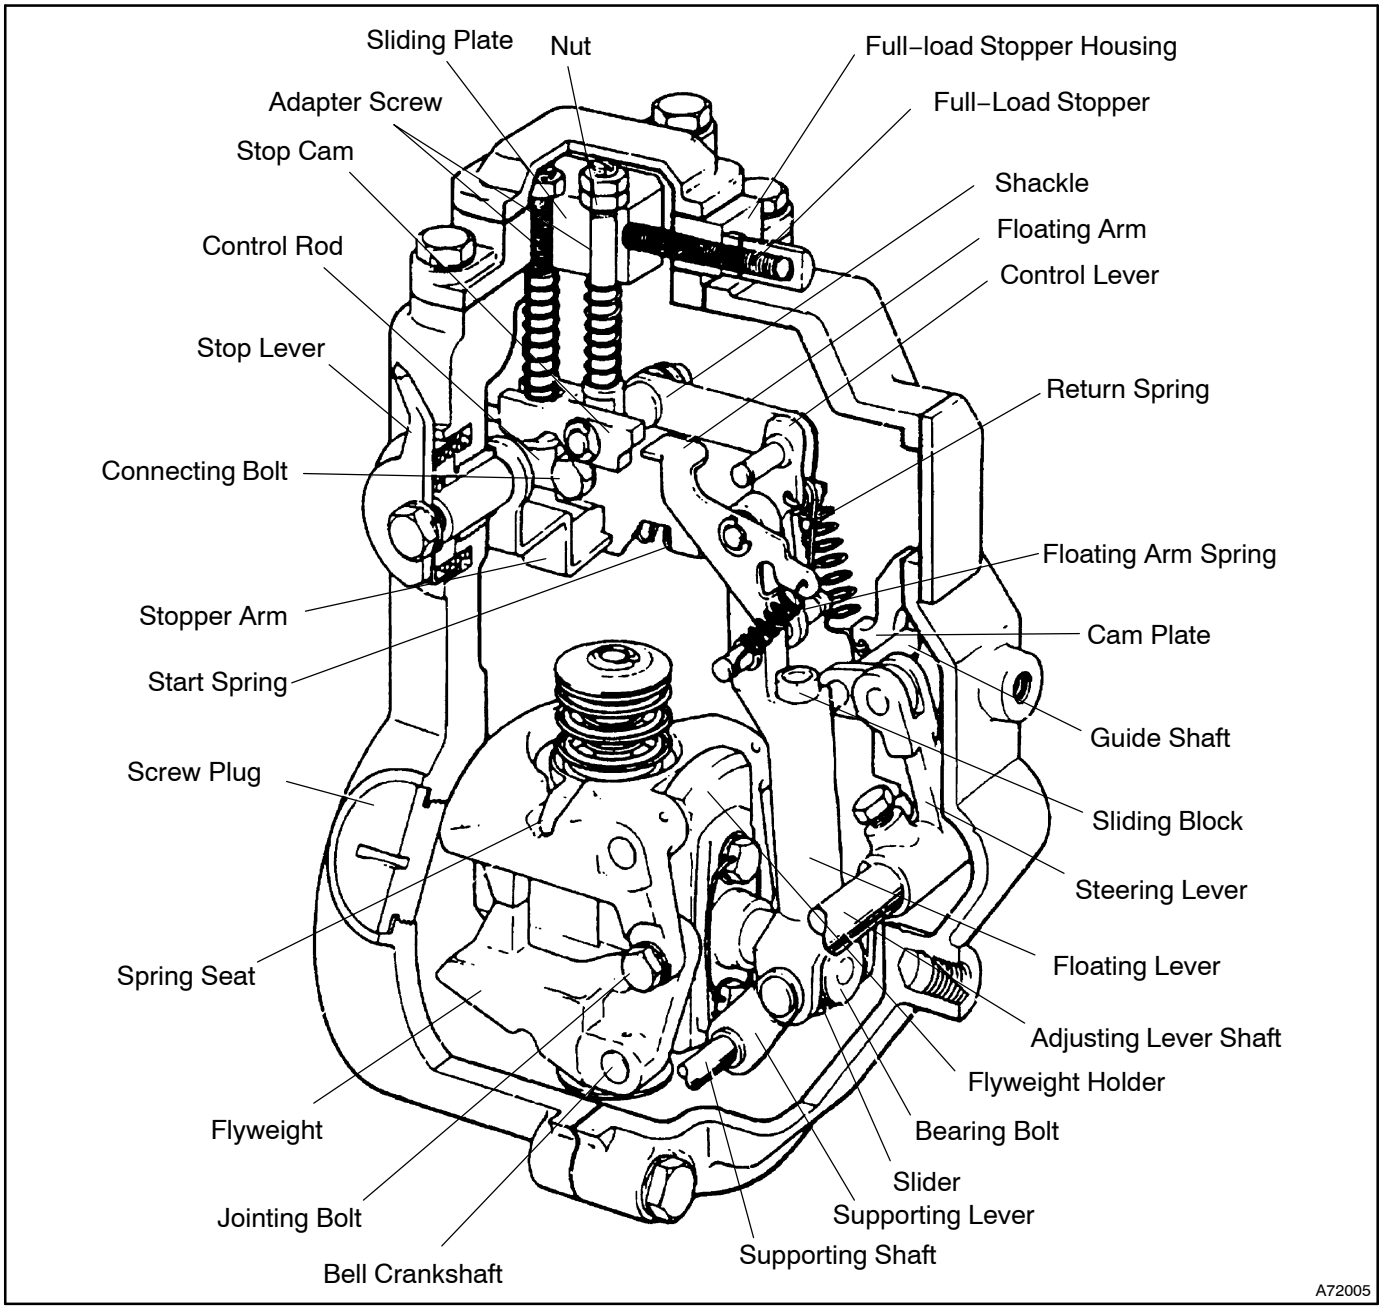


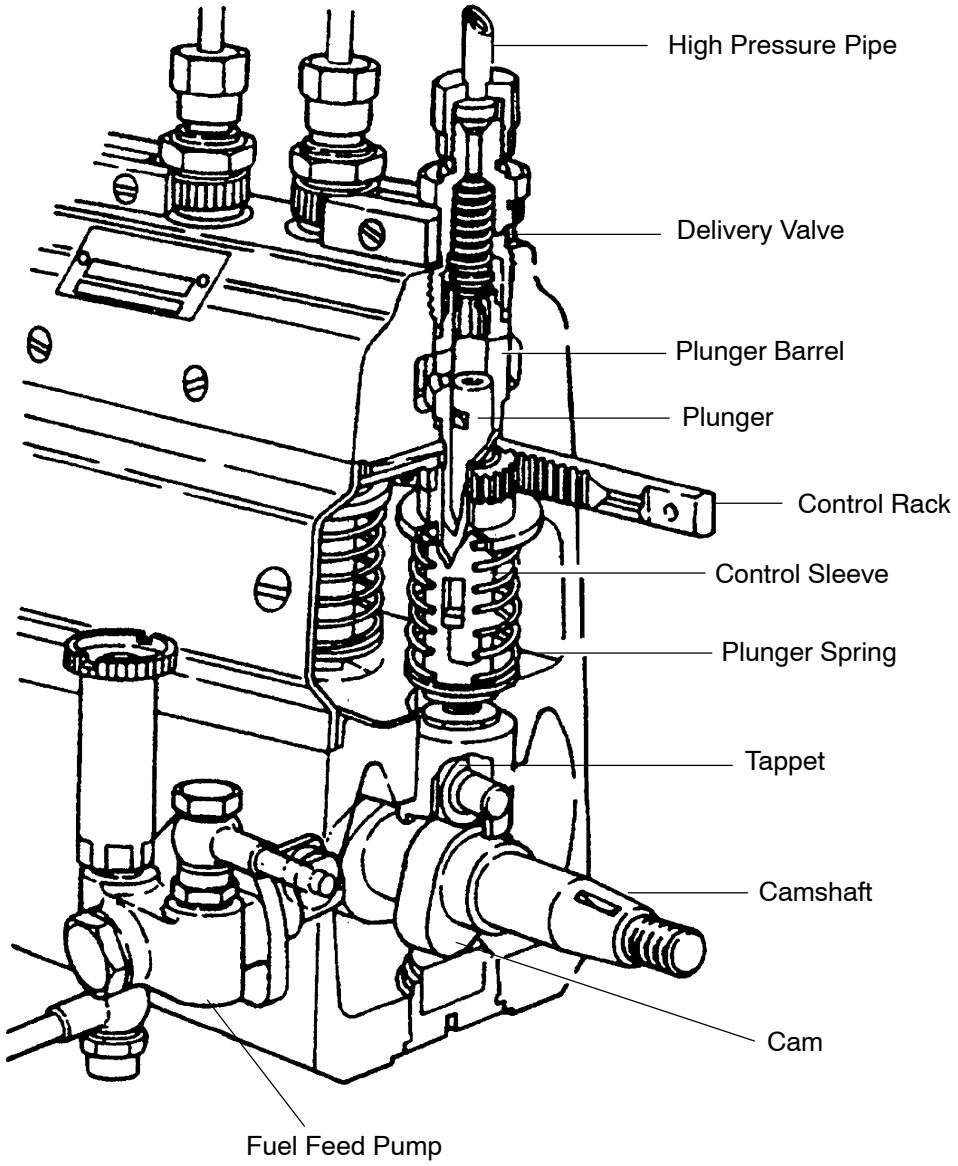
◆ Non–resuable part

A72023

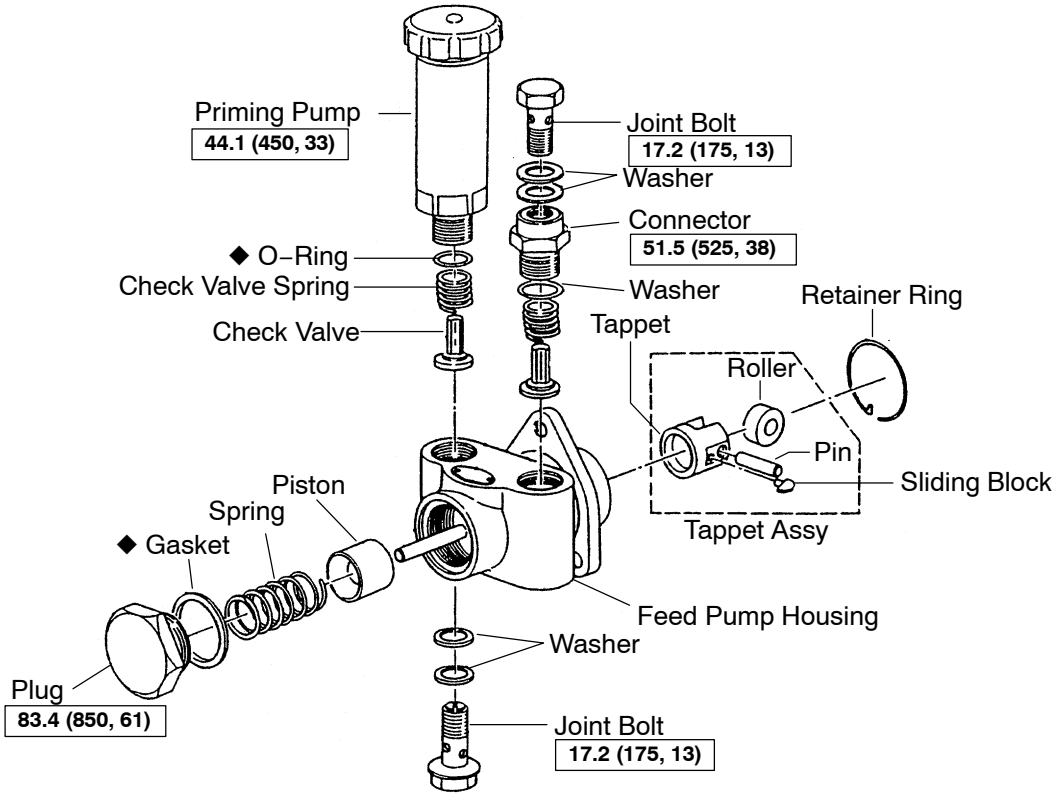

Cover Plate
◆ O–Ring
Governor Cover Assy
Fuel Cut Actuator
Return Spring
Cam Plate
Cover Plate Assy
With ANEROID COMPENSATOR
Steering Lever
With ADJUST LEVER
Shackle Sub–assy
Arm Sub–assy
Return Spring
Start Spring
Stop Lever
Plate
Supporting Lever Shaft
Floting Lever Assy
Supporting Lever
Flyweight Sub–assy
◆ Gasket
Governor Husing
Stop Lever
◆ Gasket
◆ Non–resuable part
A78029


Eccentric Cam
Flange
Drive Gear
Timer Hub
Snap Ring
Washer
Snap Ring
Washer
Bolt
Washer
Sleeve
Timer Weight
Set Nut
Set Nut
Timer Cover
Timer Weight
Spring Seat
Shim
Timer Spring
Timer Spring
Timer Spring
Washer
Spring Seat
Circlip
A72048


Sliding Plate
Nut
Full–load Stopper Housing
Adapter Screw
Full–Load Stopper
Stop Cam
Shackle
Floating Arm
Control Rod
Control Lever
Stop Lever
Return Spring
Connecting Bolt
Floating Arm Spring
Stopper Arm
Cam Plate
Start Spring
Guide Shaft
Screw Plug
Sliding Block
Steering Lever
Spring Seat
Floating Lever
Adjusting Lever Shaft
Flyweight Holder
Flyweight
Bearing Bolt
Slider
Jointing Bolt
Supporting Lever
Supporting Shaft
Bell Crankshaft
A72005


High Pressure Pipe
Delivery Valve
Plunger Barrel
Plunger
Control Rack
Control Sleeve
Plunger Spring
Tappet
Camshaft
Cam
Fuel Feed Pump
A72024

Feed Pump (KS–Type)



N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–resuable part

A72065