
DRIVE BELT (14B)


1416R-01

REPLACEMENT

1. DISCONNECT BATTERY NEGATIVE TERMINAL
2. REMOVE FRONT SEAT ASSEMBLY (DRIVER SEAT) (W/O TILT CAB CAB TYPE) (See page 72–2)
3. REMOVE PARKING BRAKE HOLE COVER (W/O TILT CAB CAB TYPE) (See page 14–23)
4. REMOVE PARKING BRAKE LEVER ASSY (W/O TILT CAB CAB TYPE) (See page 14–23)
5. REMOVE FLOOR SHIFT SHIFT LEVER KNOB SUB–ASSY (W/O TILT CAB CAB TYPE) (See page 14–23)
6. REMOVE SHIFTING HOLE COVER SUB–ASSY AND SHIFT LEVER BOOT COVER (W/O TILT CAB CAB TYPE) (See page 14–23)
7. REMOVE SHIFT AND SELECT TRANSMISSION CONTROL CABLE ASSY (W/O TILT CAB CAB TYPE) (See page 14–23)
8. REMOVE FLOOR SHIFT ASSY (W/O TILT CAB CAB TYPE) (See page 14–23)
9. REMOVE ENGINE SERVICE HOLE SUB COVER SUB–ASSY (W/O TILT CAB CAB TYPE) (See page 14–23)

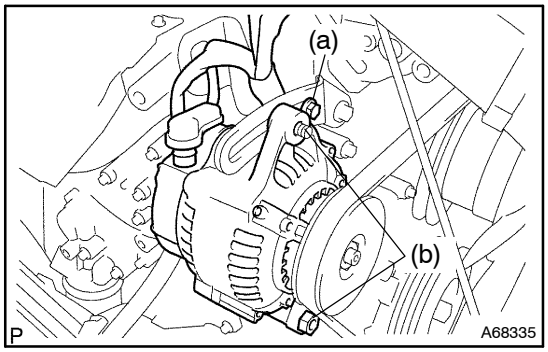

10. REMOVE V BELT
(a) Remove the bolt and wire clamp.
(b) Loosen the 2 bolts and remove the V belt.

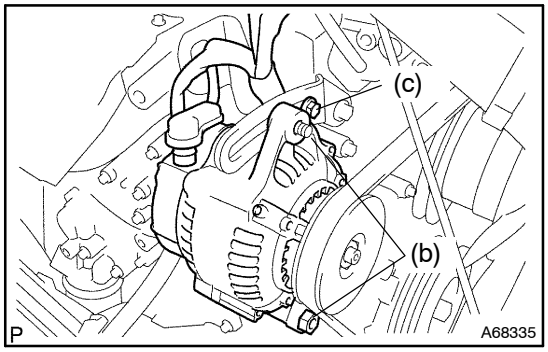

11. INSTALL V BELT
(a) Install the V belt and adjust the belt tension (See page 14–1).
(b) Tighen the 2 bolts.
Torque:
14 mm head: 35 N·m (360 kgf·cm, 26 ft·lbf)
17 mm head: 37.5 N·m (382 kgf·cm, 28 ft·lbf)
(c) Install the wire clamp with the bolt.

12. INSTALL ENGINE SERVICE HOLE SUB COVER SUB–ASSY (W/O TILT CAB CAB TYPE) (See page 14–23)
13. INSTALL FLOOR SHIFT ASSY (W/O TILT CAB CAB TYPE) (See page 14–23)
14. INSTALL SHIFT AND SELECT TRANSMISSION CONTROL CABLE ASSY (W/O TILT CAB CAB TYPE) (See page 14–23)
15. INSTALL PARKING BRAKE LEVER ASSY (W/O TILT CAB CAB TYPE) (See page 14–23)
16. INSTALL FRONT SEAT ASSEMBLY (DRIVER SEAT) (W/O TILT CAB CAB TYPE) (See page 72–2)
17. ADJUST PARKING BRAKE SHOE CLEARANCE (CENTER PARKING BRAKE) (See page 33–11)

18. INSPECT AND ADJUST PARKING BRAKE LEVER TRAVEL (See page 33–11)
19. CONNECT BATTERY NEGATIVE TERMINAL