
DRIVE BELT (15B–FTE)


1417A–01

REPLACEMENT

1. **DISCONNECT BATTERY NEGATIVE TERMINAL**
2. **REMOVE FRONT SEAT ASSEMBLY (DRIVER SEAT) (W/O TILT CAB CAB TYPE) (See page 72–2)**
3. **REMOVE PARKING BRAKE HOLE COVER (W/O TILT CAB CAB TYPE) (See page 33–3)**
4. **REMOVE PARKING BRAKE LEVER ASSY (W/O TILT CAB CAB TYPE) (See page 33–3)**
5. **REMOVE FLOOR SHIFT SHIFT LEVER KNOB SUB–ASSY (W/O TILT CAB CAB TYPE) (See page 41–11)**
6. **REMOVE SHIFTING HOLE COVER SUB–ASSY AND SHIFT LEVER BOOT COVER (W/O TILT CAB CAB TYPE) (See page 41–11)**
7. **REMOVE SHIFT AND SELECT TRANSMISSION CONTROL CABLE ASSY (W/O TILT CAB CAB TYPE) (See page 41–19)**
8. **REMOVE FLOOR SHIFT ASSY (W/O TILT CAB CAB TYPE) (See page 41–11)**
9. **REMOVE ENGINE SERVICE HOLE SUB COVER SUB–ASSY (W/O TILT CAB CAB TYPE) (See page 14–62)**

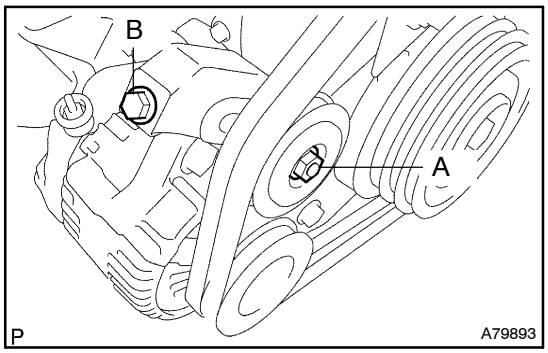

10. **REMOVE V BELT**
(a) Loosen the nut.
(b) By turning the adjusting bolt, remove the V belt.

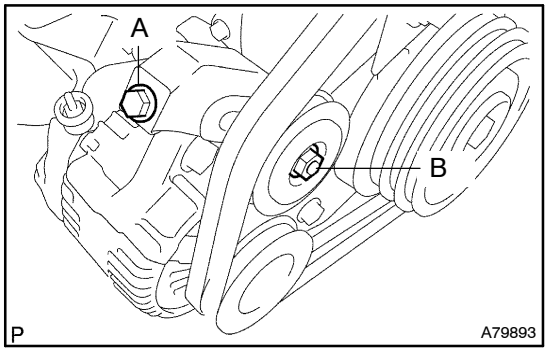

11. **INSTALL V BELT**
(a) Install the V belt and adjust the belt tension (See page 14–40).
(b) Tighen the nut.
Torque: 26 N·m (260 kgf·cm, 19 ft·lbf)

12. **INSTALL ENGINE SERVICE HOLE SUB COVER SUB–ASSY (W/O TILT CAB CAB TYPE) (See page 14–62)**
13. **INSTALL FLOOR SHIFT ASSY (W/O TILT CAB CAB TYPE) (See page 41–11)**
14. **INSTALL SHIFT AND SELECT TRANSMISSION CONTROL CABLE ASSY (W/O TILT CAB CAB TYPE) (See page 41–19)**
15. **INSTALL PARKING BRAKE LEVER ASSY (W/O TILT CAB CAB TYPE) (See page 33–3)**
16. **INSTALL FRONT SEAT ASSEMBLY (DRIVER SEAT) (W/O TILT CAB CAB TYPE) (See page 72–2)**
17. **ADJUST PARKING BRAKE SHOE CLEARANCE (CENTER PARKING BRAKE) (See page 33–2)**

18. INSPECT AND ADJUST PARKING BRAKE LEVER TRAVEL (See page 33–2)

19. CONNECT BATTERY NEGATIVE TERMINAL