
1508T–01


REMOVAL AND INSTALLATION

CAUTION:
Do not touch the exhaust manifold while it is hot. You could be severely burned.

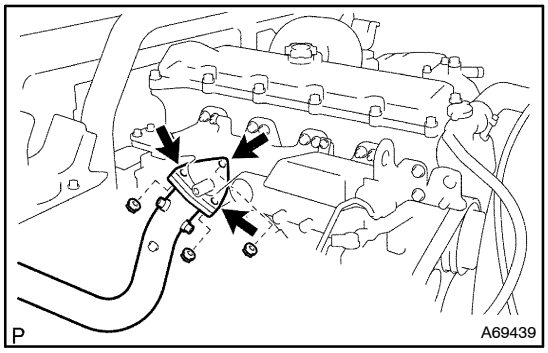


1. DISCONNECT FRONT EXHAUST PIPE ASSY FROM EXHAUST MANIFOLD

(a) Remove the 3 nuts and front exhaust pipe assy.

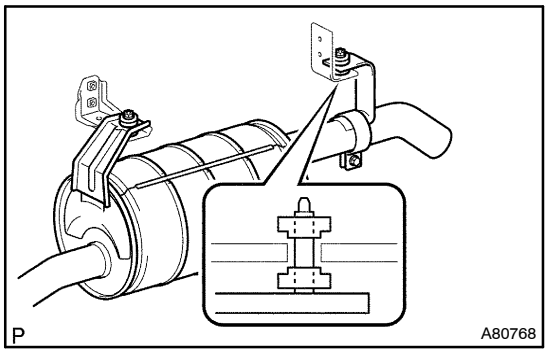

2. REMOVE CENTER EXHAUST PIPE ASSY


(a) Remove the 4 bolts and center exhaust pipe assy from the front exhaust pipe assy.

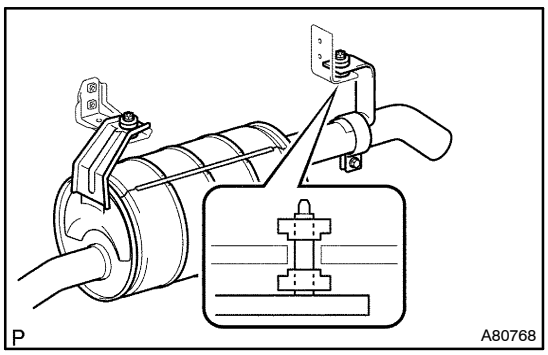

3. INSTALL CENTER EXHAUST PIPE ASSY

NOTICE:
If the position of the tailpipe is incorrectly positioned, exhaust fumes may blow onto passers–by, which could result in burning.

(a) Install the 4 bolts and center exhaust pipe assy to the front exhaust pipe assy.

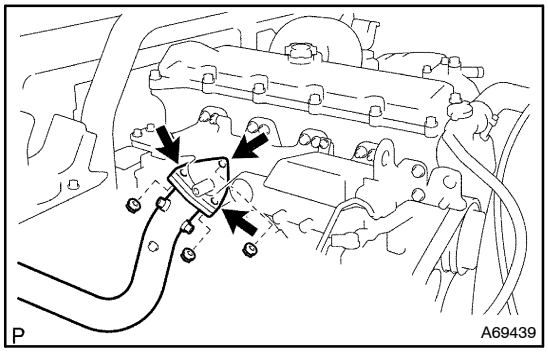

4. CONNECT FRONT EXHAUST PIPE ASSY TO EXHAUST MANIFOLD

Torque: 72 N·m (706 kgf·cm, 53 ft·lbf)

HINT:

- Replace the gasket with a new one.
- The mounting portion of the exhaust manifold is subjected to heat and is likely to come loose, and so special nuts should be employed. Be sure to use the correct nuts.

(a) Connect the front exhaust pipe assy with the 3 nuts.