
COOLING SYSTEM (15B–FTE)

160K1–01

ON–VEHICLE INSPECTION

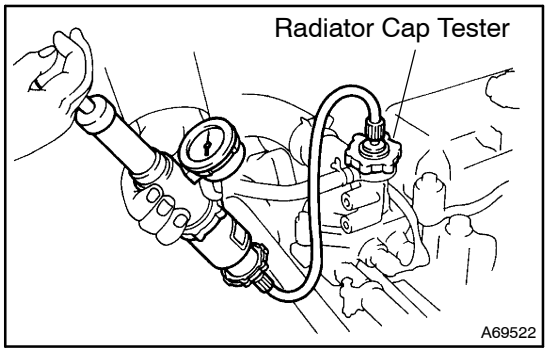

1. INSPECT COOLING SYSTEM FOR LEAKS

(a) Fill the radiator with coolant and attach a radiator cap tester.
(b) Warm up the engine.
(c) Stop the engine when it is warmed up.
(d) Pump the radiator cap tester to 118 kPa (1.2 kgf/cm^2, 17.1 psi), and check that the pressure does not drop.

If the pressure drops, check the hoses, radiator or water pump for leaks. If no external leaks are found, check the heater core, cylinder block and cylinder head.

2. REINSTALL RADIATOR CAP