
160KP–01

REPLACEMENT

1. DRAIN ENGINE COOLANT
2. DISCONNECT RADIATOR RESERVE TANK HOSE OR PIPE
3. DISCONNECT RADIATOR HOSE INLET
4. DISCONNECT RADIATOR HOSE OUTLET

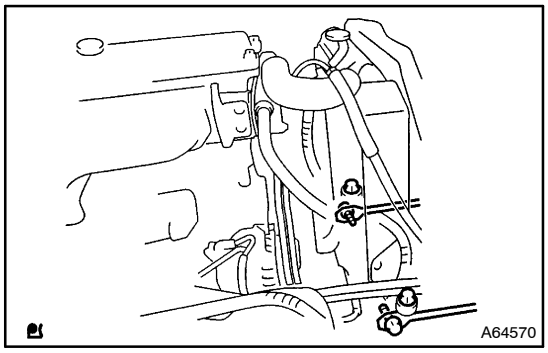


5. REMOVE RADIATOR ASSY

(a) Disconnect the heater hose and air conditioner hose together with the brackets from the radiator.

(b) Remove the 2 nuts and 2 bolts from the stay on the radiator mounting bracket to remove the radiator together with the fan shroud.

(c) Take out the fan shroud from the radiator.

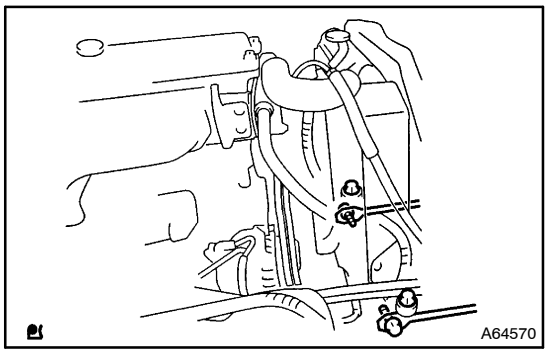

6. INSTALL RADIATOR ASSY

(a) Install the fan shroud to the radiator.

(b) Install the radiator with the 2 bolts and 2 nuts.
Torque:
18 N·m (184 kgf·cm, 13 ft·lbf) for bolt
7.5 N·m (76 kgf·cm, 66 in.·lbf) for nut

(c) Install the heater hose and air conditioner hose to the radiator.

7. REFILL ENGINE COOLANT
8. CHECK FOR ENGINE COOLANT LEAKS