
SUB–ASSY OIL NOZZLE NO.1 (15B–FTE)

170EB–01


REPLACEMENT

1. **DISCONNECT BATTERY NEGATIVE TERMINAL**
2. **DRAIN ENGINE OIL**
3. **REMOVE OIL PAN AND OIL STRAINER (See page 17–22)**

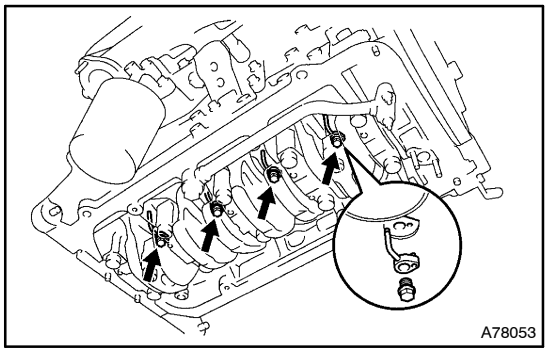

4. **REMOVE SUB–ASSY OIL NOZZLE NO.1**

(a) Remove the 4 check valves and oil nozzles.

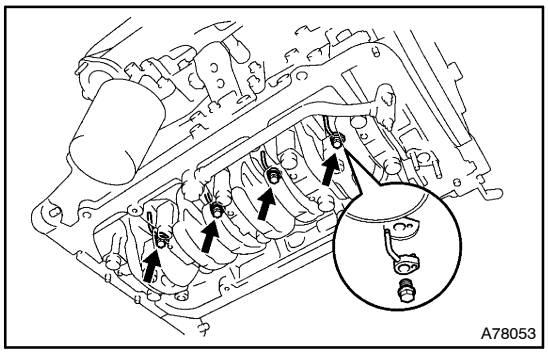

5. **INSTALL SUB–ASSY OIL NOZZLE NO.1**

(a) Align the pin of the oil nozzle with the pin hole of the cylinder block.

(b) Install the oil nozzle with the check valve. Install the 4 oil nozzles and 4 check valves.
Torque: 30 N·m (306 kgf·cm, 22 ft·lbf)

6. **INSTALL OIL PAN AND OIL STRAINER (See page 17–22)**
7. **BLEED FUEL (See page 11–57)**
8. **ADD ENGINE OIL**
9. **CONNECT BATTERY NEGATIVE TERMINAL**
10. **CHECK ENGINE OIL LEVEL**
11. **CHECK FOR ENGINE OIL LEAKS**
12. **INSPECT FOR FUEL LEAKS**