
FRONT SPRING ASSY LH (RUBBER BUSH TYPE)

COMPONENTS

260D4–01

Standard Cab Models (w/o Stabilizer)

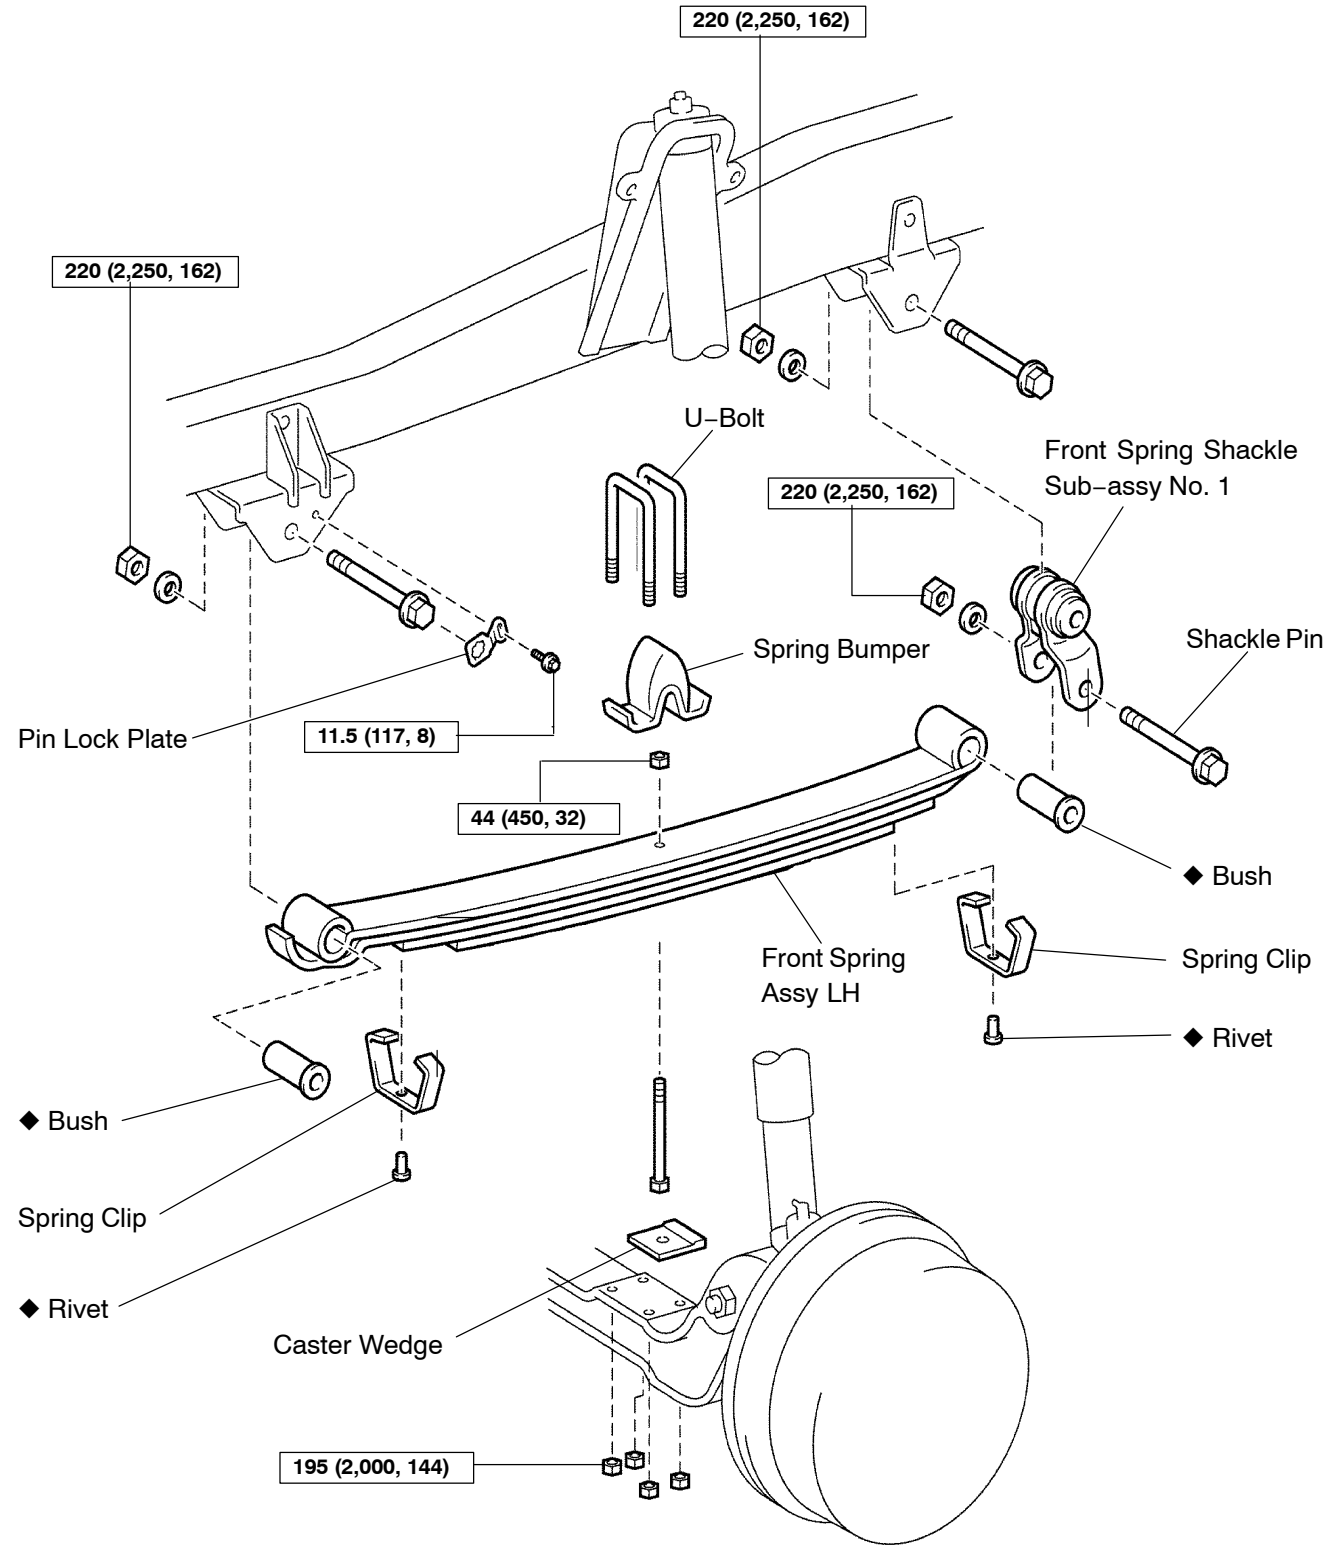


N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non–reusable part

C95180

Standard Cab Models (w/ Stabilizer)

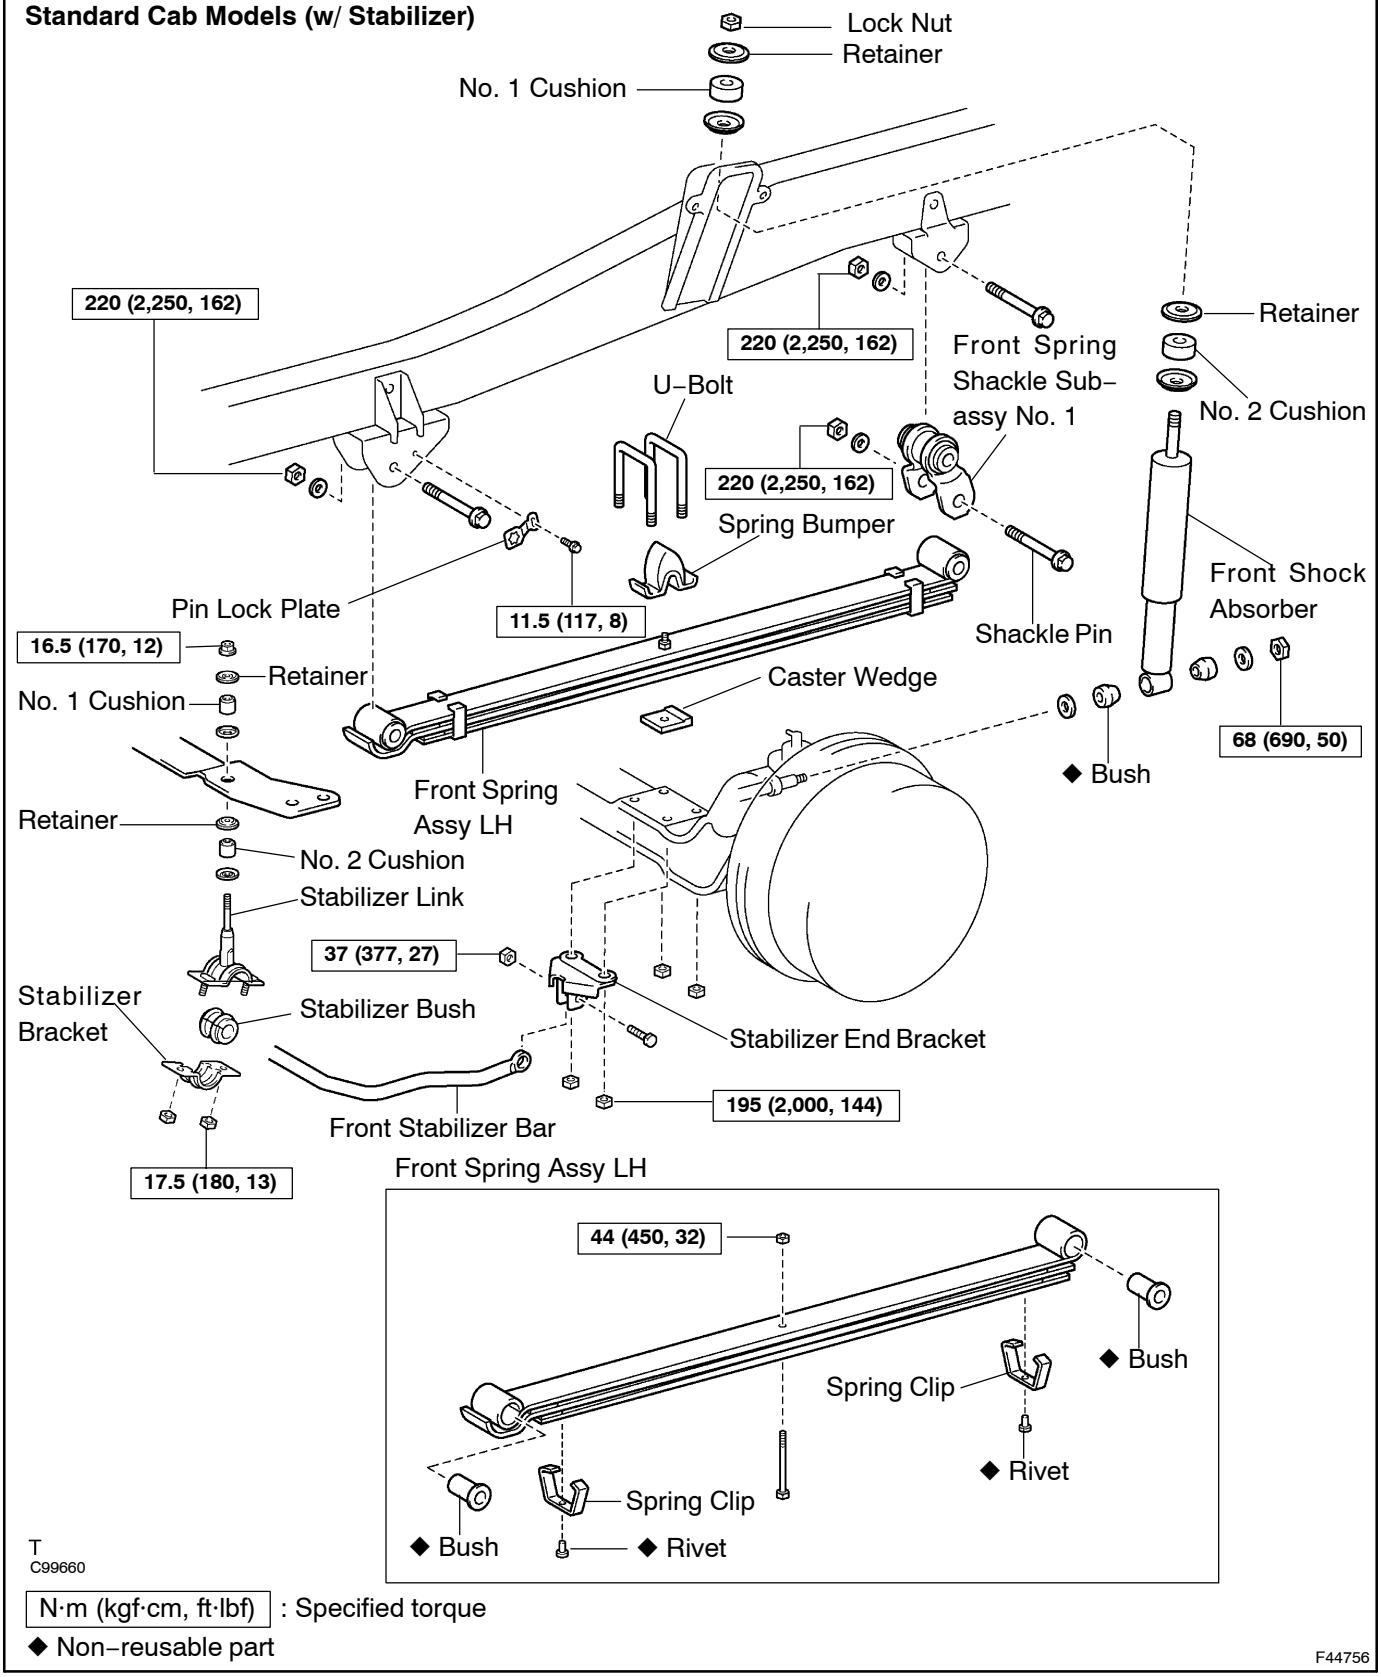


T
C99660

N·m (kgf·cm, ft·lbf) : Specified torque


◆ Non–reusable part

F44756

Wide Cab 2.0 t Models (w/o Stabilizer)

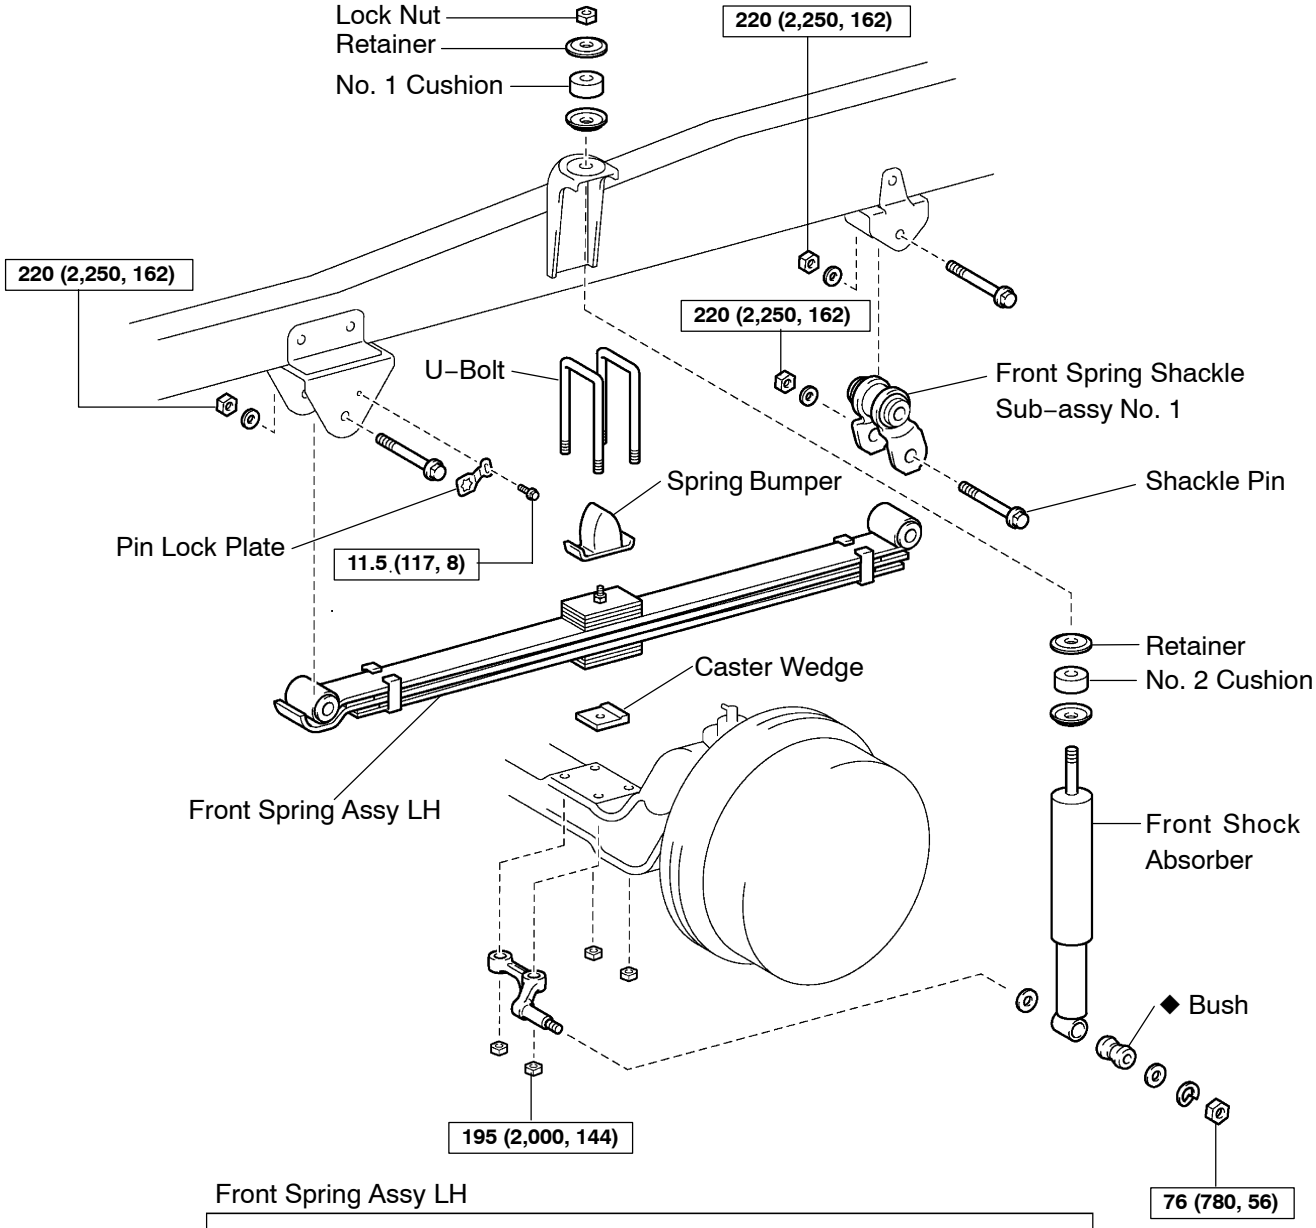

Front Spring Assy LH

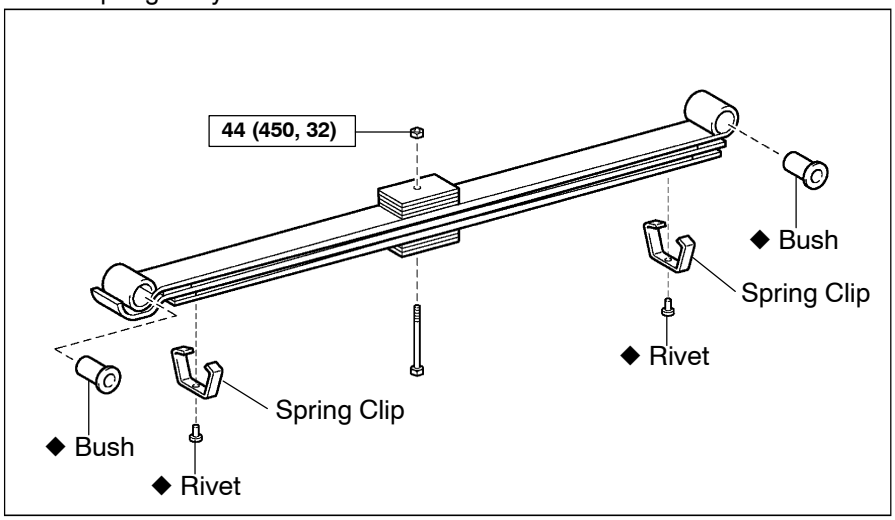


T
C99661

N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part

F44757

Wide Cab 2.0 t Models (w/ Stabilizer)

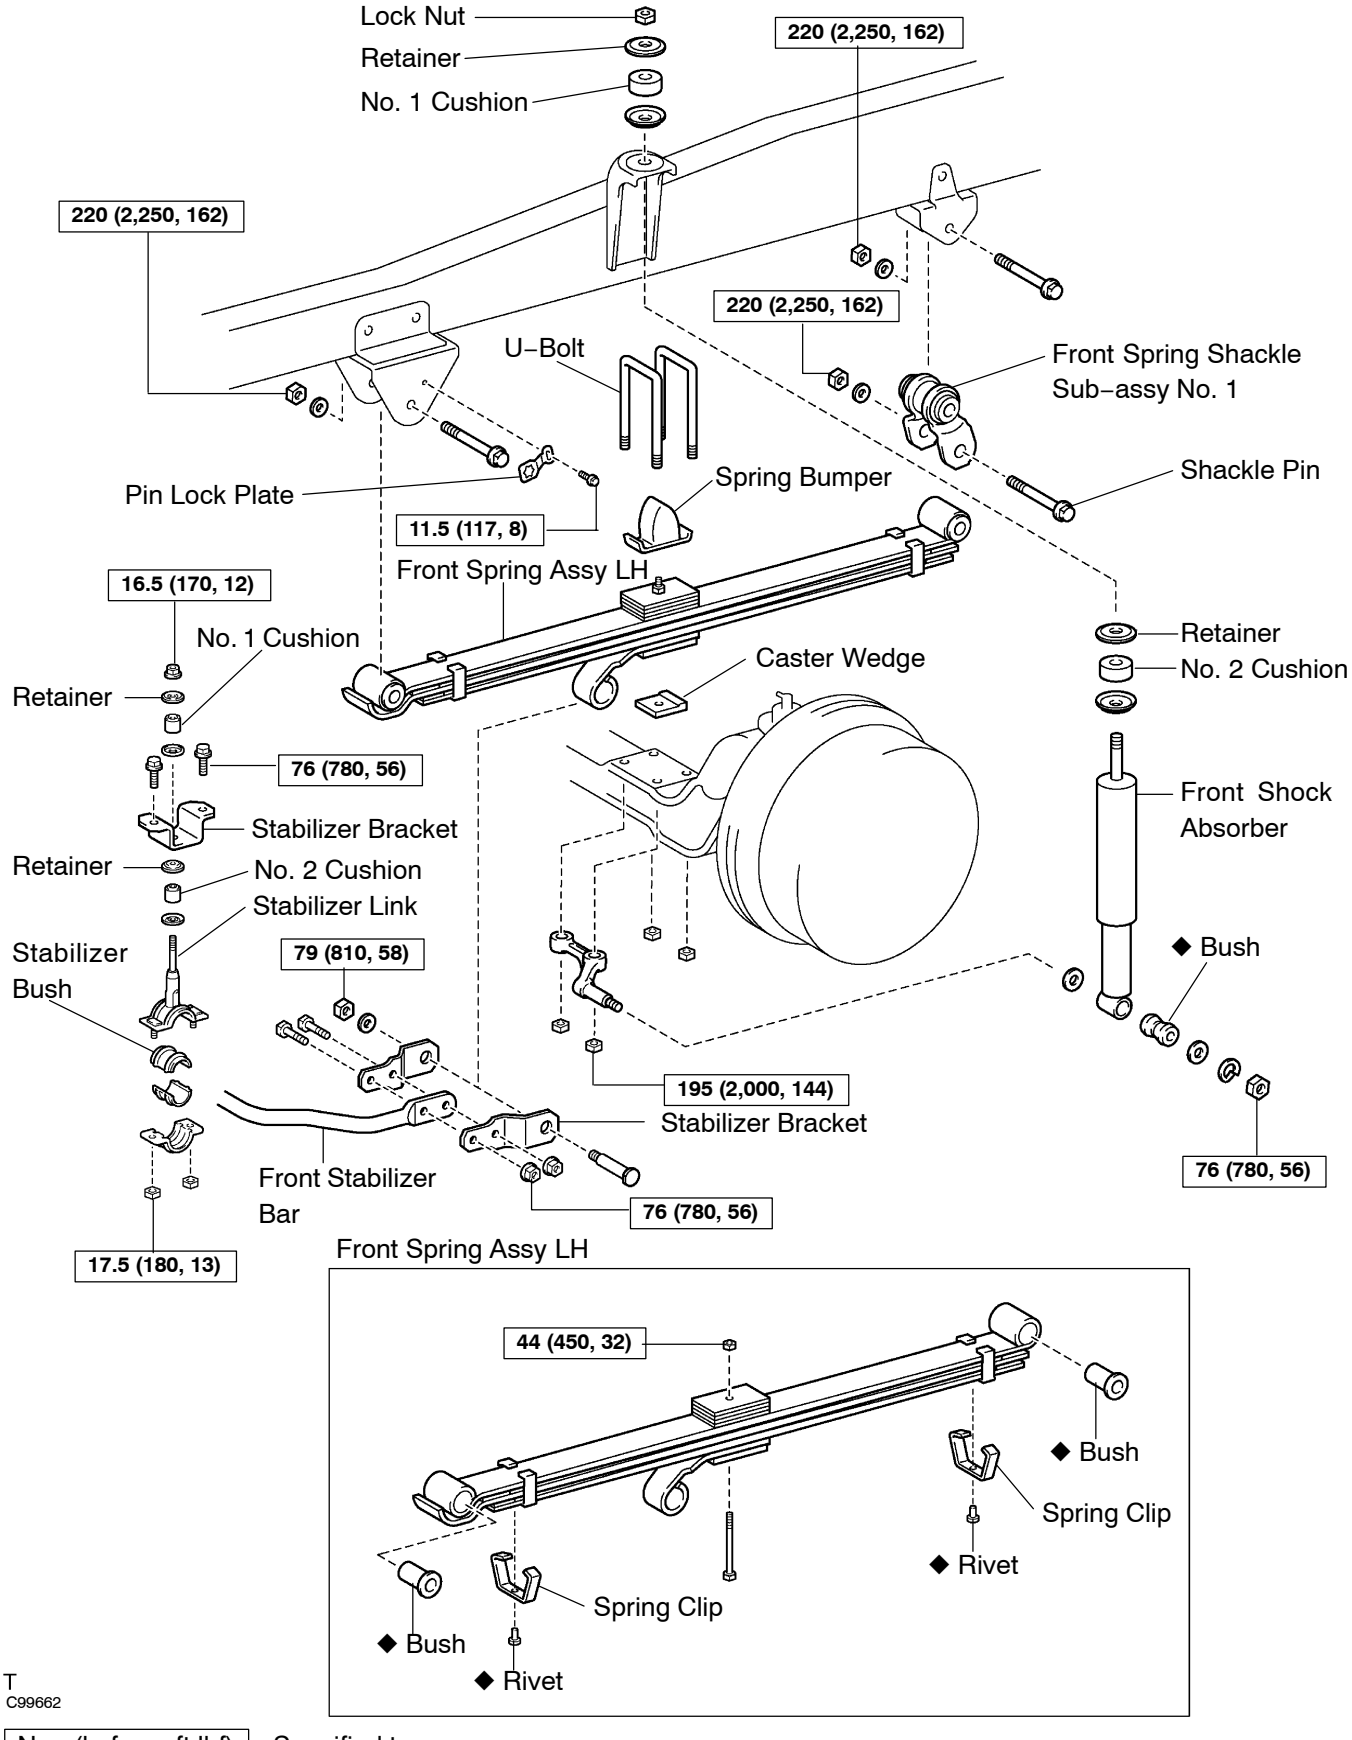

T
C99662

N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non–reusable part

F44758