FRONT AXLE LH HUB BOLT


300IV–01

REPLACEMENT


HINT:

On the RH side, use the same procedures as on the LH side.

1. **REMOVE FRONT AXLE HUB SUB–ASSY LH (See page 30–40 and 30–45)**

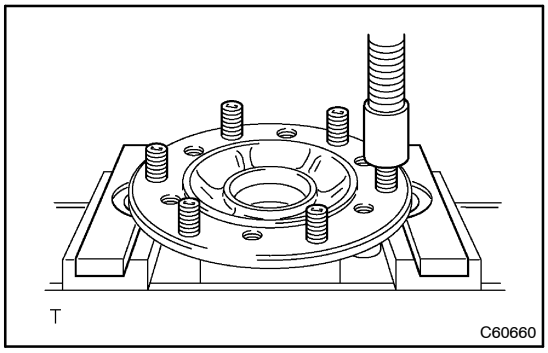

2. **REMOVE FRONT AXLE LH HUB BOLT**

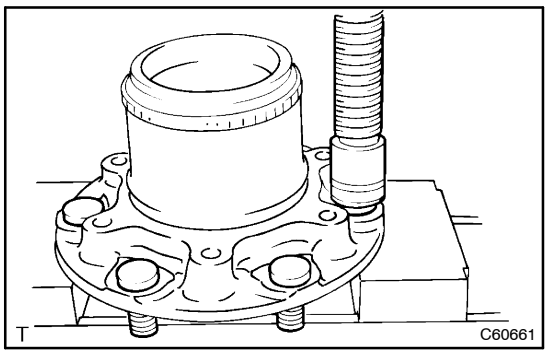

3. **INSTALL FRONT AXLE LH HUB BOLT**

4. **INSTALL FRONT AXLE HUB SUB–ASSY LH (See page 30–40 and 30–45)**