
300J3–01

REPLACEMENT


HINT:
On the RH side, use the same procedures as on the LH side.

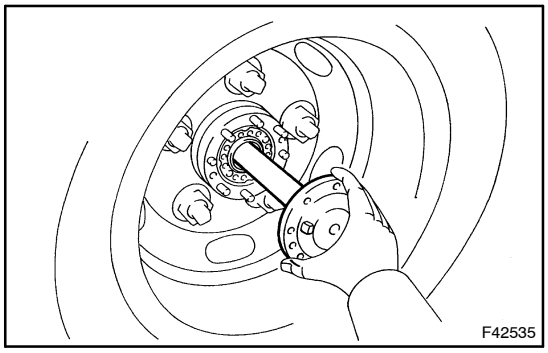

1. REMOVE REAR AXLE SHAFT

(a) Remove the 10 bolts and 10 washers.
(b) Remove the rear axle shaft.


NOTICE:
Be careful not to damage the oil seal while the rear axle shaft splines.

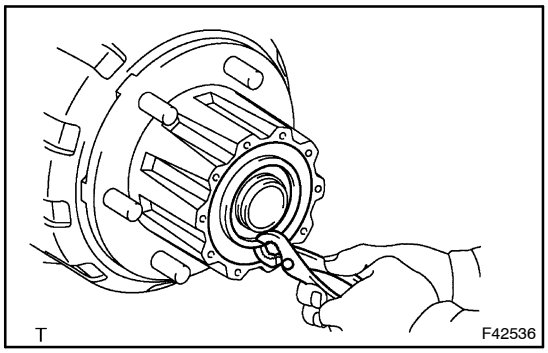

2. REMOVE REAR AXLE SHAFT OIL SEAL

(a) Using pliers, remove the oil seal.


NOTICE:
- **Be careful not to damage the axle tube.**
- **Do not use a screwdriver.**
- **Do not pry up the oil seal.**

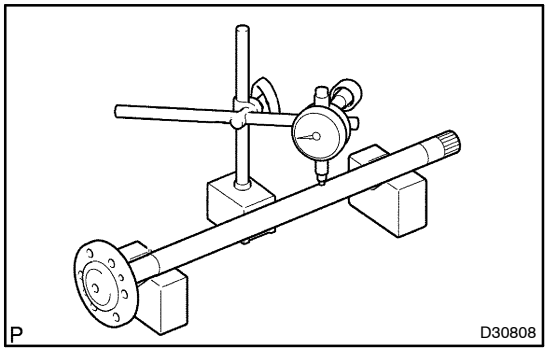

3. INSPECT REAR AXLE SHAFT

(a) Using a dial indicator, measure the rear axle shaft runout.
Maximum runout: 0.8 mm (0.031 in.)

If the runout is greater than the maximum, replace the rear axle shaft.

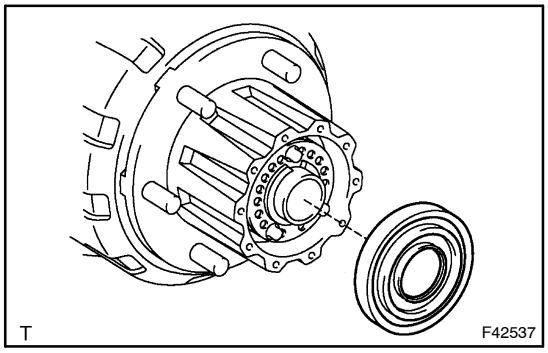

4. INSTALL REAR AXLE SHAFT OIL SEAL

(a) Push in a new oil seal to the axle hub.

NOTICE:
Be careful not to damage the oil seal.

5. INSTALL REAR AXLE SHAFT

(a) Install the rear axle shaft.
(b) Install the 10 bolts and 10 washers.
Torque: 97 N·m (985 kgf·cm, 71 ft·lbf)