
BRAKE BOOSTER ASSY

320TU–01

ON–VEHICLE INSPECTION

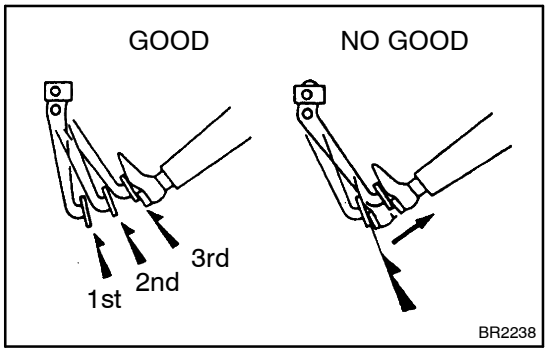

1. INSPECT BRAKE BOOSTER


(a) Check the air tightness.

(1) Start the engine and stop it after 1 or 2 minutes, and then slowly depress the brake pedal several times.

When the pedal goes down more the furthest in the 1st time but gradually rises after the 2nd or 3rd time, air in the booster is tight.

(2) Depress the brake pedal while the engine is running, and stop the engine with the pedal depressed.

If there is no difference in the pedal reserve distance after holding the pedal for 30 seconds, the booster is airtight.

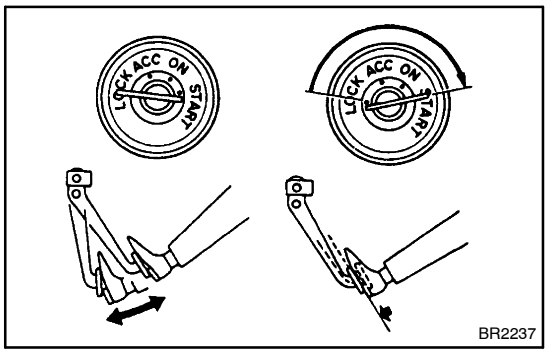

(b) Check the operation of the brake pedal.

(1) Depress the brake pedal several times with the ignition switch OFF, and check that there is no difference in the pedal reserve distance.

(2) Depress the brake pedal and start the engine.

If the pedal goes down slightly, the operation is normal.