330BF–01

ADJUSTMENT


1. ADJUST PARKING BRAKE SHOE CLEARANCE (See page 33–11)

2. INSPECT PARKING BRAKE LEVER TRAVEL

(a) Pull the parking brake lever all the way up, and count the number of clicks at 250 N (25 kgf, 55 lbf).
Parking brake: 6 – 10 clicks

If incorrect, adjust the parking brake.

3. REMOVE PARKING BRAKE HOLE COVER

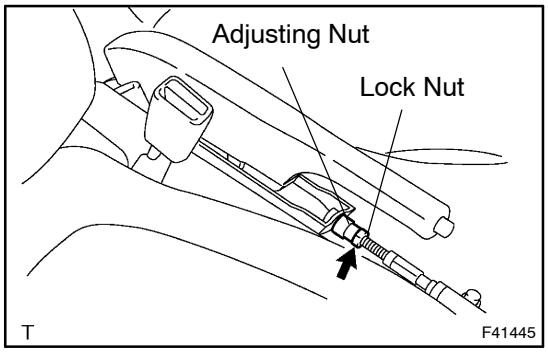

4. ADJUST PARKING BRAKE LEVER TRAVEL

(a) Loosen the lock nut, and turn the adjusting nut until the lever travel becomes correct.

(b) Fixing the adjusting nut, tighten the lock nut.
Torque: 7.8 N·m (80 kgf·cm, 69 in.·lbf)

(c) Check whether the parking brake drags or not.

(d) When operating the parking brake lever, check that the brake indicator light lights up.

5. INSTALL PARKING BRAKE HOLE COVER