
PARKING BRAKE LEVER ASSY

330BG–01


REPLACEMENT

1. REMOVE FLOOR SHIFT SHIFT LEVER KNOB SUB–ASSY
2. REMOVE SHIFTING HOLE COVER SUB–ASSY
3. REMOVE SHIFT LEVER HOLE COVER
4. REMOVE PARKING BRAKE HOLE COVER

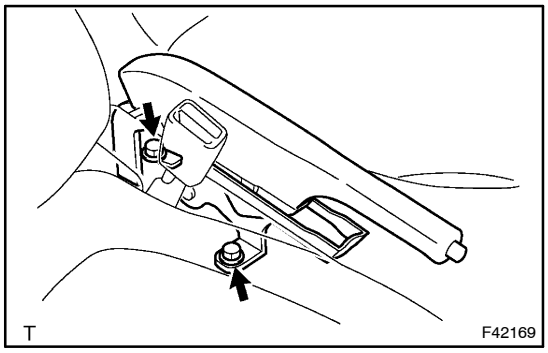

5. REMOVE PARKING BRAKE LEVER ASSY
(a) Disconnect the parking brake switch connector.
(b) Fixing the adjusting nut, loosen the lock nut.
(c) Remove the 2 bolts.
(d) Disconnect the parking brake cable No. 1, and remove the parking brake lever.

6. REMOVE PARKING BRAKE SWITCH ASSY
7. INSTALL PARKING BRAKE SWITCH ASSY

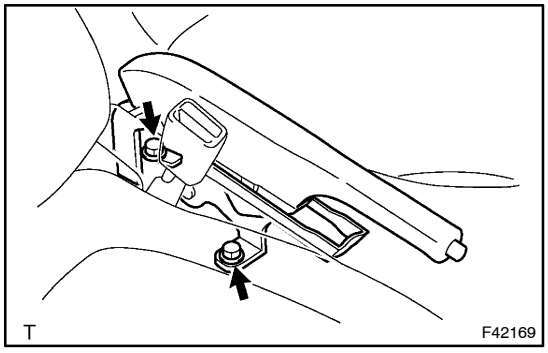

8. INSTALL PARKING BRAKE LEVER ASSY
(a) Connect the parking brake cable No. 1 to the parking brake lever.
(b) Install the and parking brake lever with the 2 bolts.
Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)
(c) Connect the parking brake switch connector.

9. ADJUST PARKING BRAKE SHOE CLEARANCE (See page 33–3)
10. INSPECT AND ADJUST PARKING BRAKE LEVER TRAVEL (See page 33–2)
11. INSTALL PARKING BRAKE HOLE COVER
12. INSTALL SHIFT LEVER HOLE COVER
13. INSTALL SHIFTING HOLE COVER SUB–ASSY
14. INSTALL FLOOR SHIFT SHIFT LEVER KNOB SUB–ASSY