
PARKING BRAKE CABLE ASSY NO.2

330BH–01

REPLACEMENT

1. REMOVE FLOOR SHIFT SHIFT LEVER KNOB SUB–ASSY
2. REMOVE SHIFTING HOLE COVER SUB–ASSY
3. REMOVE SHIFT LEVER HOLE COVER
4. REMOVE PARKING BRAKE HOLE COVER
5. REMOVE PARKING BRAKE LEVER ASSY (See page 33–3)
6. REMOVE SHIFT AND SELECT TRANSMISSION CONTROL CABLE ASSY (See page 41–19)

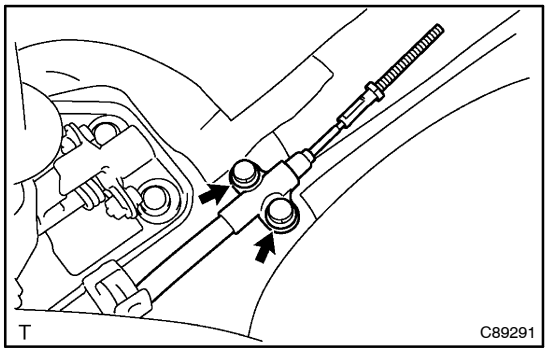


7. REMOVE PARKING BRAKE CABLE ASSY NO.2

(a) Remove the 2 bolts, and disconnect the parking brake cable No. 2 from the floor panel.


(b) Disconnect the parking brake cable No. 2 from the No. 3.

(c) Remove the clamp, clips and parking brake cable No. 2.

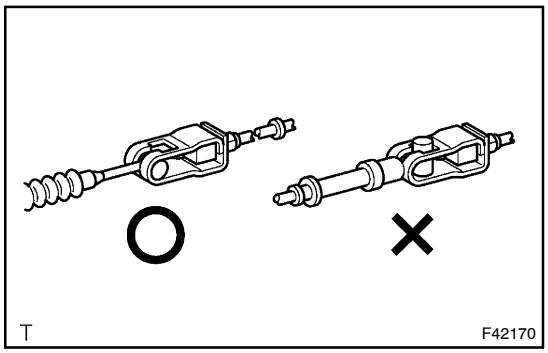

8. INSTALL PARKING BRAKE CABLE ASSY NO.2


(a) Connect the parking brake cable No. 2 to the No. 3, as shown in the illustration.

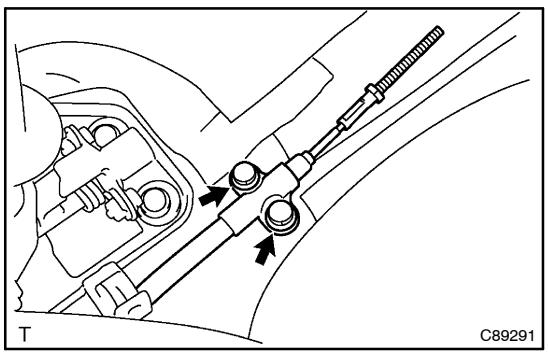


(b) Connect the parking brake cable No. 2 to the floor panel with the 2 bolts.

Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

(c) Install the clamp and clips, as shown in the illustration.
Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

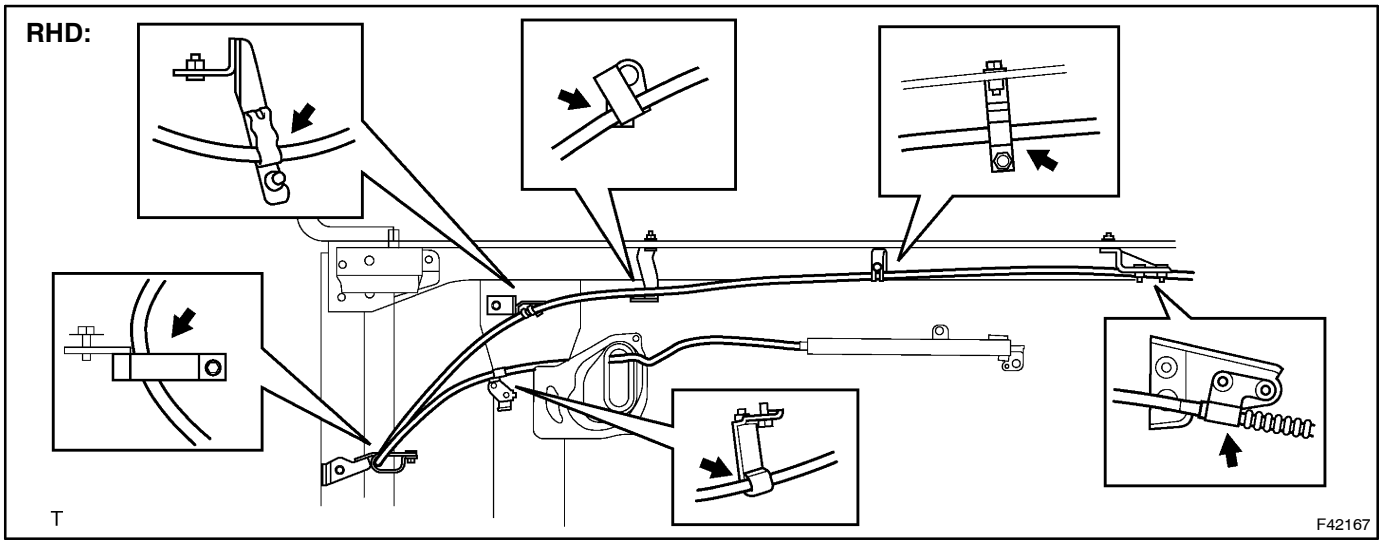

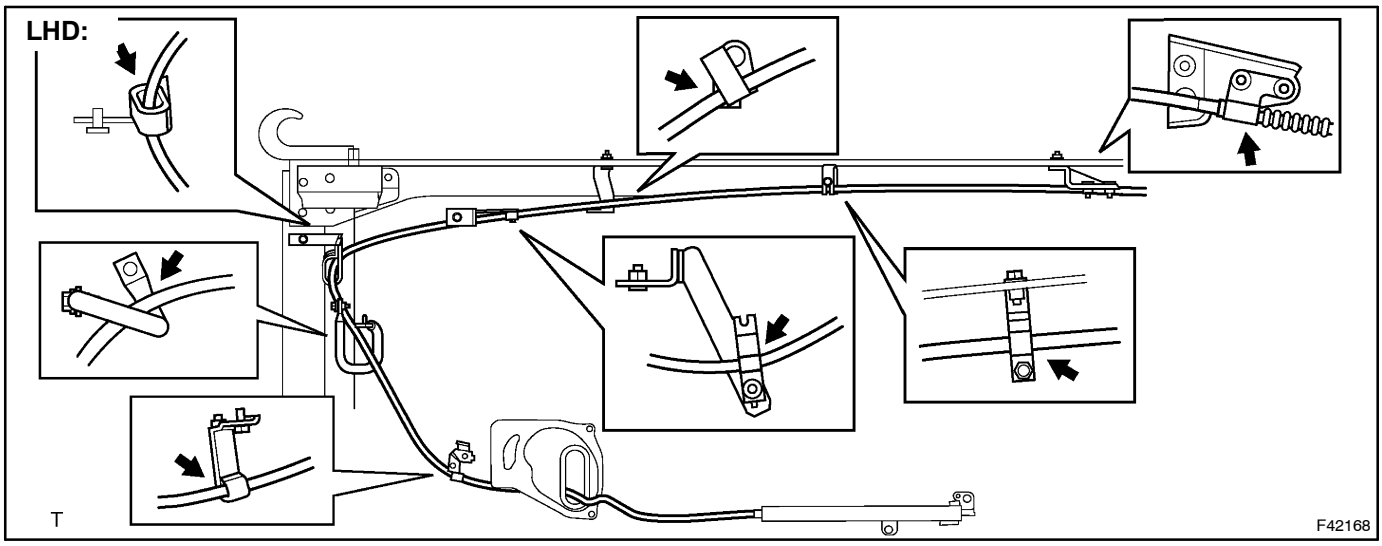

9. **INSTALL SHIFT AND SELECT TRANSMISSION CONTROL CABLE ASSY (See page 41–19)**
10. **INSTALL PARKING BRAKE LEVER ASSY (See page 33–3)**
11. **ADJUST PARKING BRAKE SHOE CLEARANCE**
12. **INSPECT AND ADJUST PARKING BRAKE LEVER TRAVEL**
13. **INSTALL PARKING BRAKE HOLE COVER**
14. **INSTALL SHIFT LEVER HOLE COVER**
15. **INSTALL SHIFTING HOLE COVER SUB–ASSY**
16. **INSTALL FLOOR SHIFT SHIFT LEVER KNOB SUB–ASSY**
17. **DRIVE TEST**