
PARKING BRAKE CABLE ASSY NO.3

330BI–01


REPLACEMENT

1. REMOVE PROPELLER SHAFT ASSY (See page 30–6, 30–14, 30–22, 30–29)
2. REMOVE PARKING BRAKE DRUM SUB–ASSY (See page 33–11)
3. REMOVE PARKING BRAKE SHOE RETURN TENSION SPRING (See page 33–11)
4. REMOVE PARKING BRAKE SHOE (See page 33–11)

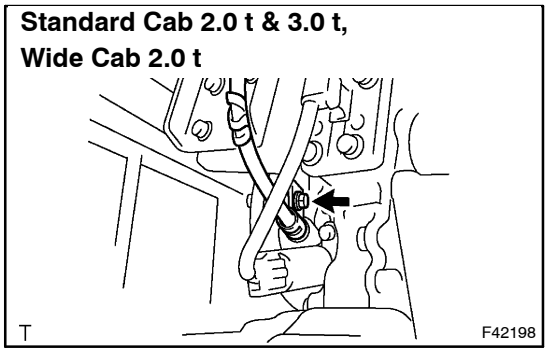


5. REMOVE PARKING BRAKE CABLE ASSY NO.3


(a) Standard cab 2.0 t & 3.0 t, Wide cab 2.0 t:
Disconnect the parking brake cable assy No. 3.
(1) Remove the bolt and clamp from the parking brake shoe back plate.
(2) Disconnect the parking brake cable assy No. 3 from the parking brake shoe back plate.
(3) Remove the inner wire spring, E–ring, collar and dust seal from the cable assy No. 3.

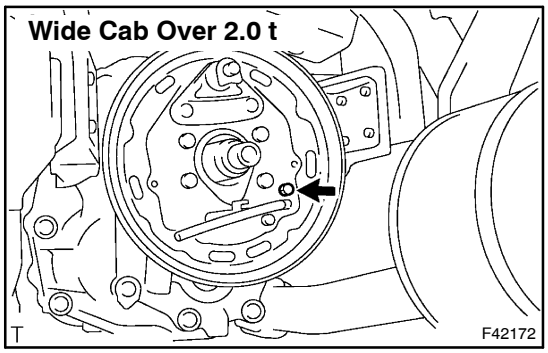

(b) Wide cab over 2.0 t:
Disconnect the parking brake cable assy No. 3.
(1) Remove the bolt from the parking brake shoe backing plate.
(2) Remove the E–ring, and disconnect the parking brake cable No. 3 from the backing plate.
(3) Remove the dust seal and collar from the cable.

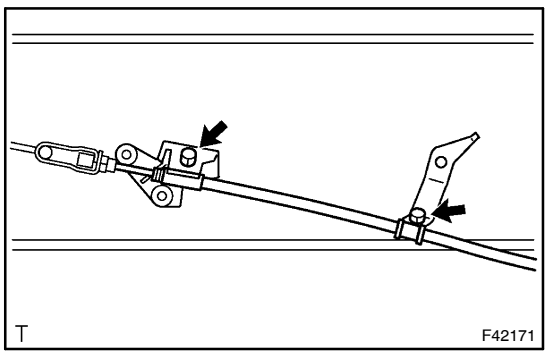


(c) Remove the 2 bolts, and disconnect the parking brake cable No. 3.
(d) Remove the parking brake cable No. 3 from the No. 2.

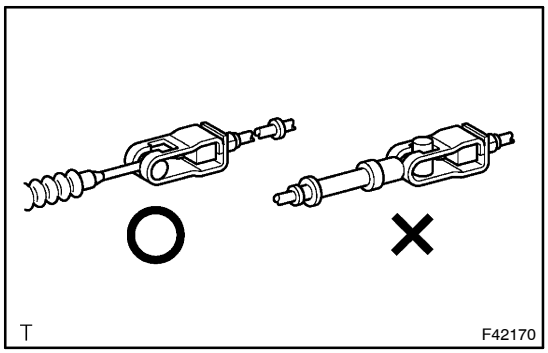


6. INSTALL PARKING BRAKE CABLE ASSY NO.3


(a) Connect the parking brake cable No. 3 to the No. 2, as shown in the illustration.

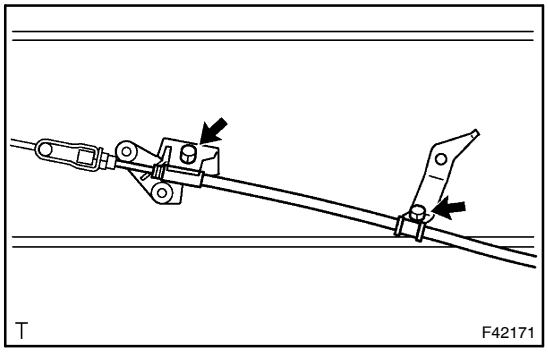

(b) Attach the parking brake cable No. 3, and then install the 2 bolts, as shown in the illustration.
Torque: 17.5 N·m (175 kgf·cm, 13 ft·lbf)

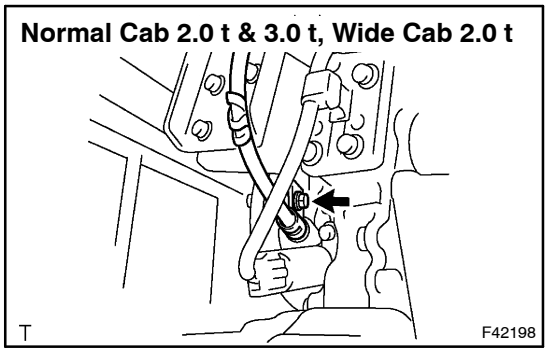

(c) Standard cab 2.0 t & 3.0 t, Wide cab 2.0 t:
Connect the parking brake cable assy No. 3.
(1) Install the inner wire spring, E–ring, collar and dust seal to the cable assy No. 3.
(2) Connect the parking brake cable assy No. 3.
(3) Install the bolt and clamp to the parking brake shoe backing plate.
Torque: 12.5 N·m (130 kgf·cm, 9 ft·lbf)

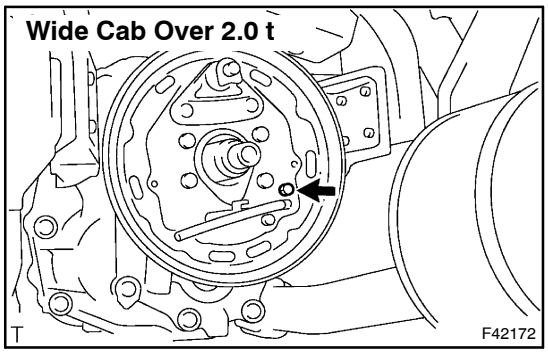

(d) Wide cab over 2.0 t:
Connect the parking brake cable assy No. 3.
(1) Connect the cable No. 3 to the parking brake shoe backing plate.
(2) Install the bolt to the parking brake shoe backing plate.
Torque: 7.8 N·m (80 kgf·cm, 69 in.·lbf)

7. **INSTALL PARKING BRAKE SHOE (See page 33–11)**
8. **INSTALL PARKING BRAKE SHOE RETURN TENSION SPRING (See page 33–11)**
9. **CHECK PARKING BRAKE INSTALLATION (See page 33–11)**
10. **INSTALL PARKING BRAKE DRUM SUB–ASSY (See page 33–11)**
11. **ADJUST PARKING BRAKE SHOE CLEARANCE (See page 33–11)**
12. **INSPECT AND ADJUST PARKING BRAKE LEVER TRAVEL (See page 33–11)**
13. **TIGHTEN PARKING BRAKE DRUM SET NUT (See page 33–11)**
14. **INSTALL PROPELLER SHAFT ASSY (See page 30–6, 30–14, 30–22, 30–29)**