
MANUAL TRANSMISSION OIL

REPLACEMENT

410D5–01

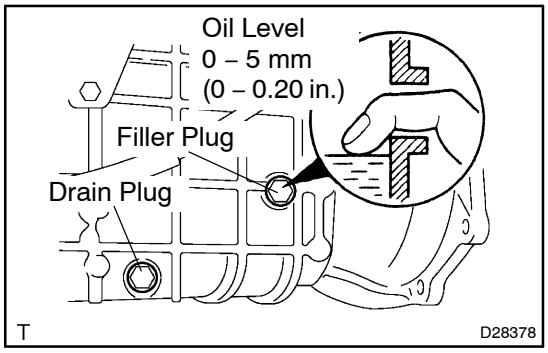

1. REPLACE MANUAL TRANSMISSION OIL

(a) Loosen the filler plug.

(b) Remove the drain plug.

HINT:

Use a container to catch the transmission oil.

(c) Remove the filler plug.

(d) Reinstall the drain plug.

Torque: 37 N·m (377 kgf·cm, 27 ft·lbf)

(e) Pour fresh transmission oil, as shown in the illustration.

Transmission type	M150/M153	H350/H351/H260
Oil grade	API GL–4 or GL–5	
Viscosity	SAE 75W–90	
Capacity Litter (US.qts, Imp.qts)	3.2 (3.4, 2.8)	4.2 (4.4, 3.7)

(f) Reinstall the filler plug.

Torque: 37 N·m (377 kgf·cm, 27 ft·lbf)