SHIFT AND SELECT TRANSMISSION CONTROL CABLE ASSY

410DA–01

REPLACEMENT


1. REMOVE FLOOR SHIFT SHIFT LEVER KNOB SUB–ASSY

2. REMOVE PARKING BRAKE HOLE COVER

(a) Remove the 2 screws and parking brake hole cover.

3. REMOVE SHIFTING HOLE COVER SUB–ASSY AND SHIFT LEVER BOOT COVER

(a) Remove the 3 clips and shift lever boot cover.

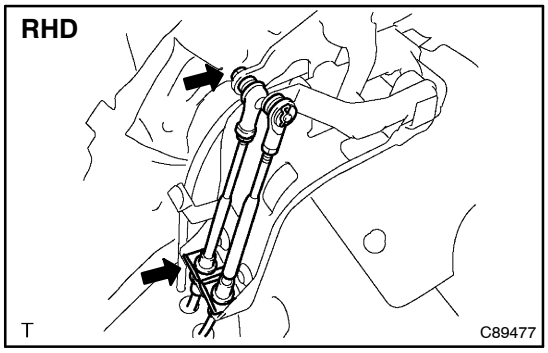


4. REMOVE SHIFT AND SELECT TRANSMISSION CONTROL CABLE ASSY

(a) Remove the shift cable from the floor shift (See page 41–11).

HINT:


For LHD vehicles, the configuration is opposite to RHD vehicles.

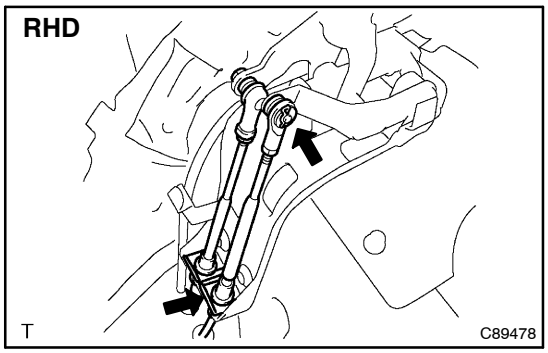

(b) Remove the select cable from the floor shift (See page 41–11).


HINT:

For LHD vehicles, the configuration is opposite to RHD vehicles.

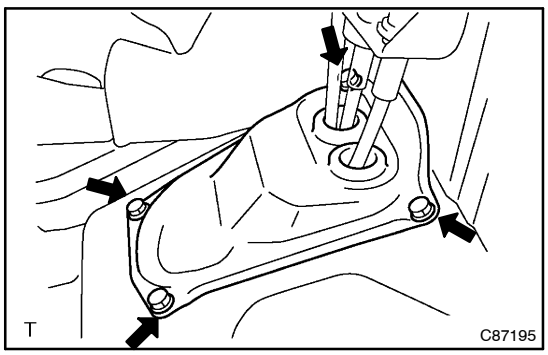

(c) Remove the 4 bolts, and disconnect the grommet from the floor.


(d) Disconnect the shift cable from the grommet.

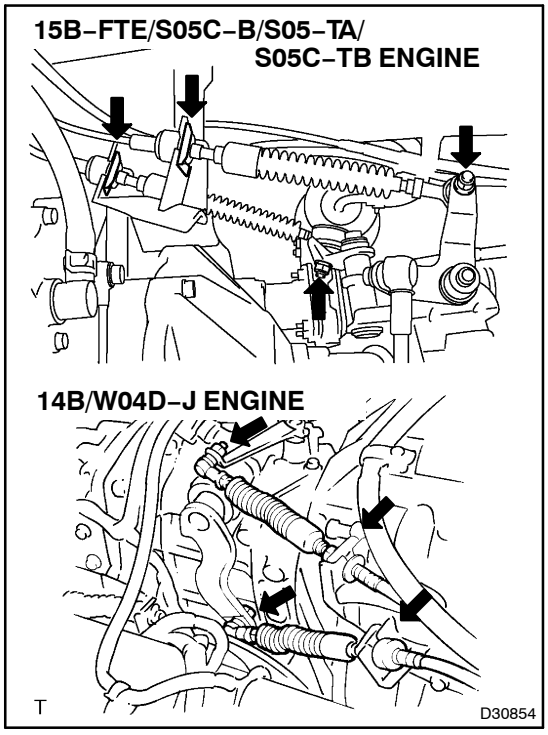


(e) Remove the nut and clip, and disconnect the shift cable together with the clip and nut.

(f) Remove the nut and clip, and disconnect the select cable together with the clip and nut.

(g) Remove the clamps, as shown in illustration.

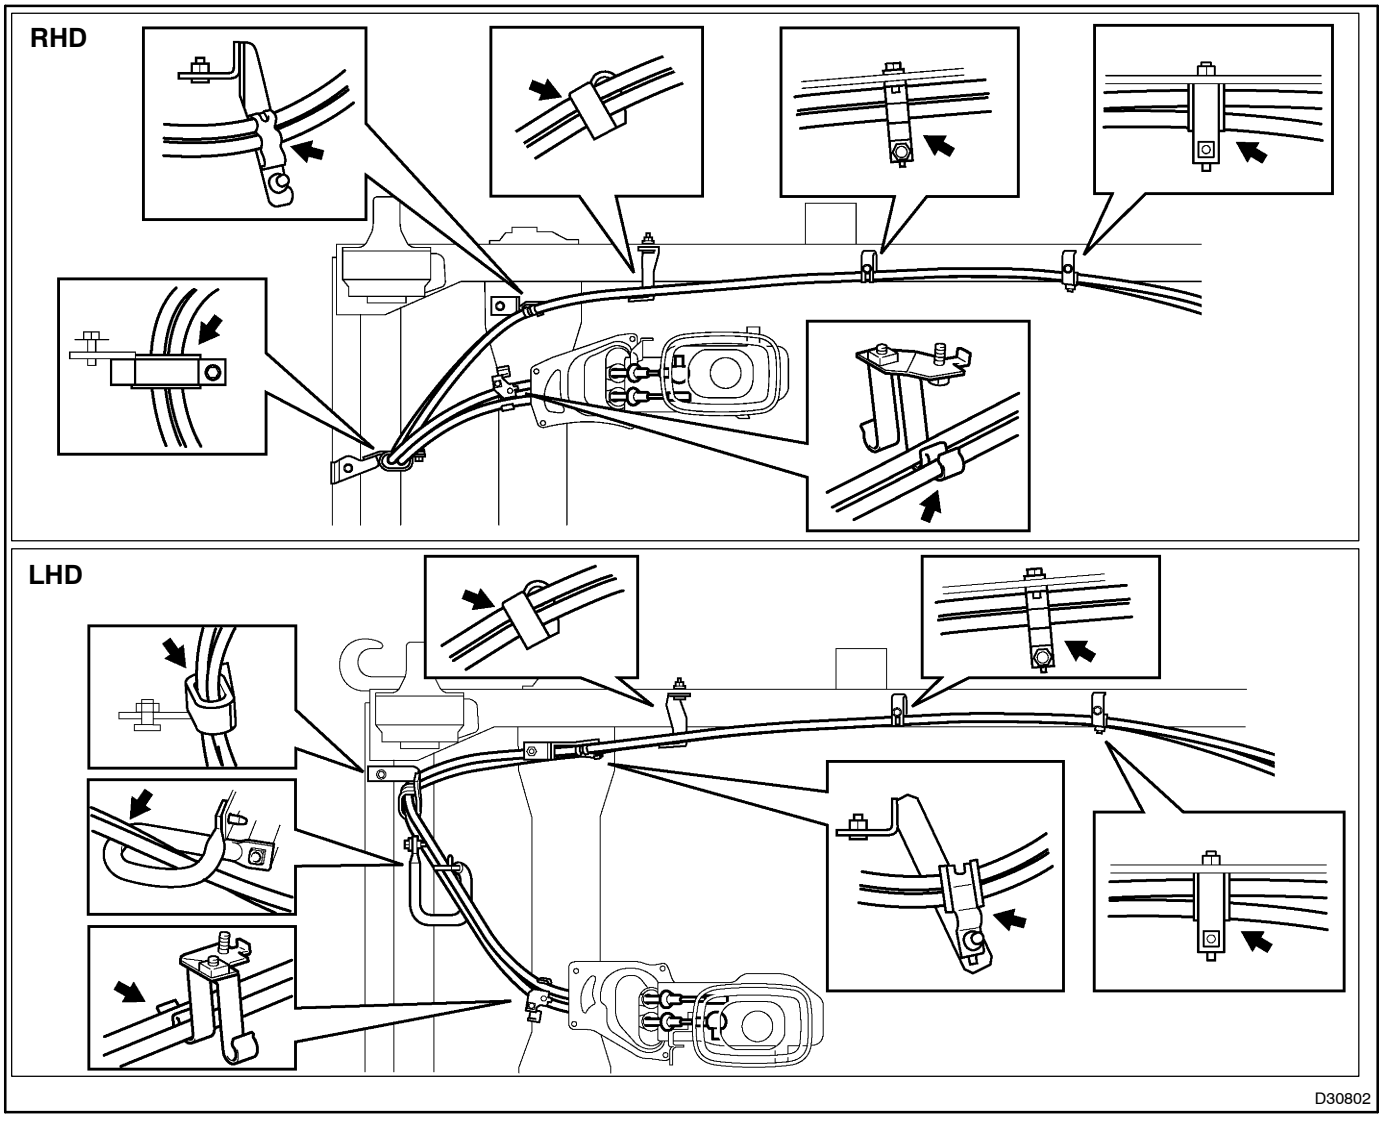

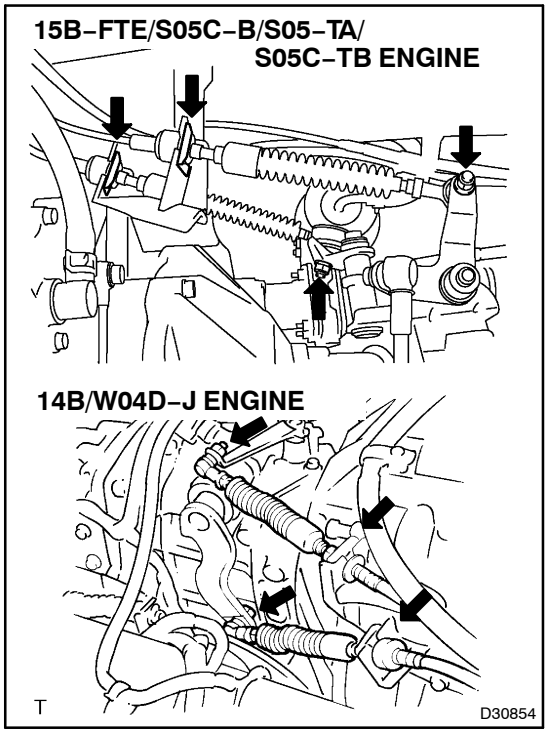

5. INSTALL SHIFT AND SELECT TRANSMISSION CONTROL CABLE ASSY

(a) Pull in the shift cable and select cable to the floor.


(b) Install the shift cable and select cable to the levers with the nuts.


Torque: 12 N·m (120 kgf·cm, 9 ft·lbf)

(c) Install the shift cable and select cable to the bracket with the clips.


(d) Install the clamps, as shown in illustration.

Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

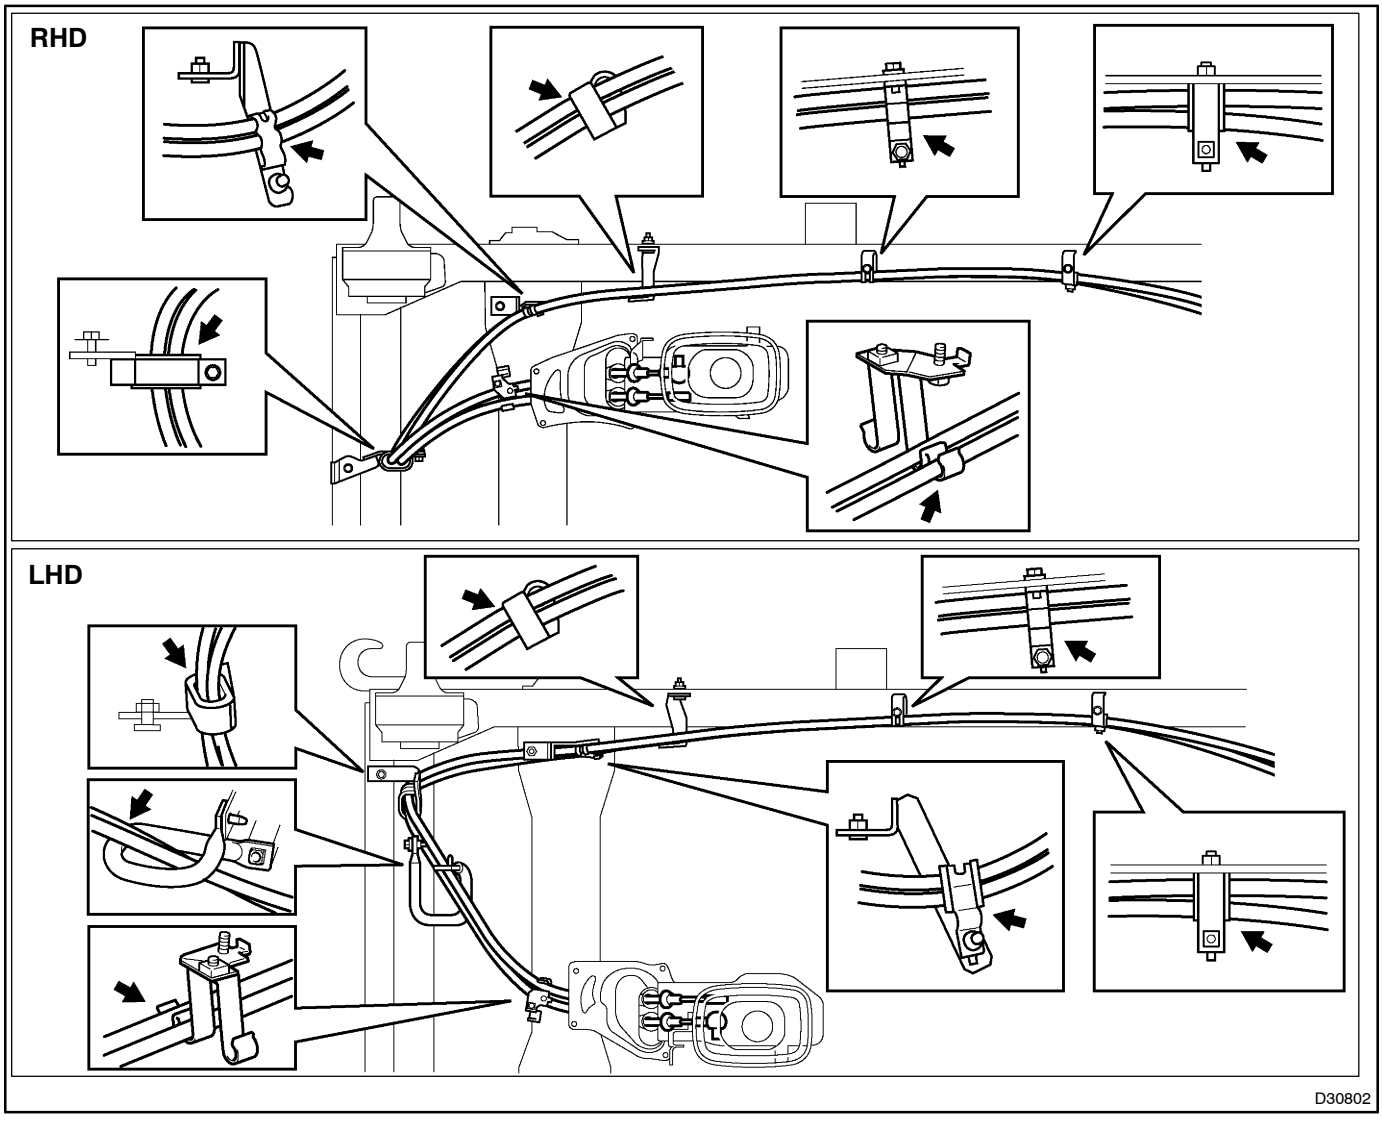

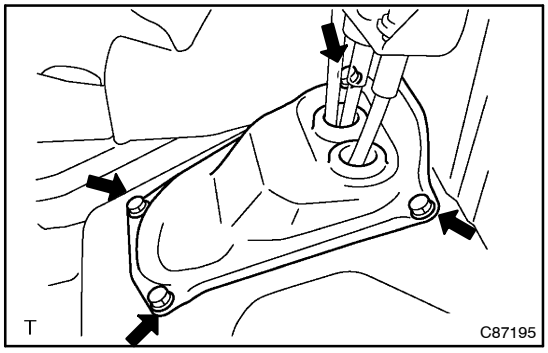


(e) Install the grommet to the floor with the 4 bolts.
Torque: 7.0 N·m (71 kgf·cm, 62 in.·lbf)

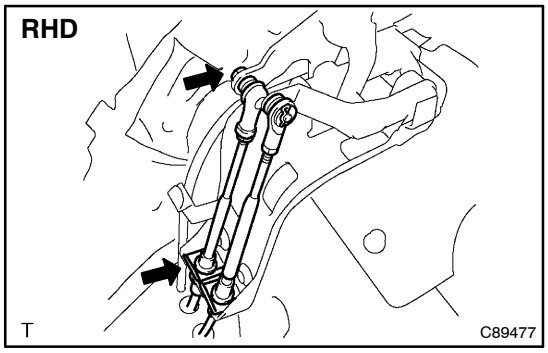

(f) Install the shift cable to the floor shift (See page 41–10).
Torque: 11.5 N·m (117 kgf·cm, 8.5 ft·lbf)

HINT:
For LHD vehicles, the configuration is opposite to RHD vehicles.

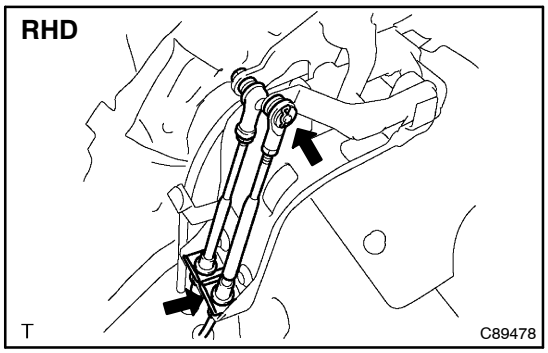

(g) Install the select cable to the floor shift (See page 41–10).

HINT:
For LHD vehicles, the configuration is opposite to RHD vehicles.

6. INSPECT AND ADJUST SHIFT LEVER POSITION (See page 41–10)

7. INSTALL SHIFTING HOLE COVER SUB–ASSY AND SHIFT LEVER BOOT COVER

(a) Install the shift lever boot cover with the 3 clips.

8. INSTALL PARKING BRAKE HOLE COVER

(a) Install the parking hole cover with the 2 screws.

9. INSTALL FLOOR SHIFT SHIFT LEVER KNOB SUB–ASSY