HEATER AIR FILTER NO.2


REPLACEMENT

550WT–01

HINT:

The installation is in the reverse order of the removal. However, when there is a special point concerning the installation, it is indicated.

1. **REMOVE INSTRUMENT COVER LWR NO.3 (WIDE BODY MODELS) (See page 71–11)**
2. **REMOVE INSTRUMENT COVER LOWER CENTER (See page 71–11 or 71–17)**
3. **REMOVE GLOVE COMPARTMENT DOOR ASSY (See page 71–11 or 71–17)**
4. **REMOVE WINDSHIELD WASHER JAR ASSY (See page 55–28)**

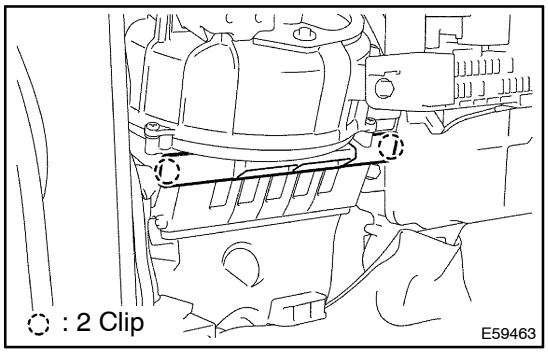

5. **REMOVE HEATER AIR FILTER NO.2**
6. **INSTALL HEATER AIR FILTER NO.2**

HINT:

When reusing the filter, wash and dry it before installation.

7. **INSTALL WINDSHIELD WASHER JAR ASSY (See page 55–28)**
8. **INSTALL GLOVE COMPARTMENT DOOR ASSY (See page 71–11 or 71–17)**
9. **INSTALL INSTRUMENT COVER LOWER CENTER (See page 71–11 or 71–17)**
10. **INSTALL INSTRUMENT COVER LWR NO.3 (WIDE BODY MODELS) (See page 55–28)**