HEATER AIR FILTER


REPLACEMENT

550WU–01

HINT:

The installation is in the reverse order of the removal. However, when there is a special point concerning the installation, it is indicated.

1. **REMOVE RADIATOR GRILLE (See page 76–3)**
2. **REMOVE CLEARANCE LAMP LENS & BODY LH (LHD STEERING POSITION TYPE) (See page 65–25)**
3. **REMOVE HEADLAMP UNIT LH (See page 65–12 or 65–18)**

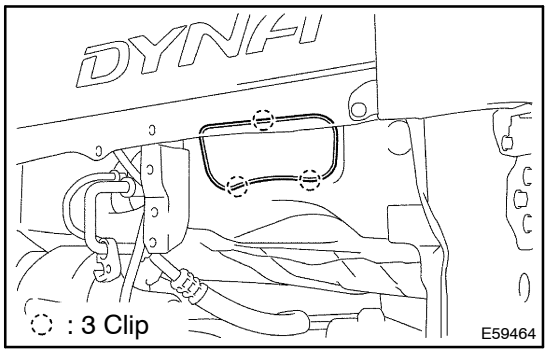

4. **REMOVE HEATER AIR FILTER**
5. **INSTALL HEATER AIR FILTER**

HINT:

When reusing the filter, wipe dirt off the filter with a soft brush or cloth before installation.

6. **INSTALL HEADLAMP UNIT LH (See page 65–12 or 65–18)**
7. **INSTALL CLEARANCE LAMP LENS & BODY LH (LHD STEERING POSITION TYPE) (See page 65–25)**
8. **INSTALL RADIATOR GRILLE (See page 76–3)**