
600II–01

REPLACEMENT


1. **PRECAUTION (See page 60–1)**
2. **SEPARATE BATTERY NEGATIVE TERMINAL**

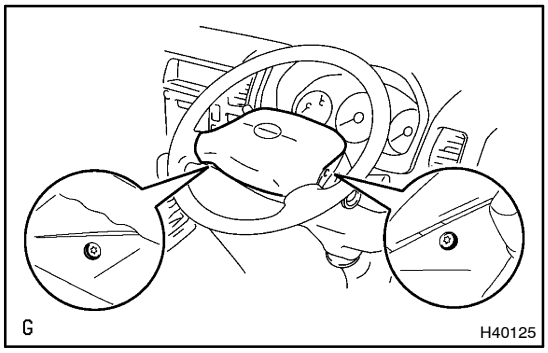

3. **REMOVE HORN BUTTON ASSY**

(a) Place the front whels facing straight ahead.

(b) Using a torx socket wrench (T30), loosen the 2 torx screws until the groove along the screw circumference catches on the screw case.

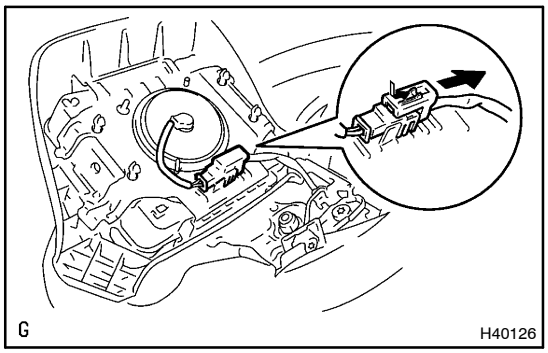

(c) Pull out the wheel pad from the horn button.

(d) Disconnect the airbag connector and horn connector and remove the horn button.

4. **INSTALL HORN BUTTON ASSY**

(a) Connect the airbag connector and horn connector.

(b) Install the horn button after confirming that the circumference groove of the torx screws is caught on the screw case.

(c) Using a torx socket wrench, install the 2 screws.
Torque: 8.8 N·m (90 kgf·cm, 78 in.·lbf)

5. **INSPECT HORN BUTTON ASSY (See page 60–3)**
6. **INSPECT SRS WARNING LIGHT (See page 05–312)**