
REPLACEMENT


1. **PRECAUTION (See page 60–1)**
2. **SEPARATE BATTERY NEGATIVE TERMINAL (See page 60–1)**
3. **PLACE FRONT WHEELS FACING STRAIGHT AHEAD**
4. **REMOVE HORN BUTTON ASSY (See page 60–6)**
5. **REMOVE STEERING WHEEL ASSY (See page 50–8)**
   SST 09950–50013 (09951–05010, 09952–05010, 09953–05020, 09954–05021)
6. **REMOVE STEERING COLUMN COVER UPR (See page 50–8)**
7. **REMOVE STEERING COLUMN COVER LWR (See page 50–8)**
8. **REMOVE TURN SIGNAL SWITCH ASSY (See page 50–8)**

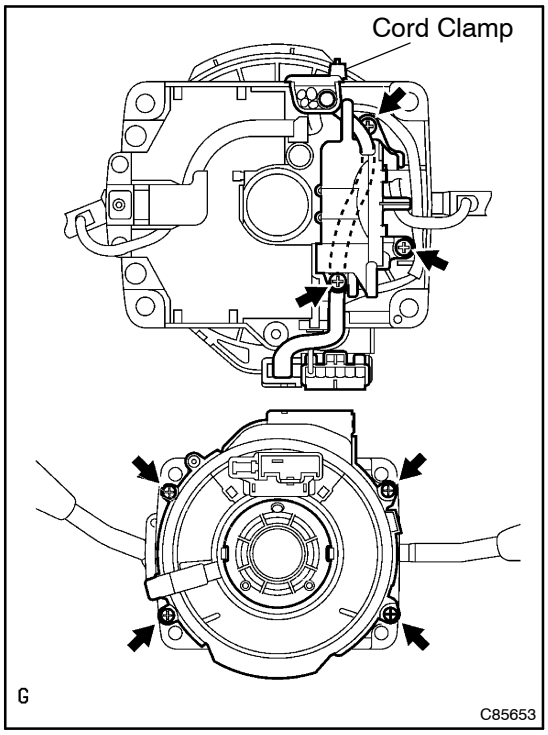

9. **REMOVE SPIRAL CABLE**

(a) Remove the 3 screws, separate the headlamp dimmer switch and the turn signal switch.


(b) Remove the 4 screws, connector and cord clamp, separate the spiral cable and the turn signal switch.

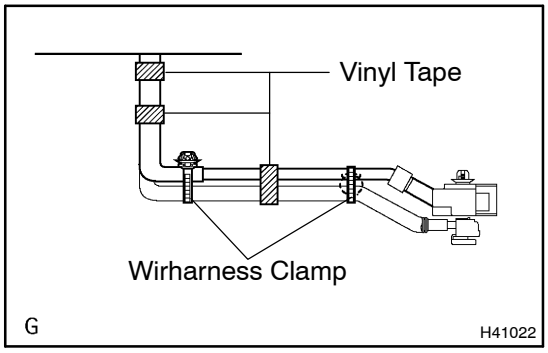

(c) Remove the 2 wire harneses clamps and vinyl tape then remove the spiral cable.

10. **INSPECT SPIRAL CABLE**
11. **PLACE FRONT WHEELS FACING STRAIGHT AHEAD**


(a) Check that the front wheels are facing straight ahead.

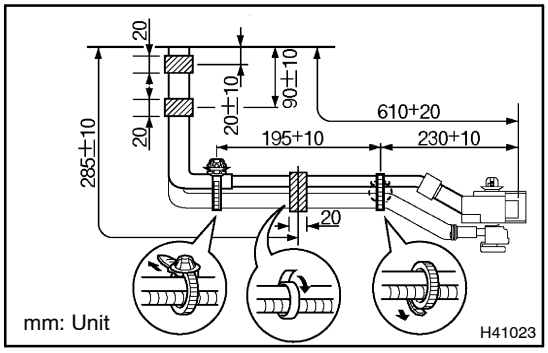

12. INSTALL SPIRAL CABLE

(a) As shown in illustration, bind the 2 wire harnesses with the 2 wire harness clamps.

(b) Put new vinyl tape 2 or 3 times around the place shown in the diagram.

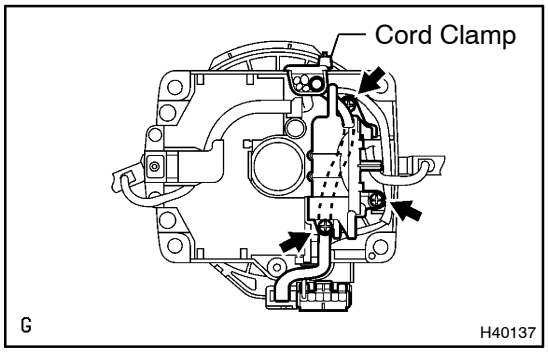


(c) As shown in illustration, locate the wire harness of spiral cable sub–assy along the back side of the turn signal switch.

(d) Connect the connector to the spiral cable.

(e) Install the headlamp dimmer switch to the turn signal switch with the 3 screws.

(f) Bind wire harness with a new cord clamp.

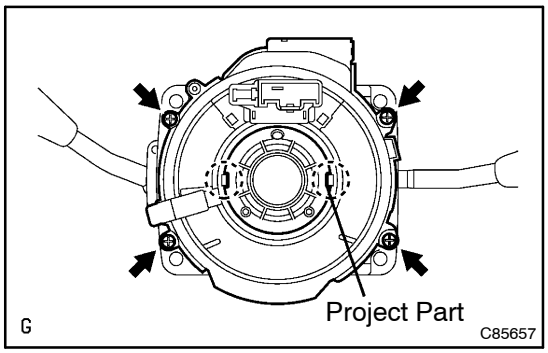

(g) Combine the hole part of cancel cam with the project part of spiral cable, then install with the 4 screws.

NOTICE:

When replacing the spiral cable with new one, remove the lock pin before installing the steering wheel.

13. INSTALL TURN SIGNAL SWITCH ASSY (See page 50–8)


14. CENTER SPIRAL CABLE

(a) Check that the ignition switch is OFF.

(b) Check that the battery negative terminal is disconnected.

NOTICE:


Do not start the operation for 90 seconds after removing the terminal.

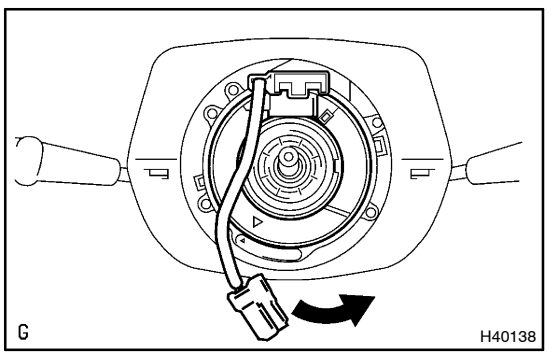

(c) Turn the cable counterclockwise by hand until it becomes harder to turn.

HINT:

The cable will rotate about 3.5 turns to either left or right of the center.

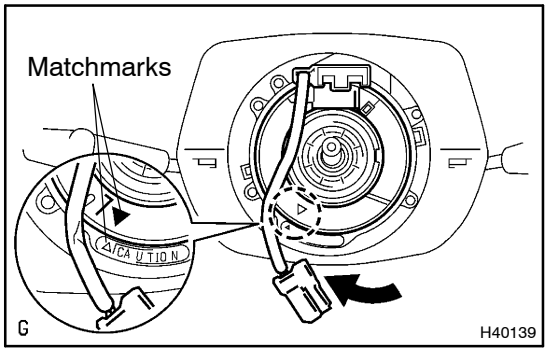

(d) Then rotate the cable clockwise about 3.5 turns to align the marks.

15. **INSTALL STEERING WHEEL ASSY (See page 50–8)**
    Torque: 50 N·m (510 kgf·cm, 37 ft·lbf)
16. **INSPECT STEERING WHEEL CENTER POINT**
17. **INSTALL HORN BUTTON ASSY (See page 60–6)**
18. **INSPECT HORN BUTTON ASSY (See page 60–3)**
19. **INSPECT SRS WARNING LIGHT (See page 05–312)**