
600IN–01

REPLACEMENT

HINT:

- COMPONENTS: See page 60–18
- The installation is in the reverse order of the removal. However, when there is a special point concerning the installation, it is indicated.


1. **PRECAUTION (See page 60–1)**
2. **SEPARATE BATTERY NEGATIVE TERMINAL (See page 60–1)**
3. **REMOVE FRONT DOOR SCUFF PLATE RH (RHD STEERING POSITION TYPE) (See page 71–11, 71–17)**
4. **REMOVE FRONT DOOR SCUFF PLATE LH (LHD STEERING POSITION TYPE) (See page 71–11, 71–17)**
5. **REMOVE STEERING COLUMN COVER UPR (See page 50–8)**
6. **REMOVE STEERING COLUMN COVER LWR (See page 50–8)**

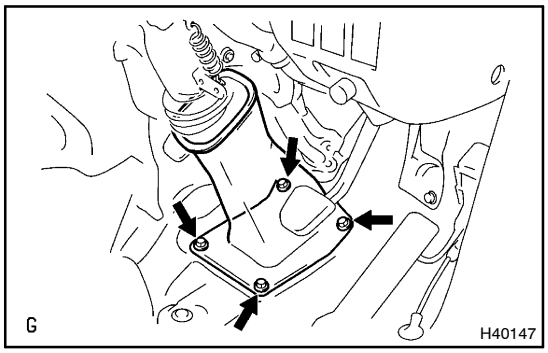

7. DISCONNECT STEERING COLUMN TUBE LOWER


(a) Turn the floor carpet off until the bolts holding the steering column tube lower can be seen.

(b) Remove the 4 bolts, and disconnect the steering column tube lower from the body.

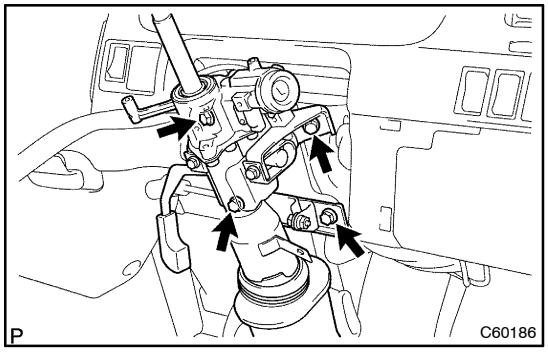


8. DISCONNECT STEERING COLUMN ASSY

(a) Remove the 4 bolts, and disconnect the steering column from the steering column tube lower, and tilt it to the back side of the vehicle.

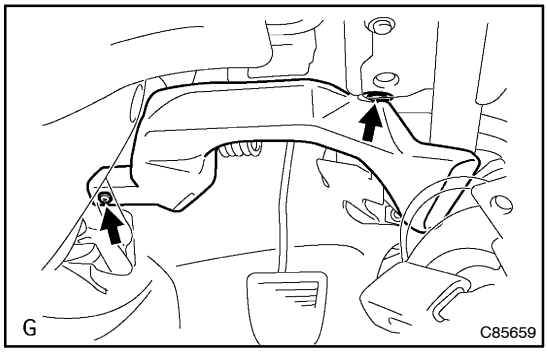


9. REMOVE AIR DUCT NO.1

(a) Remove the 2 clips and air duct No. 1.

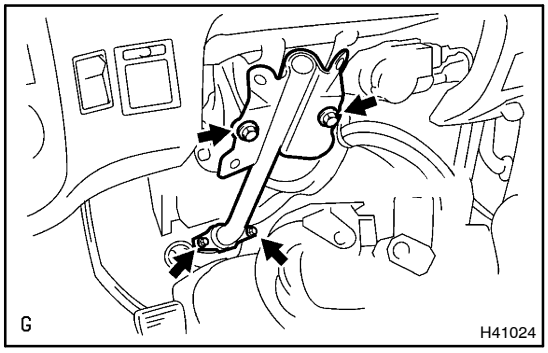


10. REMOVE STEERING COLUMN TUBE ASSY LOWER

(a) Remove the 2 bolts, 2 nuts and steering column tube.

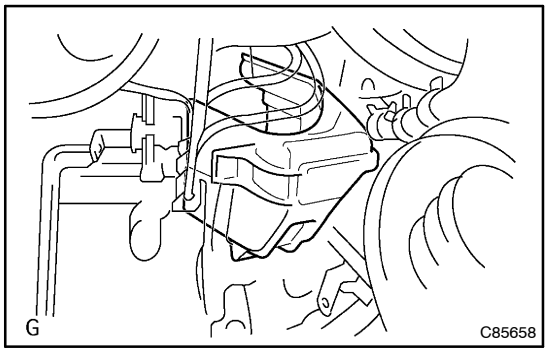

11. REMOVE AIR BAG SENSOR COVER

(a) Remove the 2 claws and airbag sensor cover from the pedal bracket.

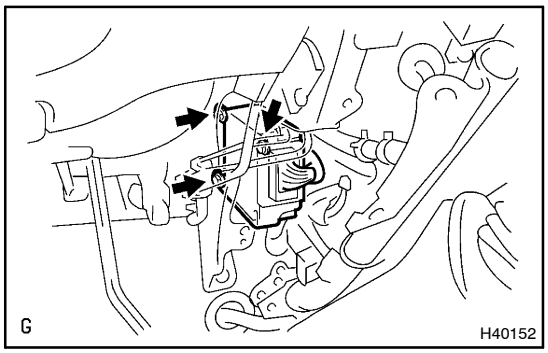

12. REMOVE AIRBAG ECU ASSY

(a) Disconnect the connector of the airbag ECU.

(b) Remove the 3 bolts and airbag ECU from the pedal bracket.

13. INSTALL AIRBAG ECU ASSY

(a) Check that the ignition switch turn OFF.

(b) Check that the battery negative terminal is disconnected.

NOTICE:

Do not start the operation for 90 seconds after removing the terminal.

(c) Temporarily install the airbag ECU with the 3 bolts.

(d) Tighten the 3 bolts.

Torque: 20 N·m (200 kgf·cm, 14 ft·lbf)

(e) Connect the connector to the airbag ECU.

(f) Check that no play is identified.

14. INSPECT AIRBAG ECU ASSY (See page 60–3)

15. INSTALL STEERING COLUMN TUBE ASSY LOWER

Torque: 12 N·m (122 kgf·cm, 9 ft·lbf)

16. INSTALL STEERING COLUMN ASSY

Torque: 11.5 N·m (115 kgf·cm, 8 ft·lbf)

17. INSTALL STEERING COLUMN TUBE LOWER

Torque: 8 N·m (82 kgf·cm, 71 in.·lbf)

18. INSPECT SRS WARNING LIGHT (See page 05–312)