

610D7–01

DISPOSAL

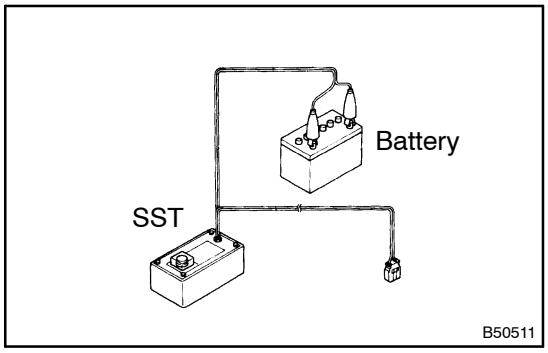


1. DISPOSE OF FRONT SEAT BELT (WHEN INSTALLED IN VEHICLE)

HINT:
Check battery voltage is above 24 V.

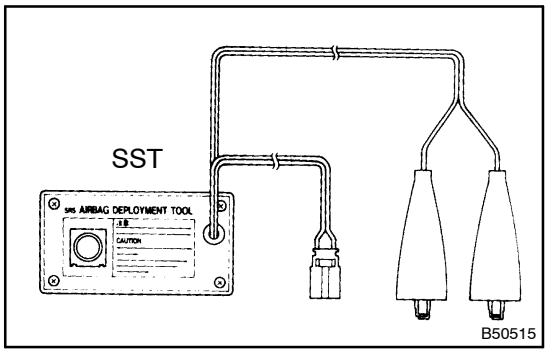


(a) Check functioning of SST.
SST 09082–00700, 09082–00740

CAUTION:
When activating the seat belt pretensioner, always use a specified SST.

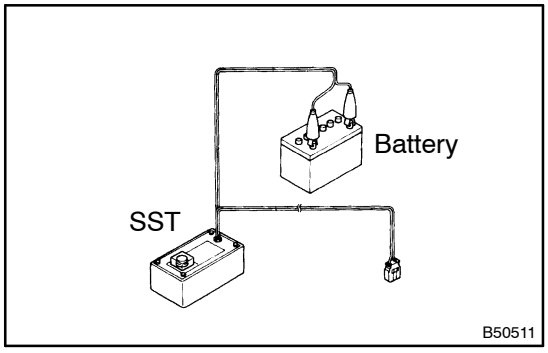

(1) Connect the SST to the battery.
Connect the red clip of the SST to the battery positive (+) terminal and the black clip to the battery negative (–) terminal.


HINT:
Do not connect the yellow connector which will be connected to the seat belt pretensioner.

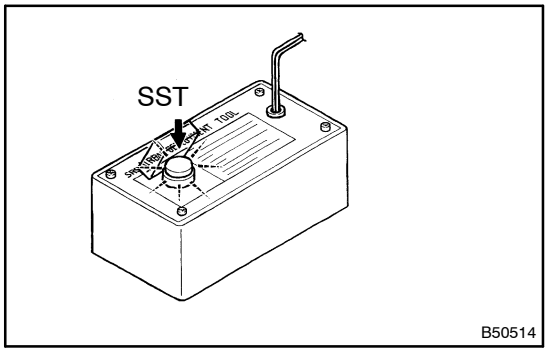

(2) Check functioning of SST.
Press the SST activation switch, and check the LED of the SST activation switch lights up.

CAUTION:
If the LED lights up when the activation switch is not pressed, the SST probably malfunctions, so definitely do not use the SST.

(b) Disconnect the pretensioner connector.
(1) Remove the front door scuff plate.
(2) Remove the quarter trim panel.
(See page 61–8)

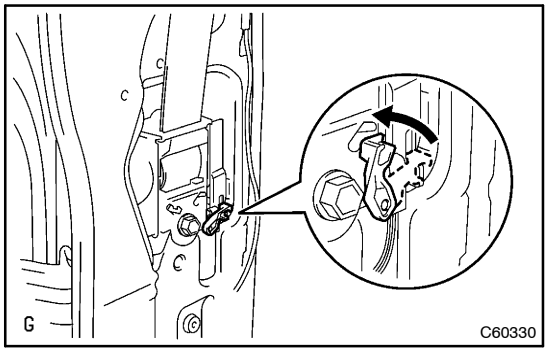


(3) Disconnect the pretensioner connector as shown in the illustration.

(c) Install the SST.

SST 09082–00700, 09082–00740


(1) Install the floor anchor of the seat belt.

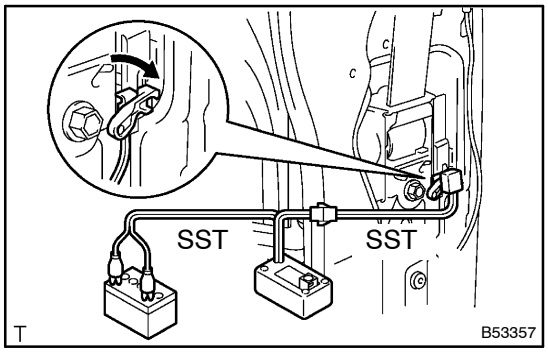

(2) Connect the SST, then connect them to the seat belt pretensioner.

NOTICE:

To avoid damaging the SST connector and wire harness, do not lock the secondary lock of the twin lock.

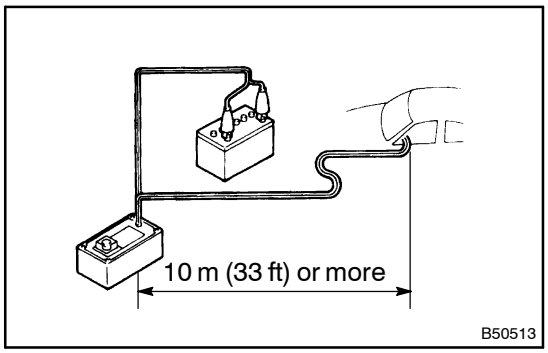

(3) Move the SST to at least 10 m (33 ft) away from the front of the vehicle.

(4) Close all the doors and windows of the vehicle.

NOTICE:

Take care not to damage the SST wire harness.

(5) Connect the SST red clip to the battery positive (+) terminal and the black clip to the negative (–) terminal.

(d) Activate the seat belt pretensioner.

(1) Confirm that no one is inside the vehicle or within 10 m (33 ft) area around the vehicle.

(2) Press the SST activation switch and activate the seat belt pretensioner.

HINT:

The seat belt pretensioner operates simultaneously with the LED of the SST activation switch lighting up.

(e) Dispose of the front seat outer belt (with seat belt pretensioner).

HINT:

When scrapping a vehicle, activate the seat belt pretensioner and scrap the vehicle with activated front seat outer belt being installed.

2. DISPOSE OF FRONT SEAT BELT (WHEN NOT INSTALLED IN VEHICLE)


NOTICE:

- **When disposing of a front seat outer belt (with seat belt pretensioner) only, never use the customer's vehicle to activate the seat belt pretensioner.**
- **Be sure to follow the procedure given on the next page when activating the seat belt pretensioner.**


(a) Remove the front seat outer belt (See page 61–8).

HINT:

Cut the belt near the seat belt retractor.

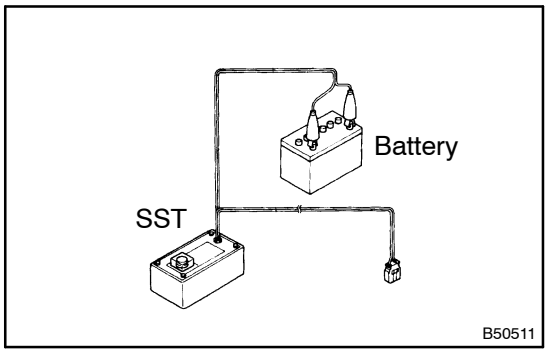


(b) Check functioning of SST (See step 1–(a)).
SST 09082–00700, 09082–00740

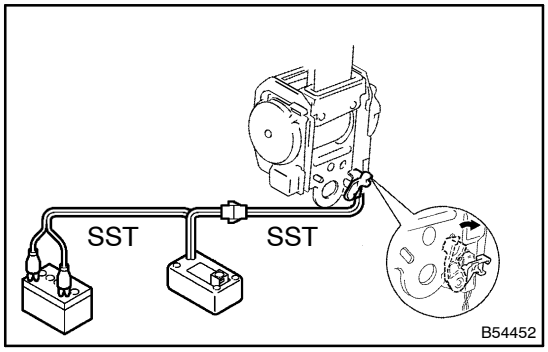

(c) Install the SST.
(1) Connect the SST, then connect them to the seat belt pretensioner.
SST 09082–00700, 09082–00740

NOTICE:

To avoid damaging the SST connector and wire harness, do not lock the secondary lock of the twin lock.

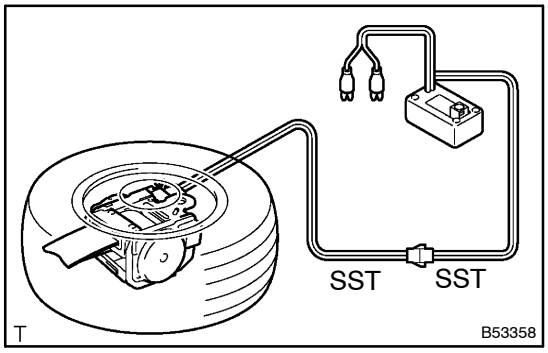

(2) Place the front seat outer belt on the ground and cover it with the disc wheel with tire.


NOTICE:

Place the front seat outer belt as shown in the illustration.

(3) Move the SST at least 10 m (33 ft) away from the disc wheel.


NOTICE:

Take care not to damage the SST wire harness.

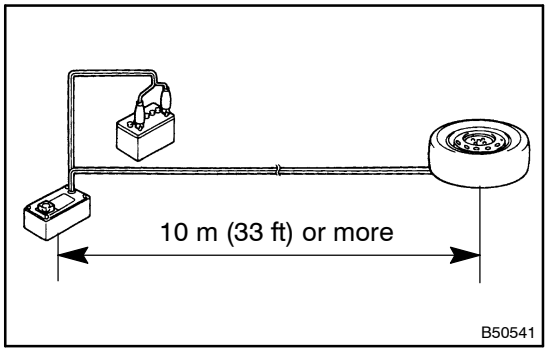

(d) Activate the seat belt pretensioner.
  (1) Connect the SST red clip to the battery positive (+) terminal and black clip to the battery negative (–) terminal.
  (2) Check that no one is within 10 m (33 ft) area around the disc wheel.
  (3) Press the SST activation switch and activate the seat belt pretensioner.

HINT:
The seat belt pretensioner operates simultaneously with the LED of the SST activation switch lighting up.

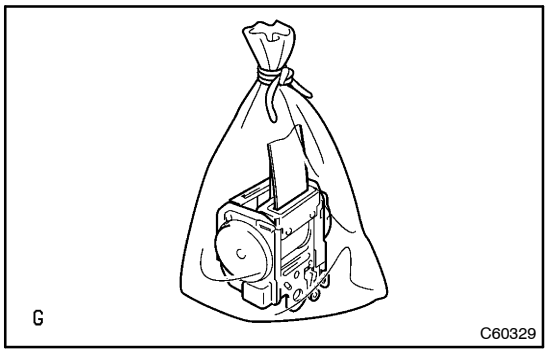

(e) w/ seat belt pretensioner:
Dispose of the front seat outer belt.
  (1) Remove the disc wheel and SST.
  (2) Place the front seat outer belt in a vinyl bag, tie the end tightly and dispose of it in the same way as other general parts.