
650QF-01

REPLACEMENT

HINT:

- The installation is in the reverse order of the removal. However, when there is a special point concerning the installation, it is indicated.
- On the RH side, use the same procedures as on the LH side.

1. REMOVE RADIATOR GRILLE (See page 76–3)

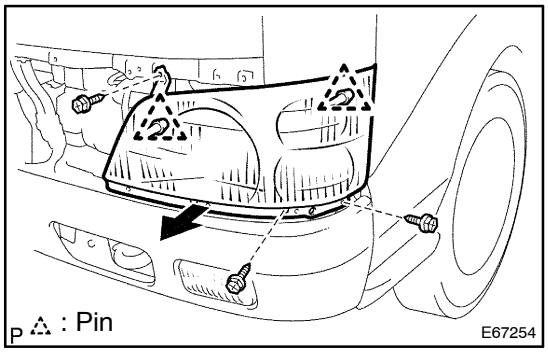


2. REMOVE LH HEADLAMP ASSY

(a) Remove the 3 bolts.


(b) Pull out the headlamp forward while disengaging the 2 pins of the headlamp.

(c) Disconnect the connectors and remove the headlamp.

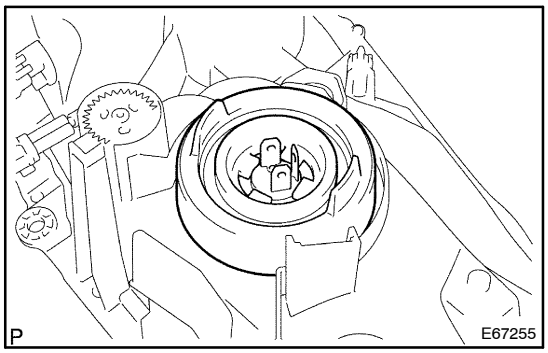


3. REMOVE SOCKET COVER

(a) Remove the socket cover from the headlamp.

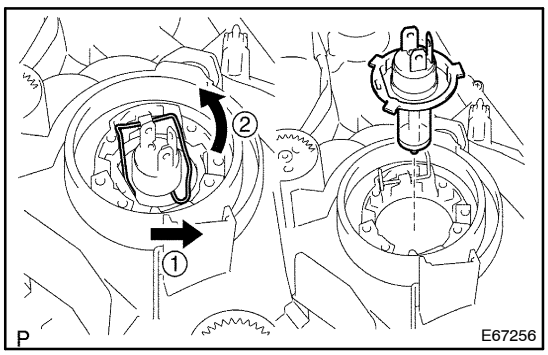

4. REMOVE HEADLAMP BULB NO.1


(a) Release the set spring, as shown in the illustration, and remove the headlamp bulb No. 1.

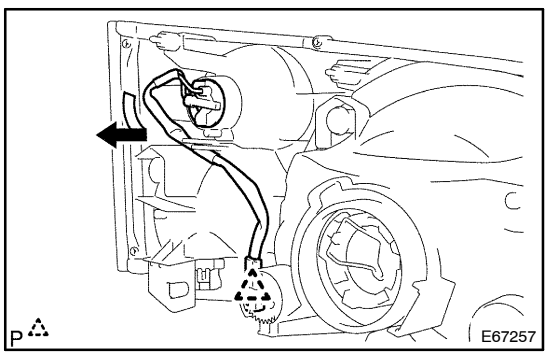

5. REMOVE FRONT TURN SIGNAL LAMP SOCKET


(a) Disengage the clamp.

(b) Remove the lamp socket, as shown in the illustration.

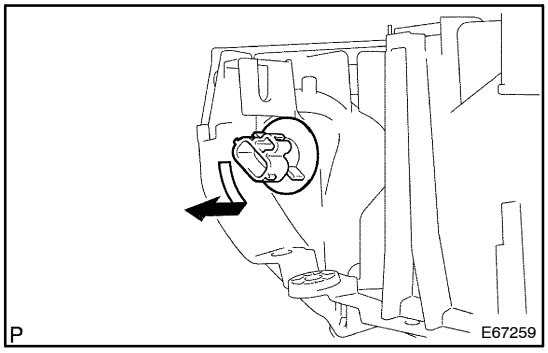

6. REMOVE CLEARANCE LAMP SOCKET

(a) Remove the lamp socket, as shown in the illustration.

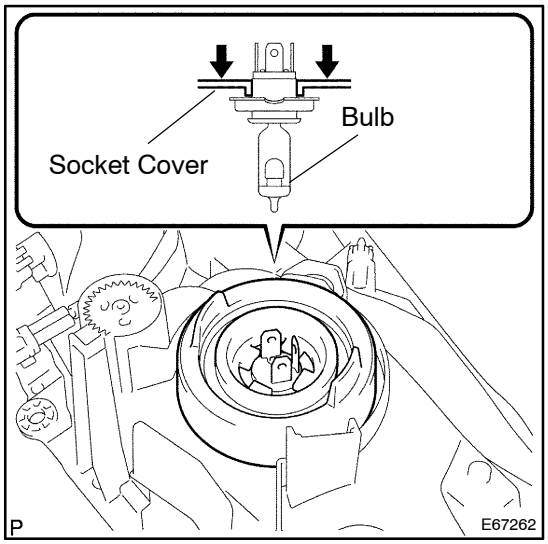

7. INSTALL SOCKET COVER

(a) Install the socket cover.

NOTICE:

- **Push in the socket cover until its outer circumference touches the lamp body.**
- **Push in the inside girth of the socket cover (bulb girth) until the whole metal parts of the bulb can be checked.**

8. ADJUST HEADLIGHT AIM ONLY (See page 65–20)