
FOG LAMP ASSY LH

650EJ–02

REPLACEMENT


HINT:

- The installation is in the reverse order of the removal.
- On the RH side, use the same procedures as on the LH side.

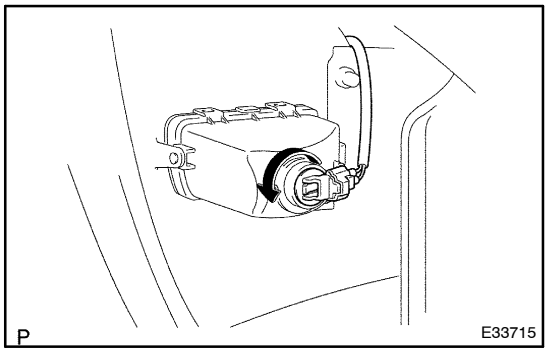


1. REMOVE FOG LAMP BULB

(a) Disconnect the bulb socket, as shown in the illustration.

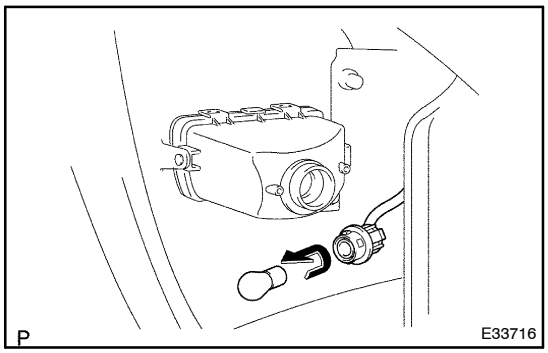

(b) Remove the bulb, as shown in the illustration.

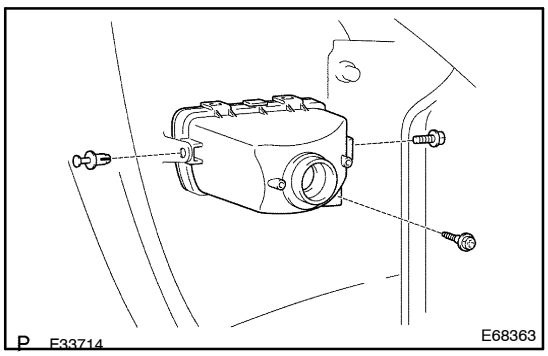

2. REMOVE FOG LAMP ASSY LH

(a) Remove the 2 screws, washer and clip.

(b) Remove the fog lamp.

3. ADJUST FOG LAMP AIM ONLY (See page 65–24)