
CLEARANCE LAMP ASSY LH

650EL–02

REPLACEMENT

HINT:

- The installation is in the reverse order of the removal.
- On the RH side, use the same procedures as on the LH side.

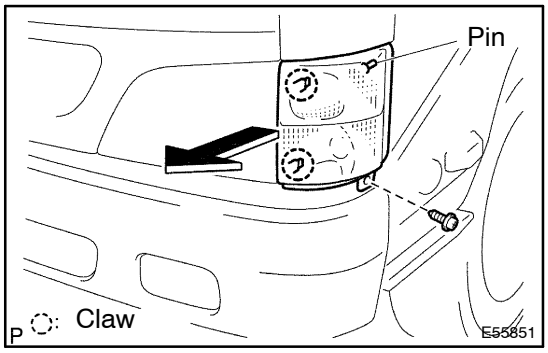

1. REMOVE CLEARANCE LAMP ASSY LH

(a) Remove the screw.

(b) Pull out the clearance lamp forward while disengaging the pin and 2 claws.

(c) Disconnect the connectors and remove the clearance lamp.