
FRONT TURN SIGNAL LAMP ASSY LH (STANDARD BODY FOR TAIWAN)

650QH–01

REPLACEMENT

HINT:

- The installation is in the reverse order of the removal.
- On the RH side, use the same procedures as on the LH side.

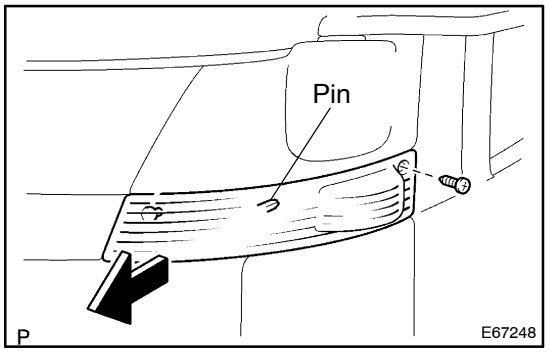

1. REMOVE FRONT TURN SIGNAL LAMP LH

(a) Remove the screw.

(b) Pull out the turn signal lamp forward while disengaging the pin.

(c) Disconnect the connector and remove the turn signal lamp.