
SIDE TURN SIGNAL LAMP ASSY LH (Europe and Australia)

650QI–01

REPLACEMENT

HINT:

- The installation is in the reverse order of the removal.
- On the RH side, use the same procedures as on the LH side.

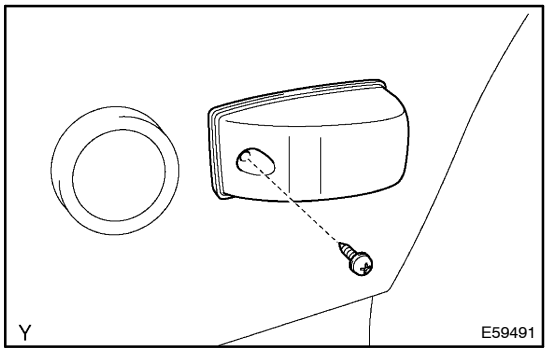

1. REMOVE SIDE TURN SIGNAL LAMP ASSY LH

(a) Remove the screw and pull out the side turn signal lamp.

(b) Disconnect the connector and remove the side turn signal lamp.