HEADLAMP DIMMER SWITCH ASSY

650QL–01

REPLACEMENT

1. DISCONNECT BATTERY NEGATIVE TERMINAL

2. REMOVE TURN SIGNAL SWITCH ASSY (See page 50–8)

(a) Place the front wheels facing straight ahead.


(b) Remove the horn button assy.

(c) Remove the steering wheel assy.
SST 09950–50013 (09951–00510, 09952–05010, 09953–05020, 09954–05021)

(d) Remove the steering column cover lower.


(e) Remove the steering column cover upper.

(f) Remove the turn signal switch assy.

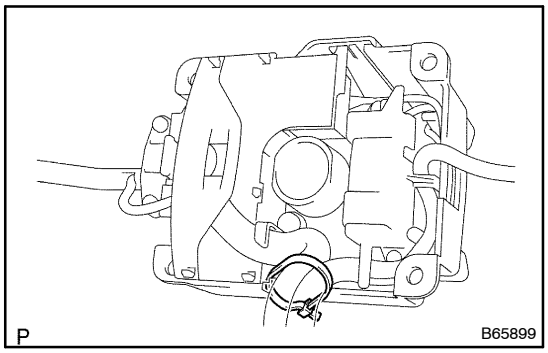


3. REMOVE HEADLAMP DIMMER SWITCH ASSY


(a) Remove the cord clamp.

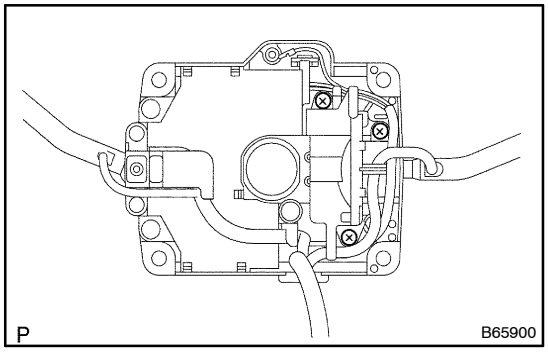


(b) Remove the 3 screws.

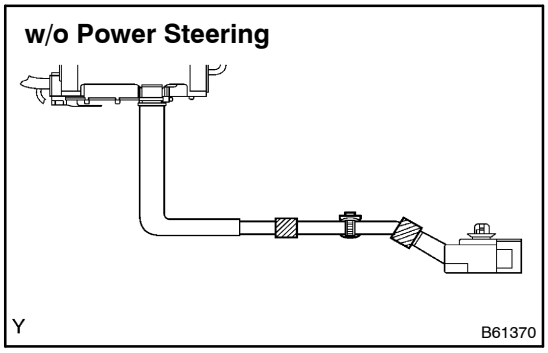


(c) w/o Power steering:
Remove the wire harness clamp and 2 tapes.

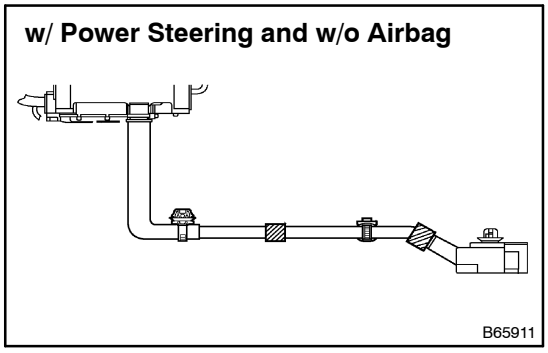


(d) w/ Power steering and w/o airbag:
Remove the 2 wire harness clamps and 2 tapes.

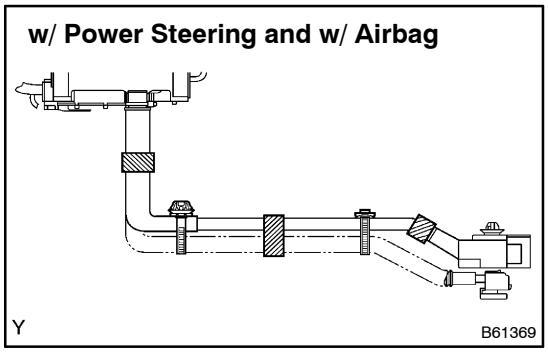


(e) w/ Power steering and w/ airbag:
Remove the 2 wire harness clamps and 3 tapes.

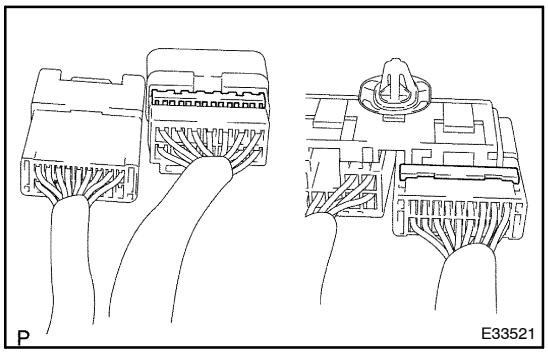

(f) Release the lock from the connector.

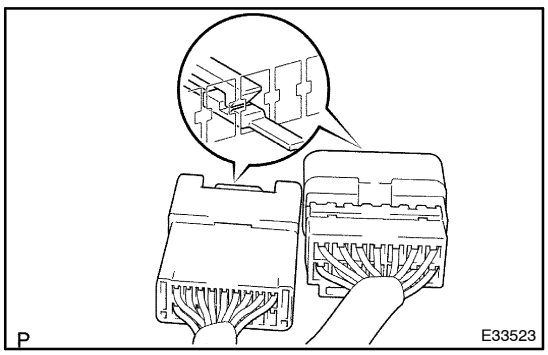

(g) Using a precision screwdriver, unlock the connector terminal.
(h) Pull out the connector terminal pins and remove the headlamp dimmer switch.

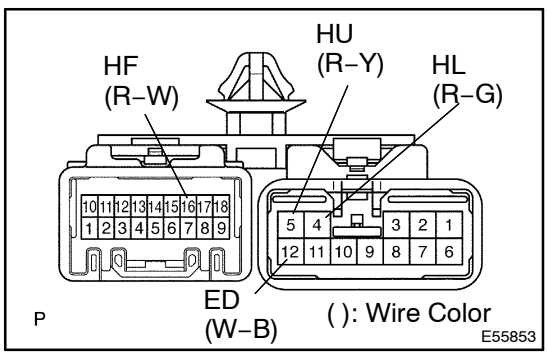


4. INSTALL HEADLAMP DIMMER SWITCH ASSY


(a) Install the connector terminal pins for the connector.

NOTICE:

Do not arrange the connector terminal pins wrongly.

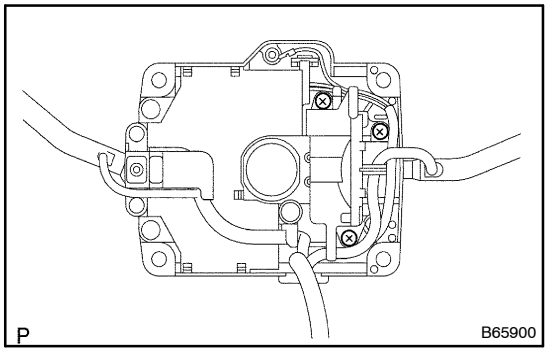


(b) Install the headlamp dimmer switch with the 3 screws.
(c) Check that the headlamp dimmer switch operates smoothly.

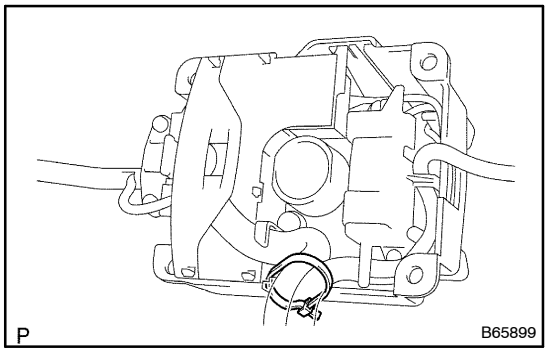

(d) Install a new cord clamp.
(e) After installing the cord clamp, cut it off so that the extra length from the binding point will be 1 – 3 mm (0.04 – 0.12 in.).

(f) Using the wire harness clamps, bind the wire harness, and tape the wire harness.
Standard:
A: 610 – 630 mm (24.02 – 24.80 in.)
B: 230 – 240 mm (9.06 – 9.45 in.)
C: 195 – 205 mm (7.67 – 8.07 in.)
D: 275 – 295 mm (10.83 – 11.61 in.)
E: 80 – 100 mm (3.15 – 3.94 in.)

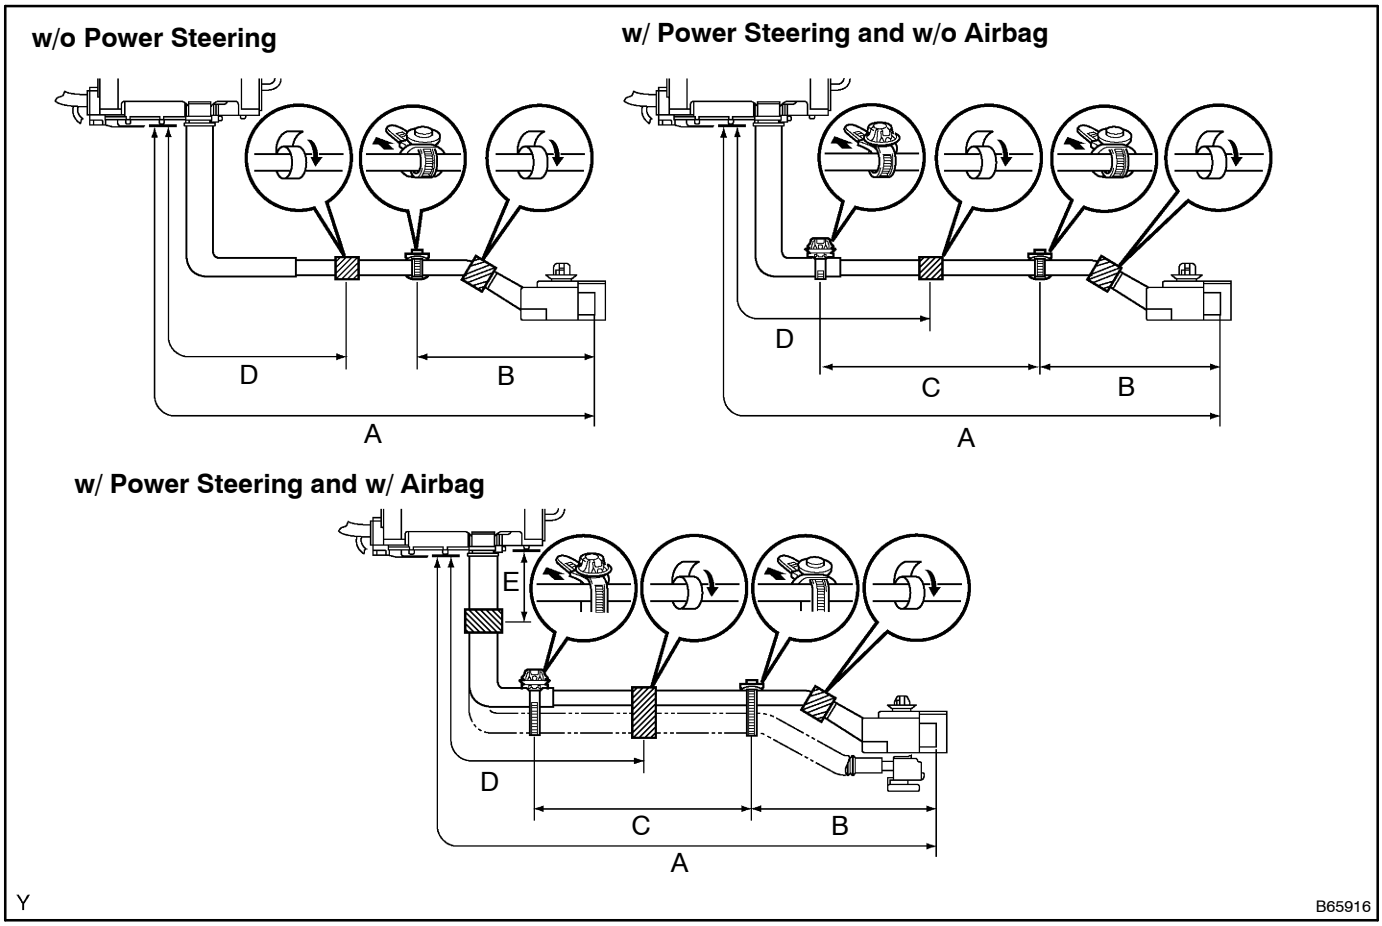

5. INSTALL TURN SIGNAL SWITCH ASSY (See page 50–8)
(a) Install the turn signal switch assy.
(b) Place the front wheels facing straight ahead.
(c) Install the steering column cover upper.
(d) Install the steering column cover lower.
(e) Install the steering wheel assy.
(f) Install the horn button assy.