WIPER RUBBER LH

66063–03

REPLACEMENT

HINT:

The installation is in the reverse order of the removal. However, when there is a special point concerning the installation, it is indicated.

- The installation is in the reverse order of the removal. However, when there is a special point concerning the installation, it is indicated.
- On the RH side, use the same procedures as on the LH side.

1. REMOVE FR WIPER BLADE LH


(a) Remove the wiper blade from the wiper arm.

CAUTION:

Do not operate the wiper arm while removing the wiper blade.

2. REMOVE WIPER RUBBER LH

(a) Remove the wiper rubber from the wiper blade.

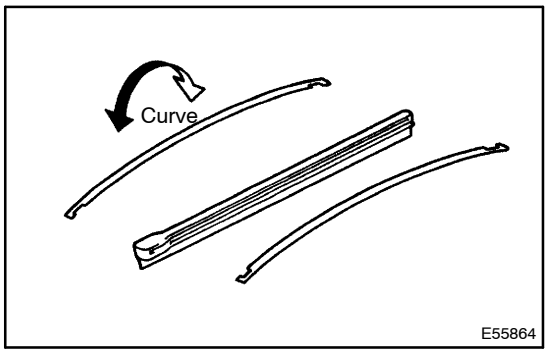

3. INSTALL WIPER RUBBER LH

(a) Install the wiper rubber so that the head of the wiper rubber (outer side of the arc) will face the axis.

NOTICE:

Do not set the packing plate inside out.