WASHER NOZZLE SUB–ASSY

66064–03


ADJUSTMENT

1. ADJUST WASHER NOZZLE SUB–ASSY


(a) Under the engine start condition, check the point on the windshield where the fluid injected from the washer nozzle hits.
Standard: The point is within the range shown in the illustration.

Standard Cab

mm (in.)

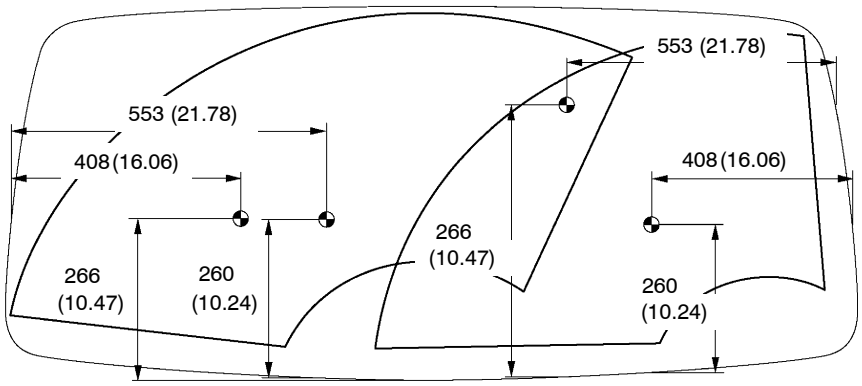

Wide Cab

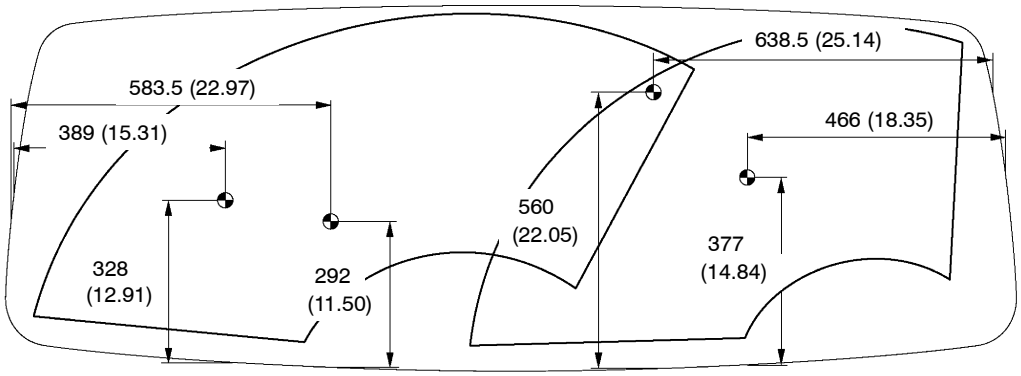

Y

B63437