FRONT NO.1 SPEAKER ASSY

670BS–02


REPLACEMENT

HINT:

- COMPONENTS: See page 67–1
- The installation is in the reverse order of the removal.

1. REMOVE FRONT DOOR TRIM BOARD SUB–ASSY LH (See page 75–5)

(a) Remove the door pull handle.
(b) Remove the front door inside handle sub–assy LH.
(c) Remove the door assist grip cover LH.
(d) Remove the door assist grip LH.
(e) Remove the front door trim board sub–assy LH.

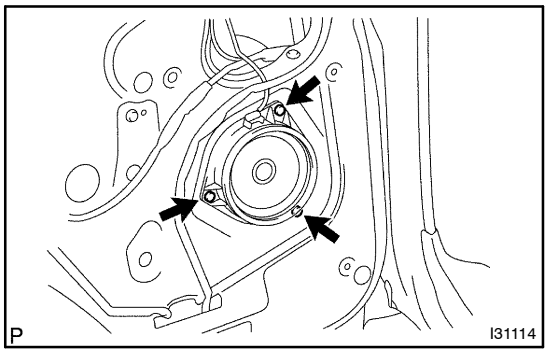

2. REMOVE FRONT NO.1 SPEAKER ASSY

(a) Remove the 3 screws.
(b) Disconnect the connector and remove the front No. 1 speaker.