CIGARETTE LIGHTER ASSY


670BU–03

REPLACEMENT

HINT:


The installation is in the reverse order of the removal. However, when there is a special point concerning the installation, it is indicated.

1. REMOVE INSTRUMENT CLUSTER FINISH PANEL SUB–ASSY CENTER
(See page 71–11 or 71–17)

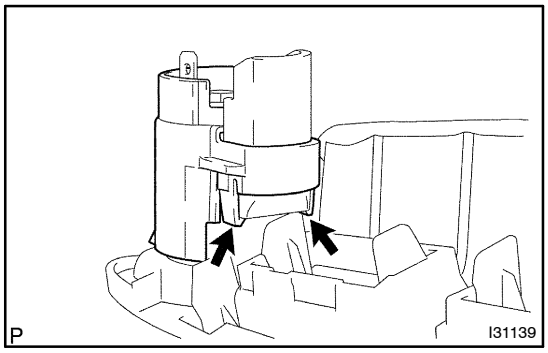

2. REMOVE CIGARETTE LIGHTER COVER

(a) Remove the cover.

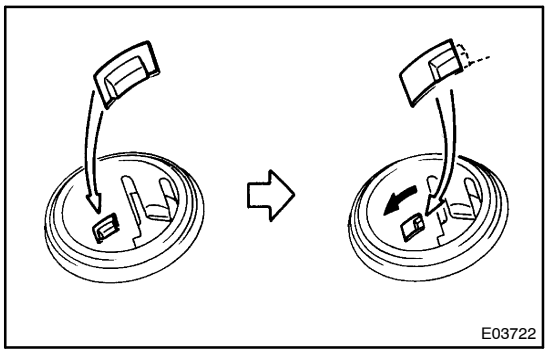

3. REMOVE CIGARETTE LIGHTER ASSY

(a) Turn the socket in the circumference direction as shown in the illustration, and disengage the claw between the socket and cigarette lighter indicator lens. Then, push out the socket to the room side but stop pushing halfway.

(b) Turn back the socket and align the socket with the notch on the cigarette lighter indicator lens. Then remove the cigarette lighter.

4. INSTALL CIGARETTE LIGHTER ASSY

(a) Align the socket with the notch on the cigarette lighter indicator lens, push in the cigarette lighter as hard as possible and install it.