
POWER SOURCE

LOCATION


6804M–01

Standard Cab except Standard Roof

*1: 15B–FTE
*2: Except 15B–FTE
*3: W04D–J

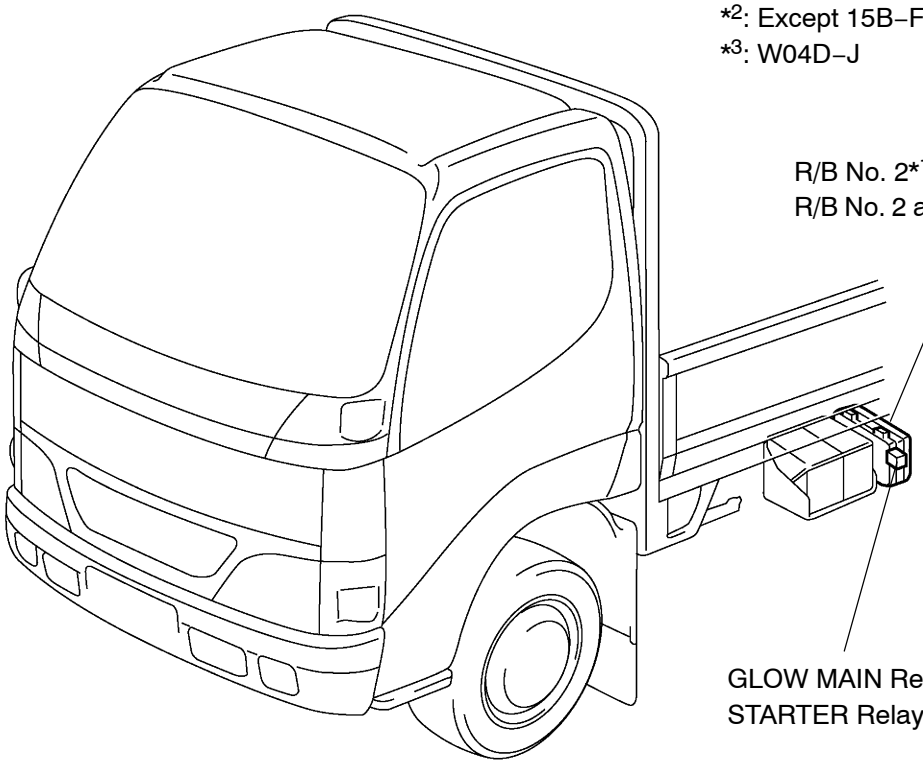

Standard Cab w/ Standard Roof

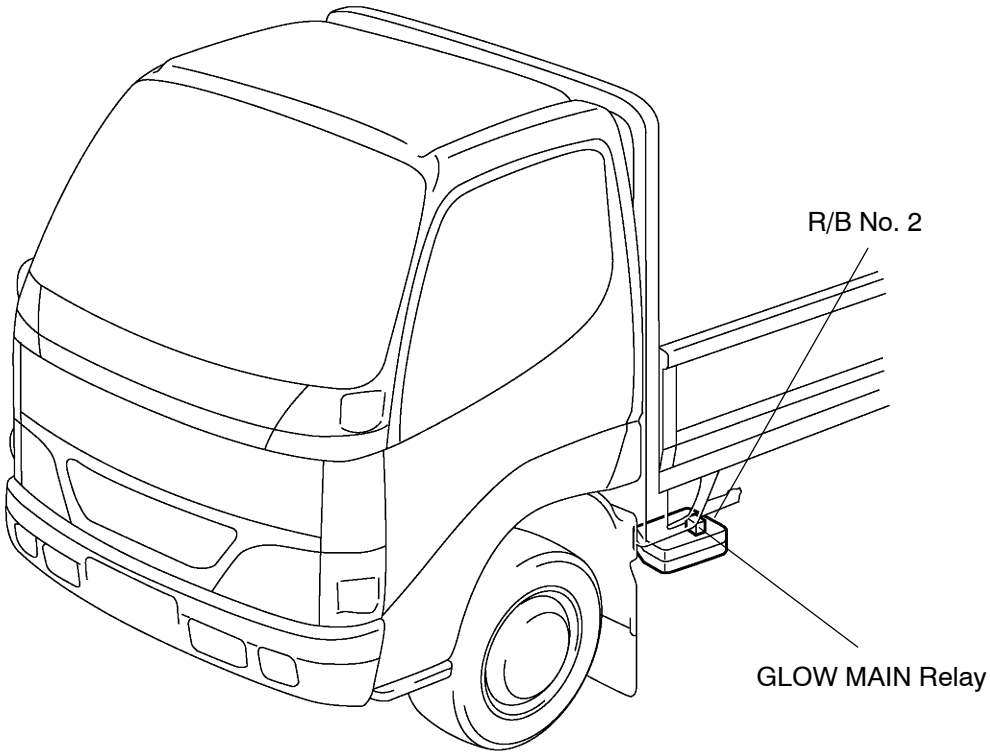


Y

I34787

Wide Cab


*1: S05C–TB
*2: Except S05C–TB

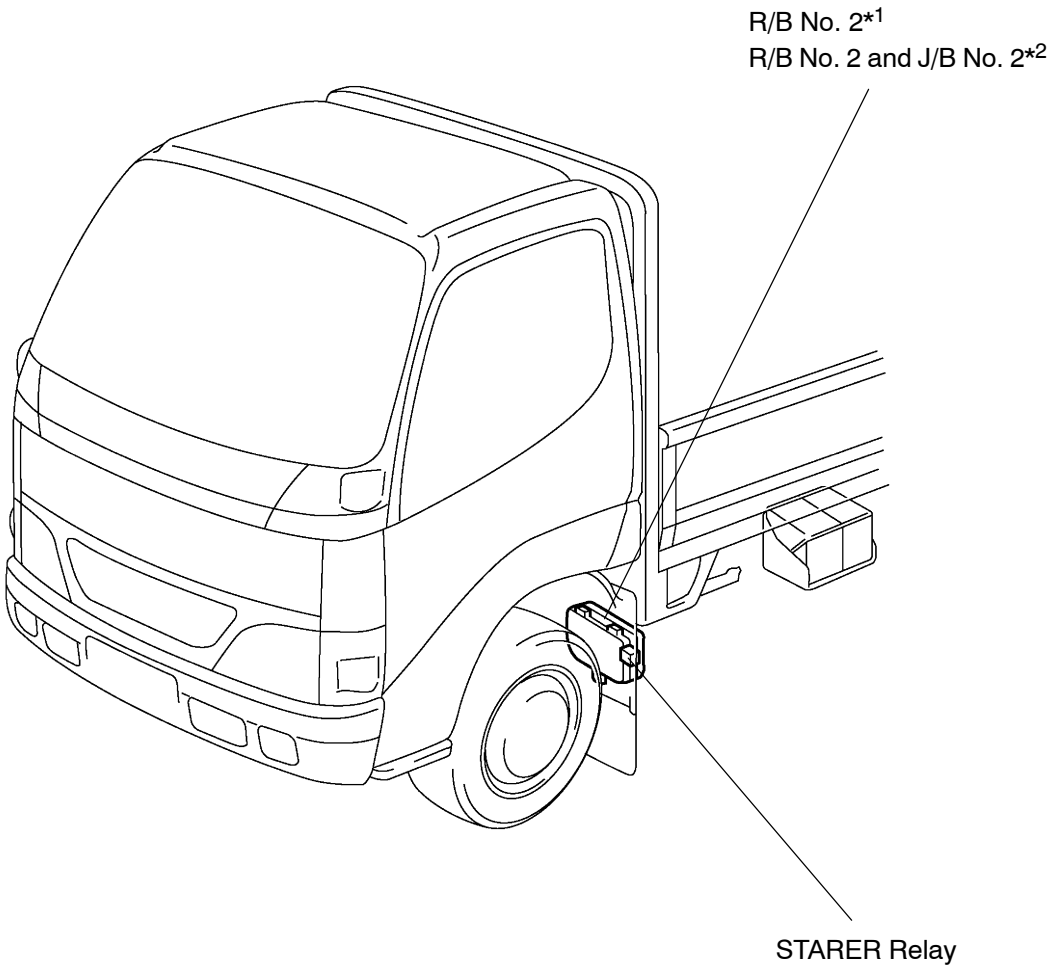


Y

I34788

LHD Models

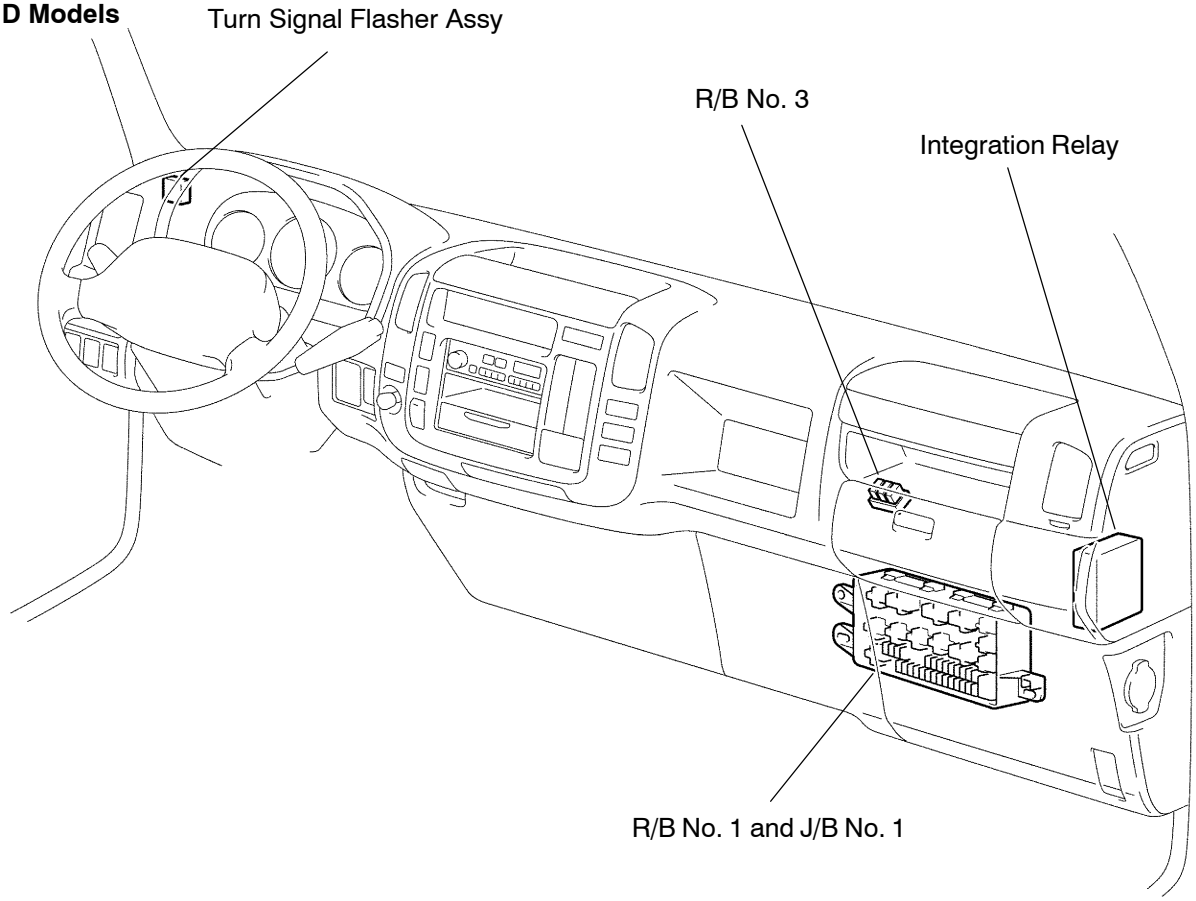

RHD Models

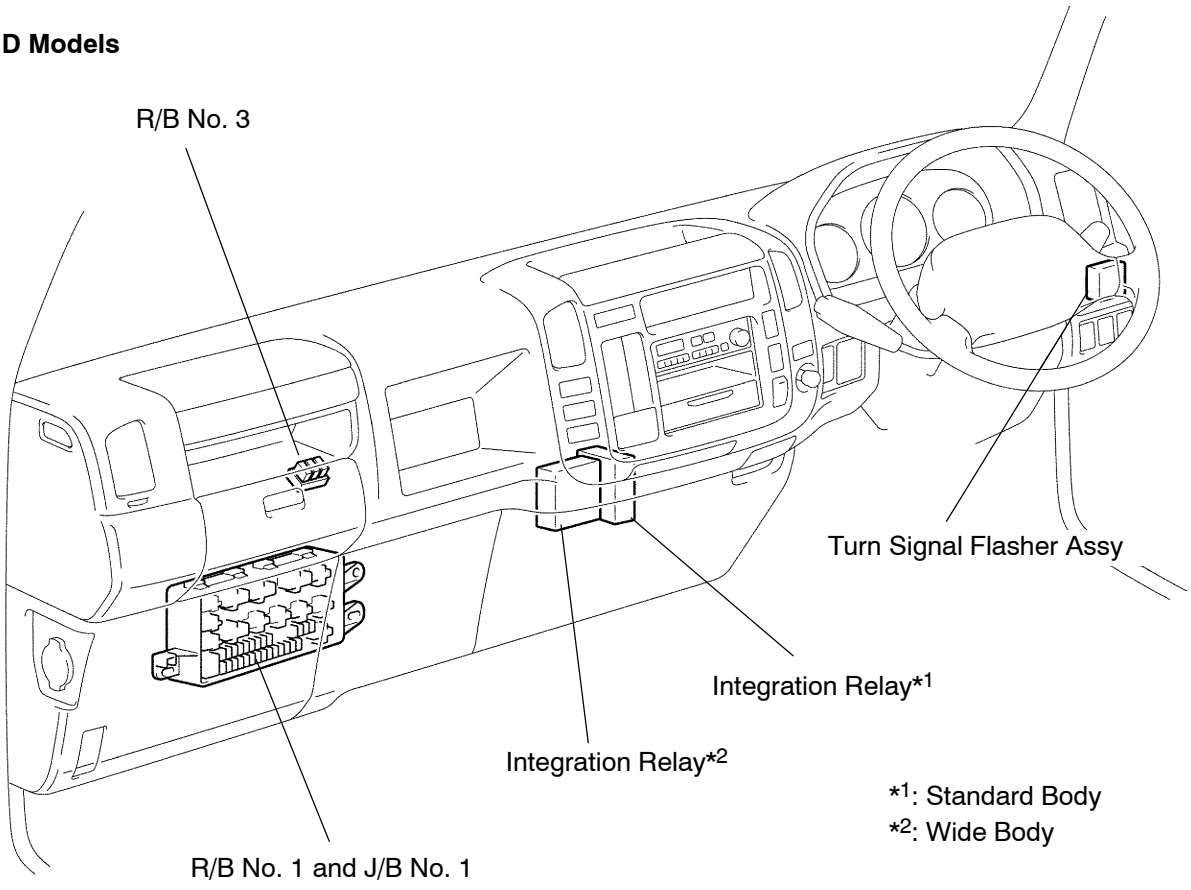


*1: Standard Body
*2: Wide Body

P

I34781

R/B No. 1 and J/B No. 1
14B, S05C–B, S05C–TA, W04D–J

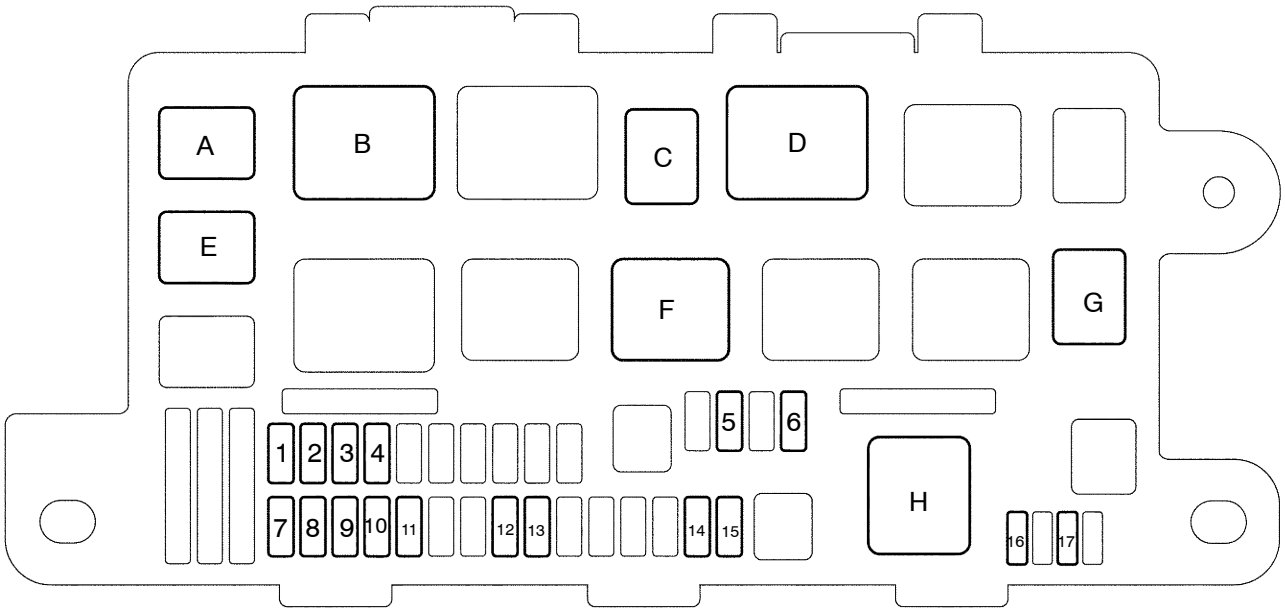

FUSE

1	HAZARD	10 A	11	WIP	20 A
2	HORN	10 A	12	HEAD (LH)	10 A
3	STOP	10 A	13	HEAD (RH)	10 A
4	A/C	10 A	14	P.T.O.	10 A
5	FOG	10 A	15	CIG	10 A
6	DOME	10 A	16	SPARE	20 A
7	ST	10 A	17	SPARE	10 A
8	TAIL	10 A			
9	RTD	10 A			
10	GAUGE	10 A			


RELAY

A GLOW LP
B HTR
C PKB
D H–LP
E HORN
F FOG
G NEUTRAL
H TAIL

P

I34796

R/B No. 1 and J/B No. 1
15B–FTE, S05C–TB

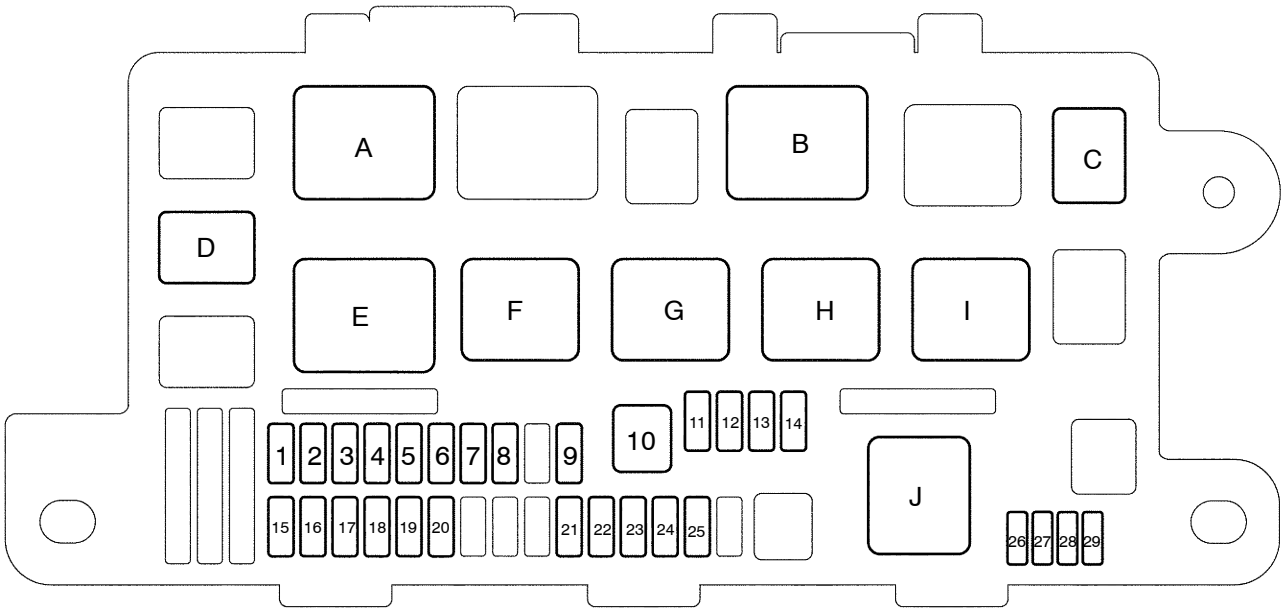

FUSE

1	CIG	10 A	11	P–BAT	15 A	21	HEAD (LH)	15 A
2	RADIO	7.5 A	12	FOG	15 A	22	HEAD (RH)	15 A
3	P–ACC	15 A	13	ECU+B	7.5 A	23	ECU–IG	10 A
4	AIR BAG	15 A	14	DOME	15 A	24	GAUGE	10 A
5	ECU–IG2	15 A	15	ST	7.5 A	25	P–IGN	15 A
6	WIP	20 A	16	HORN	10 A	26	SPARE	20 A
7	ESSTART	7.5 A	17	P–TAIL	10 A	27	SPARE	15 A
8	RTD	7.5 A	18	ILL	7.5 A	28	SPARE	10 A
9	A/C	10 A	19	TAIL	7.5 A	29	SPARE	7.5 A
10	POWER WINDOW	30 A	20	OBD–2	7.5 A			


RELAY

A HTR
B H–LP
C RR FOG (Europe)
D HORN
E IG1 – 2
F P/W MAIN
G FOG
H ACC
I IG1 – 3
J TAIL

P

I34795

R/B No. 2
15B–FTE, S05C–TB

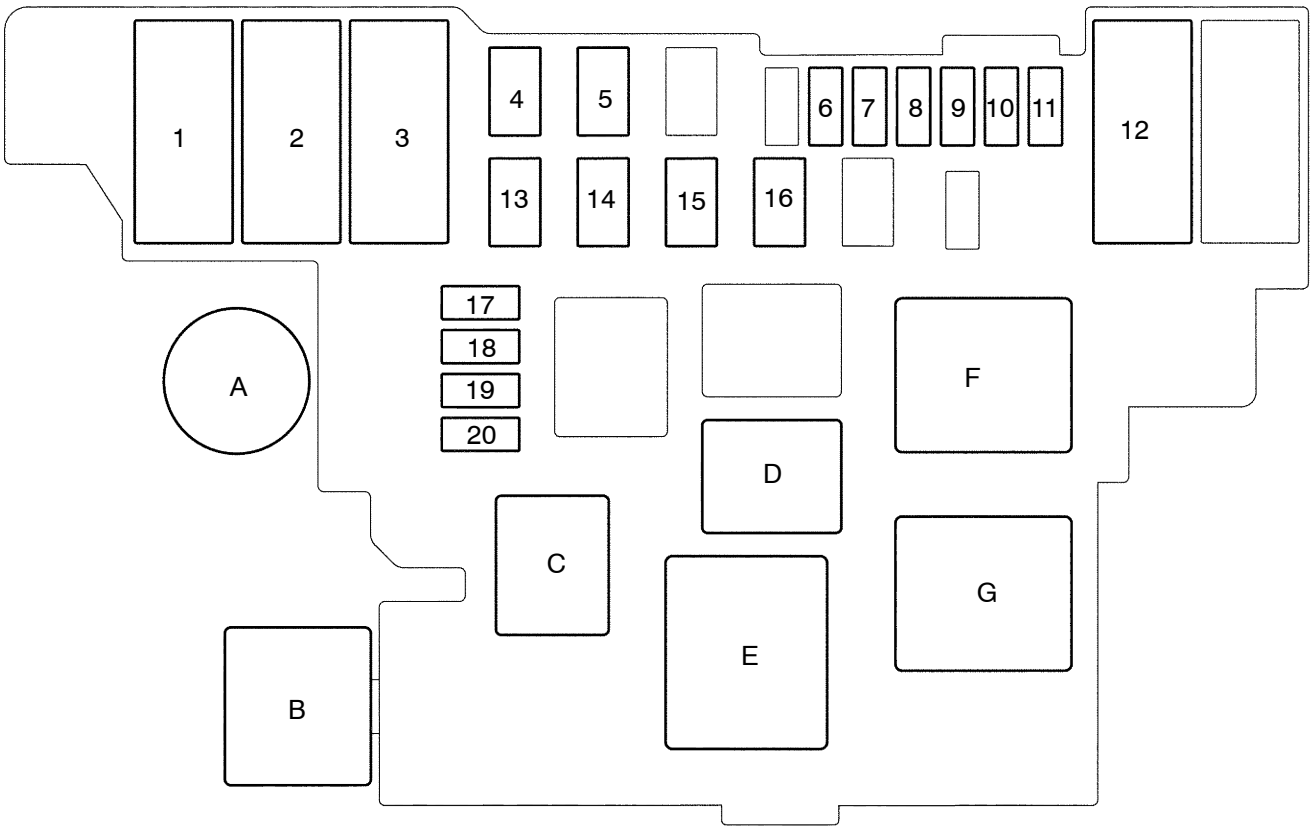

FUSE

1	MAIN3	60 A	11	IGN	15 A
2	MAIN2	60 A	12	GLOW	120 A*1
3	ALT	80 A			100 A*2
4	AM1	30 A	13	ABS	40 A
5	HEAD	50 A	14	HTR	40 A
6	E/G	15 A	15	E FAN	30 A
7	HAZARD	10 A	16	MAIN4	30 A
8	ALT–S	7.5 A	17	ABS SOL	20 A
9	AM2	20 A	18	PCV1*2	10 A
10	STOP	7.5 A	19	PCV2*2	10 A
			20	E/G SW*2	7.5 A

RELAY


A GLOW MAIN*1
STARTER*2
B STARTER*1
C SPL VLV*1
PCV*2
D MAIN
E ABS MTR MAIN
F IG2
G ABS SOL MAIN

*1: 15B–FTE
*2: S05C–TB

P

I34784

R/B No.2 and J/B No.2
14B, S05C–B, S05C–TA, W04D–J

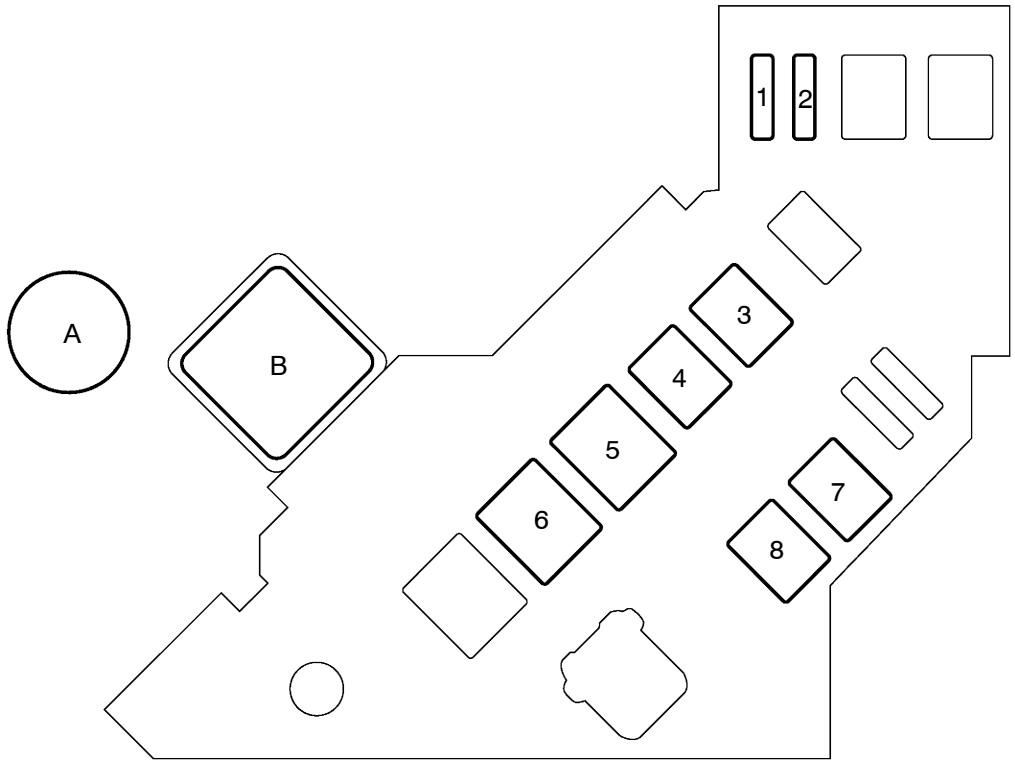

FUSE

1	ALT–S	10 A
2	AM2	10 A
3	AM1	30 A
4	HEAD	50 A
5	GLOW	100 A
6	ALT	80 A
7	MAIN	50 A
8	HTR	50 A

RELAY


A STARTER*1
B STARTER*2
GLOW MAIN*3

*1: S05C–B, S05C–TA and W04D–J
*2: 14B
*3 S05C–B and W04D–J

Y

I34789

R/B No. 3

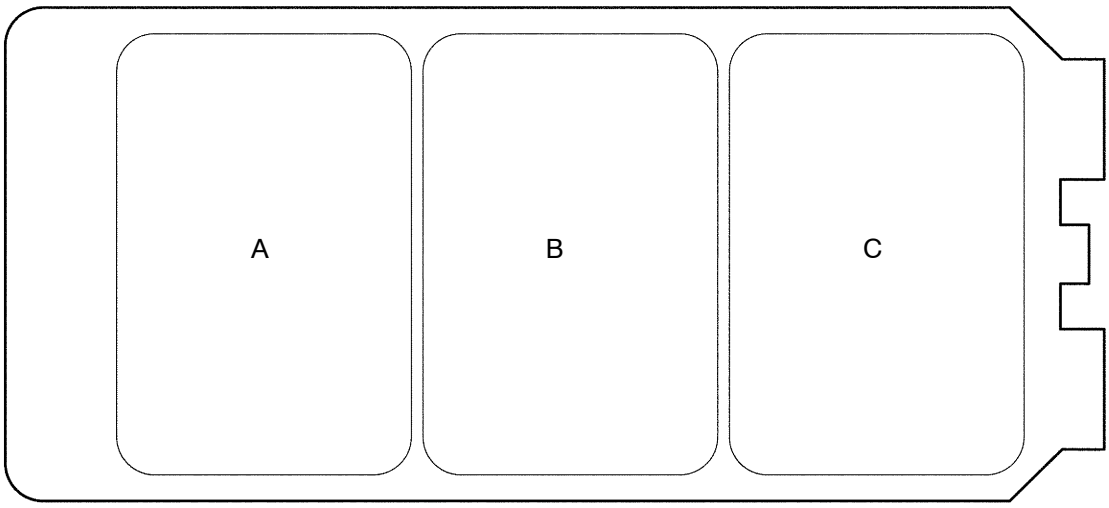

RELAY

A COMP
B FAN NO.2
C FAN NO.1

P

I31113