
HORN SYSTEM

INSPECTION

6903N–03

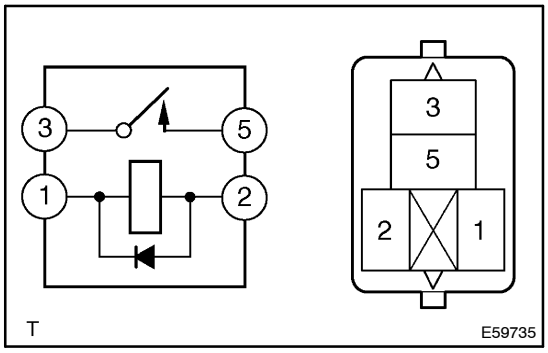

1. INSPECT HORN RELAY ASSY

(a) Inspect the relay continuity.

Standard:

Terminal No.	Tester Connection	Specified Condition
1 ⇔ 2	Constant	Continuity
3 ⇔ 5	Apply battery voltage to terminals 1 and 2*	Continuity

*: Apply battery positive to terminal 1 and battery negative to terminal 2.

If the result is not as specified, replace the relay assy.

2. INSPECT HORN

(a) Connect the positive (+) lead from the battery to the terminal and the negative (–) lead to the horn body, and then check that the horn blows.

If the result is not as specified, replace the horn.