
OUTER REAR VIEW MIRROR (AUSTRALIA, PORTUGAL)

700RE–01

REPLACEMENT

HINT:

- The installation is in the reverse order of the removal. However, when there is a special point concerning the installation, it is indicated.
- On the RH side, use the same procedures as on the LH side.

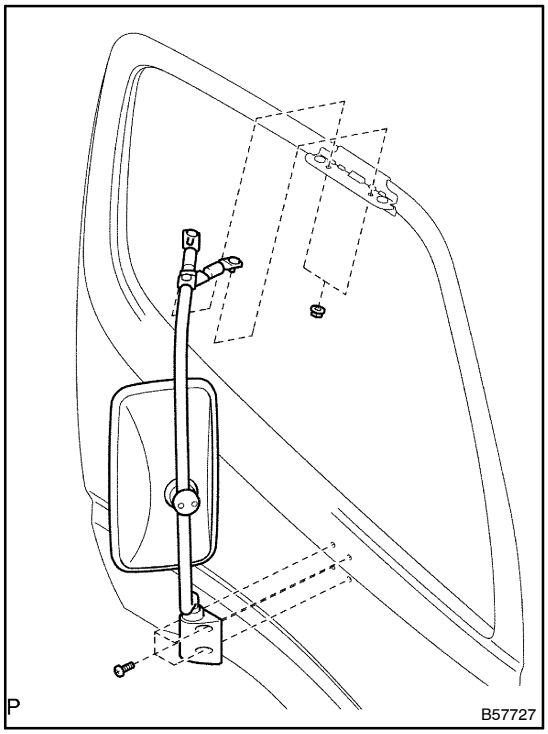


1. REMOVE OUTER REAR VIEW MIRROR ASSY

(a) Remove the 2 nuts.

(b) Using a torx driver (T30), remove the 4 screws and outer rear view mirror assy.

2. REMOVE OUTER REAR VIEW MIRROR

(a) Remove the 2 screws and outer rear view mirror.

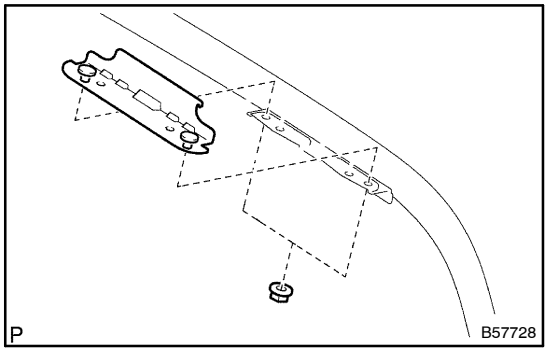

3. REMOVE OUTER REAR VIEW MIRROR RETAINER

(a) Remove the 2 screws and outer rear view mirror.

4. INSTALL OUTER REAR VIEW MIRROR RETAINER

(a) Install the outer rear view mirror retainer with the 2 nuts.
Torque: 20 N·m (204 kgf·m, 15 ft·lbf)

5. INSTALL OUTER REAR VIEW MIRROR ASSY

(a) Install the outer rear view mirror assy with the 4 screws and 2 nuts.
Torque:
Bolt: 20 N·m (204 kgf·m, 15 ft·lbf)
Screw: 11 N·m (112 kgf·m, 8 ft·lbf)

6. INSTALL OUTER REAR VIEW MIRROR COVER