
OUTER REAR VIEW MIRROR (EXCEPT AUSTRALIA, PORTUGAL)

700RF–01

REPLACEMENT

HINT:

- The installation is in the reverse order of the removal. However, when there is a special point concerning the installation, it is indicated.
- On the RH side, use the same procedures as on the LH side.

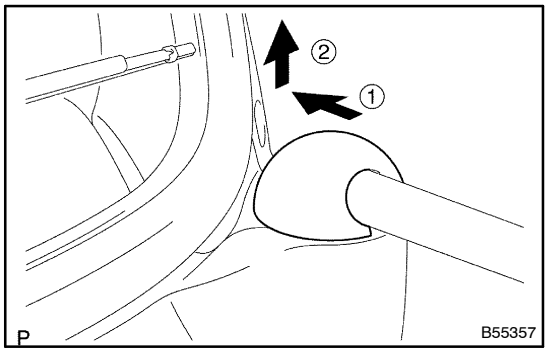


1. REMOVE OUTER REAR VIEW MIRROR

(a) Remove the outer rear view mirror assembly LH.

(1) Remove the clearance lamp lens & body LH (See page 65–25).


(2) Remove the outer mirror grommet as shown in the illustration.

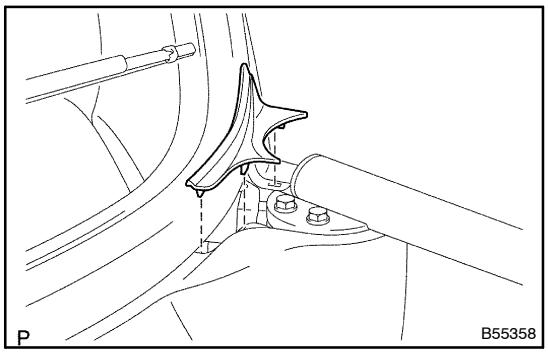

(3) Using a screwdriver, remove the outer mirror bezel.

HINT:


Tape the screwdriver tip before use.

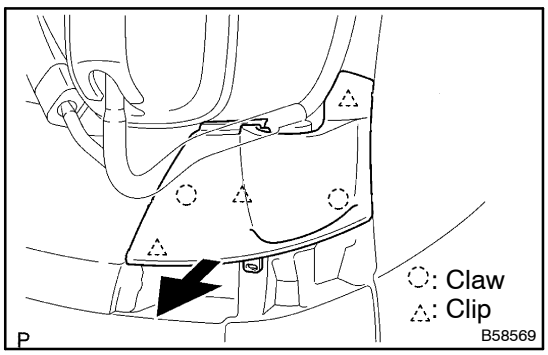

(4) Using a screwdriver, remove the outer mirror cover LH as shown in the illustration.


HINT:

Tape the screwdriver tip before use.

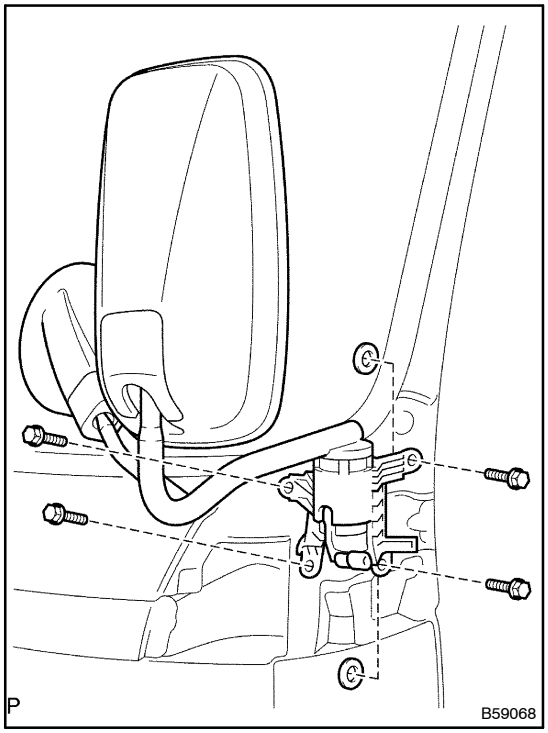

(5) Remove the 4 bolts and outer rear view mirror assy LH.

Torque: 23 N·m (235 kgf·m, 17 ft·lbf)

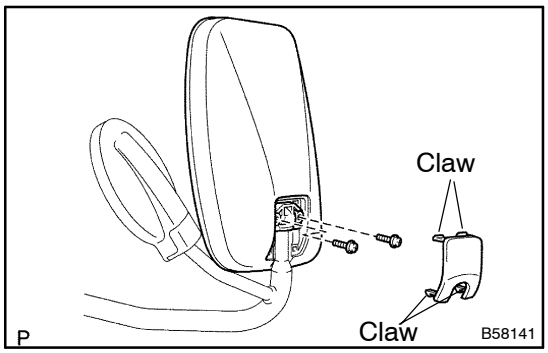


2. REMOVE OUTER REAR VIEW MIRROR ASSY LH

(a) Using a screwdriver, remove the outer rear view mirror cover.

HINT:

Tape the screwdriver tip before use.

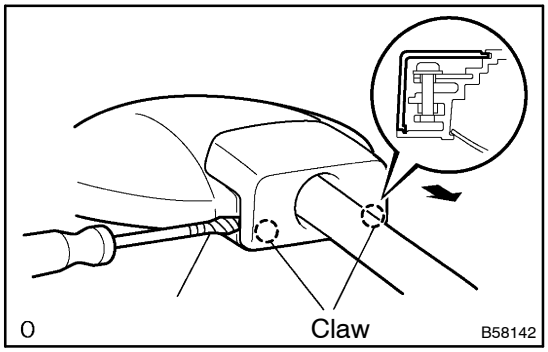

3. REMOVE OUTER UNDER VIEW MIRROR ASSEMBLY

(a) Using a screwdriver, remove the outer under view mirror cover as shown in the illustration.

HINT:

Tape the screwdriver tip before use.