710EW–01


OVERHAUL

HINT:

The installation is in the reverse order of the removal. However, when there is a special point concerning the installation, it is indicated.

1. REMOVE INSTRUMENT CLUSTER FINISH PANEL

2. REMOVE COMBINATION METER ASSEMBLY

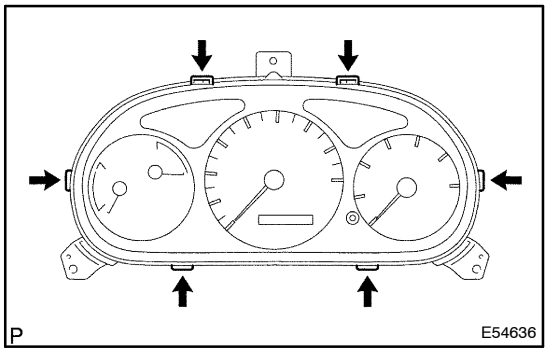


3. REMOVE COMBINATION METER GLASS

(a) Disengage the 6 claws and remove the meter glass.

4. REMOVE COMBINATION METER COVER NO.1


(a) Remove the meter cover.

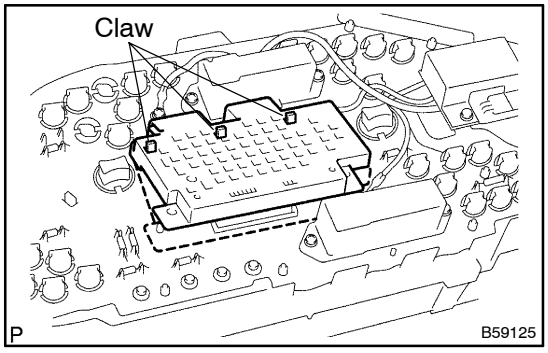

5. TOTAL COUNTER MODULE ECU


(a) Remove the 6 screws.

(b) Disengage the 3 claws and remove the ECU.

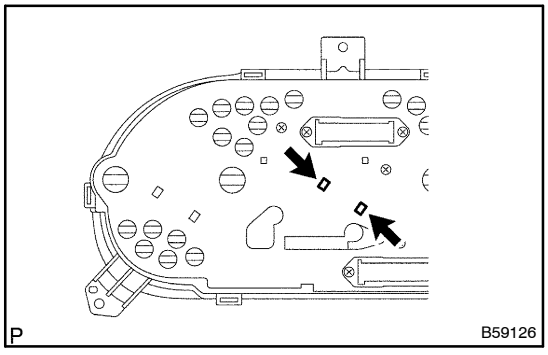


6. REMOVE SPEEDOMETER ASSY

(a) Disengage the 2 claws and remove the speedometer assy.

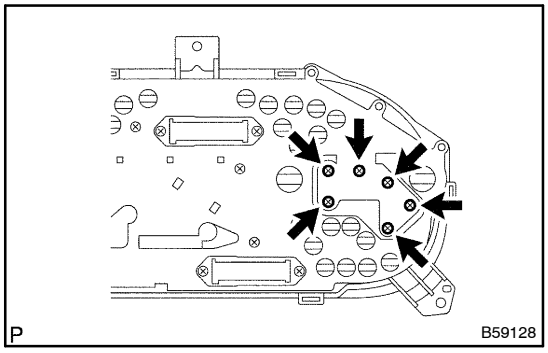

7. REMOVE FUEL RECEIVER GAUGE ASSY

(a) Remove the 6 screws and receiver gage.

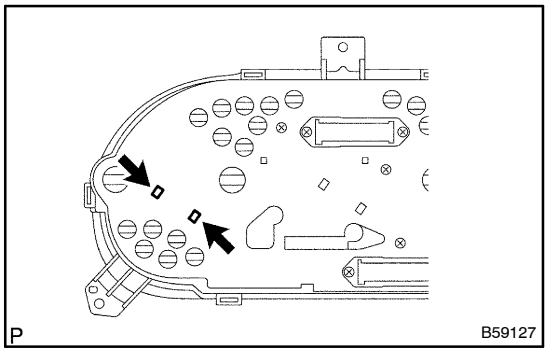

8. REMOVE ENGINE TACHOMETER ASSY

(a) Disengage the 2 claws and remove the tachometer.

9. REMOVE TRIP COUNTER KNOB

(a) Disengage the claw and remove the knob.

10. REMOVE COMBINATION METER BULB NO.1

(a) Remove the bulb.